

## ***PLEASE READ BEFORE INSTALLATION***

Familiarize yourself with the door and frame conditions prior to installation. The lock must rigidly mount to the underside of the frame header. The armature is designed to pivot slightly to compensate for reasonable misalignment.

Armature mounting hardware is supplied for a standard 1-3/4" thick door. For thicker doors order the following special armature hardware kits:

Part #300687 for 2" thick doors.  
Part #300688 for 2-1/4" thick doors.



### **HANDLING**

The Electromagnetic lock and armature are ruggedly constructed and designed to provide years of trouble-free service. Care must be taken during installation and use to keep the lock face and armature face free from dirt, rust, burrs, paint, or any other obstruction which may interfere with the lock and armature making good contact.

### **MAINTENANCE**

The lock assembly and door armature have been plated for maximum corrosion resistance. To ensure peak performance clean the lock and armature faces with a mild detergent and a clean, soft cloth, then apply a light coat of WD40 to protect these surfaces. This need only be done when dirt build-up is noticed.

### **GENERAL MOUNTING INFORMATION**

The illustrations below depict typical installations of the Model #2511 Lock on single-outswing doors. The lock assembly must be surface mounted to the underside of the frame header with the armature affixed to the inside face of the door as shown.

