

# FULL MORTISE SINGLE ACTING SPRING TEMPLATE HINGES


Template No. T  
Rev. '96

402



SIZE: 4 1/2 x 4 --- 4 1/2 x 4 1/2  
(114.30 x 101.60)

(114.30 x 114.30)

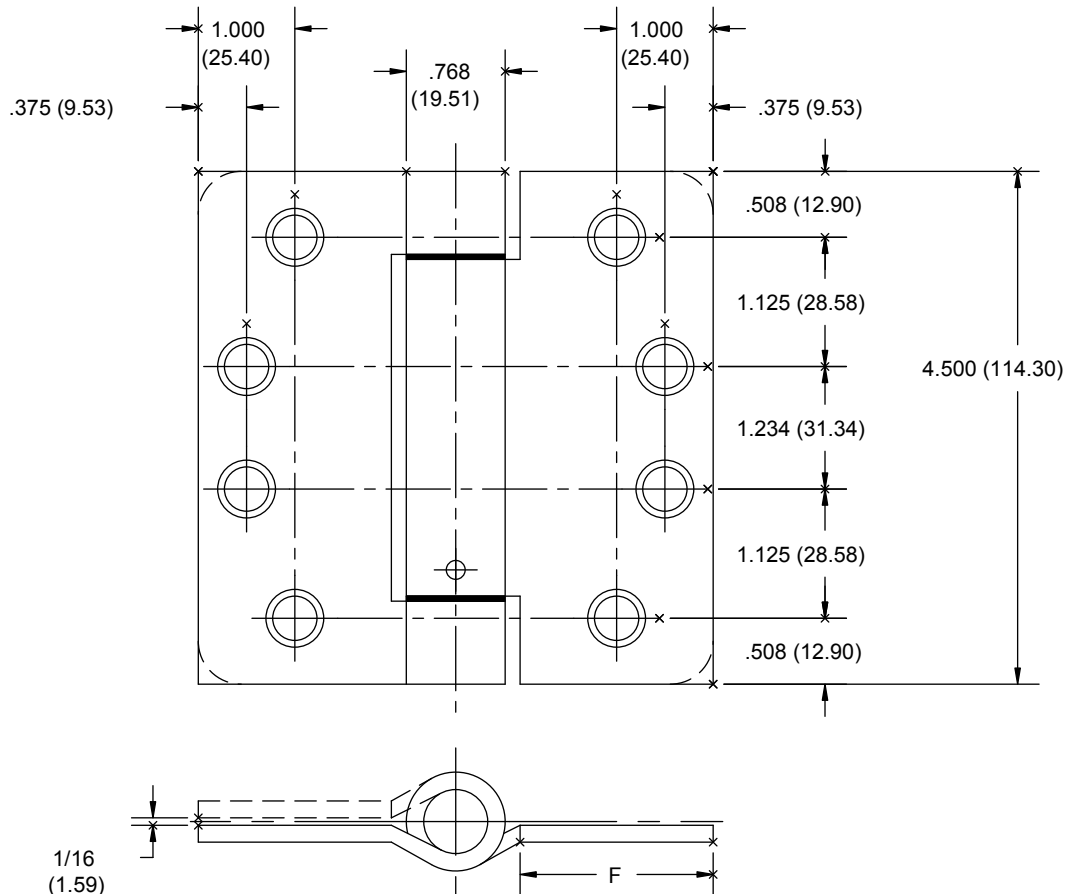

-DO NOT SCALE-

CATALOG NUMBER		TYPICAL CORNER RADII	METAL GAUGE	(F) DISTANCE FROM EDGE OF LEAF TO SWAGE LINE	
STEEL HINGES	NON- FERROUS HINGES			4 1/2 X 4 (114.30 X 101.60)	4 1/2 X 4 1/2 (114.30 X 114.30)
1250	1150	SQUARE	.134 (3.40)	1 9/16 (39.69)	1 13/16 (46.04)
1251	---	1/4 (6.35)	.134 (3.40)	1 9/16 (39.69)	1 13/16 (46.04)
1252	---	5/8 (15.88)	.134 (3.40)	1 9/16 (39.69)	1 13/16 (46.04)

ALL NON-BRACKETED DIMENSIONS ARE IN INCHES, ALL BRACKETED DIMENSIONS ARE IN MILLIMETERS.

Machine Screw Size- 12-24 x 1/2" F.H.

Wood Screw Size- No. 12 x 1 1/4" F.H.



Hager testing conforms to ANSI-A156.17.

Hager template hinges are made in size, gauge and with screw holes located to conform to ANSI-A156.7.

HAGER RESERVES THE RIGHT TO MAKE  
DESIGN CHANGES WITHOUT NOTICE. CALL  
HAGER ENGINEERING AT 1-800-325-9995  
FOR LATEST REVISION DATE OF TEMPLATE.

**HAGER COMPANIES**  
139 VICTOR STREET  
P.O. BOX 12300  
ST. LOUIS, MISSOURI 63157-0300

Template No. T  
402



All steps must be followed to insure that the Hager Spring Hinge will function as designed.

### INSTALLATION INSTRUCTIONS:

1. Install bearing hinge at top with spring hinges at center and bottom. There should be at least 1/4" (6mm) clearance at the bottom of the door for vacuum relief.
2. Open the door by hand to 90° angle, and push it closed. If the door latches, the hinges are ready to receive tension. If there is any resistance and the door does not latch, this indicates that the door is either out of balance or misaligned. This condition will have to be corrected before tension can be applied to the spring hinges.
3. Door weight should not exceed the recommended requirements. This includes all hardware and veneer.

### SPRING HINGE ADJUSTMENT INSTRUCTIONS:

1. Install spring hinges in normal manner and oriented for right hand or left hand door.
2. Place door in closed position.
3. Insert Hex wrench in hex hole (Figure #1).
4. Rotate Hex wrench clockwise (while viewing from the adjustment end of hinge) to increase tension (Figure #2), and insert locking pin loosely in adjusting hole.
5. Release Hex wrench until locking pin contacts side of adjusting hole.
6. Remove Hex wrench and check the door closing force.
7. If closing force is not satisfactory, repeat steps 2 thru 6.


CAUTION #1: Use proper safety protection while installing the Hager Spring Hinge.

CAUTION #2: Door should be in closed position.

CAUTION #3: Do not adjust tension past three (3) holes when a 180° opening is required. Do not adjust tension past four (4) holes when a 90° opening is required.

CAUTION #4: On 3-1/2" x 3-1/2" – 1250 Series – maintain mortise depth at 0.119" (3mm).

CAUTION #5: Do not force.

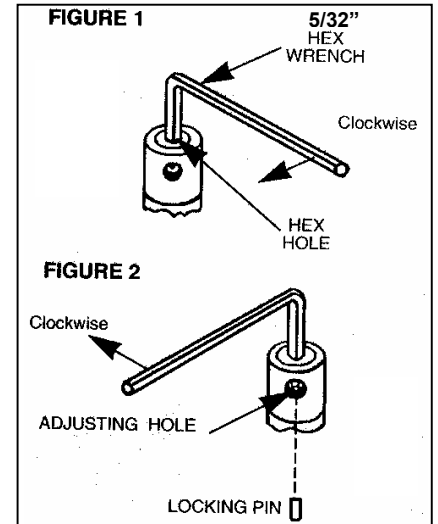

**NOTE:** Figure 1 & 2 views shown from the adjustment end of hinge.

#### 1150/1250 SERIES

SIZE	RECOMMENDED MAX. DOOR WEIGHT (LBS.)	BEARING HINGE	SPRING HINGE LOCATION
3-1/2" x 3-1/2"	60	2	1 CENTER
4" x 4"	85	1	2 CENTER/BOTTOM
	110	-	3 ALL
4-1/2" x 4"	70	2	1 CENTER
4-1/2" x 4-1/2"	115	1	2 CENTER/BOTTOM
	150	-	3 ALL

#### 1750 SERIES

SIZE	RECOMMENDED MAX. DOOR WEIGHT (LBS.)	BEARING HINGE	SPRING HINGE LOCATION
3-1/2" x 3-1/2"	45	2	1 CENTER
4" x 4"	70	1	2 CENTER/BOTTOM
	90	-	3 ALL

Conforms to standards approved by ANSI A 156.17.