

PS-900 Series Option Boards




Installation Instructions

A DANGER A


To avoid risk of electric shock, turn off AC power to power supply before installing or wiring option board


This sheet covers:

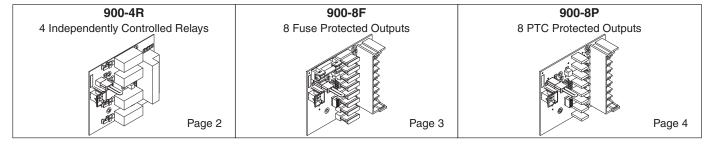

Refer to installation instructions for compatible supply models - PS902, PS904, PS906, and PS914.

1 INSTALL OPTION BOARD(S) INTO POWER SUPPLY

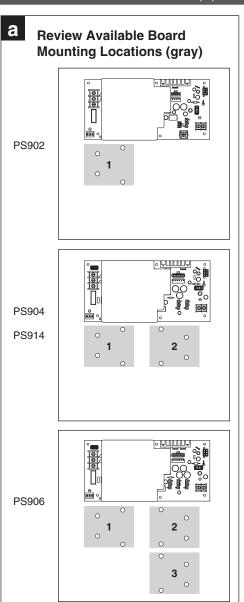

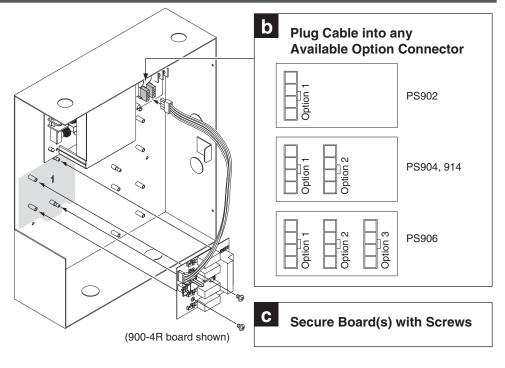

Customer Service

1-877-671-7011


www.allegion.com

900-8F

900-8F Specifications

Each Output	• Rated for supply maximum • 12/24VDC when AC powered • 9.6-13.2VDC or 19.2-26.4VDC when battery powered • Maximum load cannot exceed power supply ratings or 6A for outputs combined		
Board Input Power	Board requires 0.045A max. of power supply output current to operate		
Temperature Range	32°-120° F (0°- 49° C)		
Compliance	UL 294, ULC-S318, RoHS, & FCC Part 15		
Fire Alarm Input	Accepts 900-FA Fire Alarm Board (Optional)		
F1 - F8	32V, 7.5A, ATO blade style	ACAUTION:	
F9 Main Fuse	300V, 15A, 3AG style	For protection against risk of fire, replace fuse with same type and rating	

Function: Provides 8 independently-fused outputs.

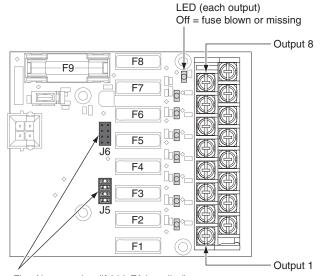

- Fire Alarm setting (if 900-FA installed)

 Jumper on J5: Active fire alarm turns off all outputs
- Jumper on J6: Active fire alarm turns off outputs 1-4 only

Refer to Wire Table (page 4)

Note:

Fail secure output only allowed if approved by Authority Having Jurisdiction

		Ð	GND
08		₽)	GND
07		₩ ₽)	GND
06	(4)	$\stackrel{\sim}{=}$	
05		(4)	GND
0.4		Ð)	GND
04	HH(-	争)	GND
03		₩ ₩	GND
02		$\stackrel{\circ}{=}$	
01		<u>Đ)</u>	GND

Terminals




900-FA Fire Alarm Input



44487072

Installation Instructions

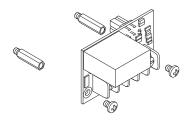


The 900-FA Fire Alarm board can be installed on any one of the following power supply or option boards (refer to installation instructions):


Input (Fire Alarm)	Dry contacts required (Closed = no fire alarm) Connect control contacts between FA1 and FA2		
Output (Supervision)	30VDC, 1A resistive dry contact		
Board Input Power	Board requires 0.05A max. of power supply output current to operate		
Temperature Range	32°-120° F (0°- 49° C)		
Compliance	UL 294, ULC-S318, RoHS, & FCC Part 15		

WARNING

 
To avoid risk of electric shock, turn off AC power to power supply before installing or wiring 900-FA board. In the event a fire alarm is active, this board will remove power from the PS902 DC output and any 900-series option board output.

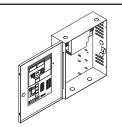







900 2RS (2 relay)

 


900-2Q (2 Relay w/com)

 

900-4R (4 Relay)

 

900-4RL (4 Relay w/logic)

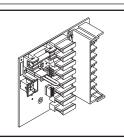


900-8F (8 Zone, Distribution-fuse) 900-8P (8 Zone, Distribution-PTC)

- If 900-FA was factory installed, go to step 2
- If installing to option board, go to 1a
- If installing to PS902 main board, go to 1b


1a If installing to option board

Choose Option Board where 900-FA is to be Installed

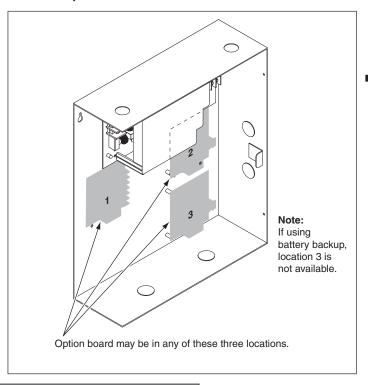


Customer Service
1-877-671-7011 www.allegion.com

Remove Jumper from Option Board

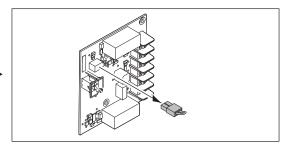


Install 900-FA to Option Board




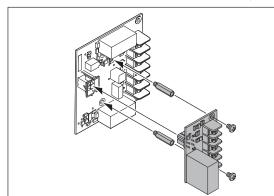

1b If installing to PS902 main board

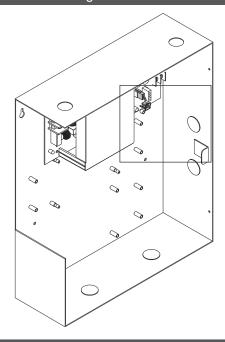

Remove Jumper

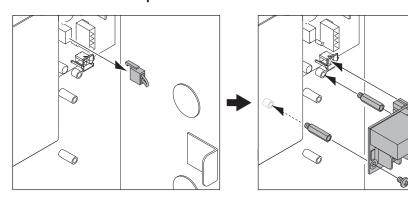


Note: Complete power failure shall result in a fail safe operation.

When connected to a fire alarm releasing control unit, total loss of power for the locking mechanisms shall be configured for a fail safe operation.

2 900-FA wiring


Terminal Definitions

 Automatic Reset




Note: Use 18 gauge wire for all wiring. Wire length dependent on physical layout.

 One 900-FA Board - Automatic Reset




Two 900-FA Boards on one power supply

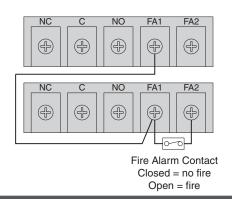


One 900-FA Board - Manual Reset

Install 900-FA Here

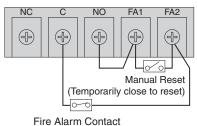

Fire Alarm Contact Closed = no fire Open = fire

Two 900-FA Boards on two power supplies Automatic Reset

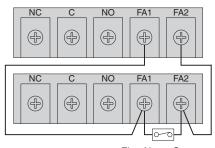

Fire Alarm Contact Closed = no fire Open = fire

NOTE: WHEN INSTALLATION IS COMPLETE, SECURE ENCLOSURE DOOR WITH SCREWS OR KEYLOCK

