



44487056

Power Supply

PS914





VON DUPRIN®

Installation Instructions




To avoid risk of electric shock, turn off AC power before installing or servicing PS914 power supply

These instructions cover the following parts:

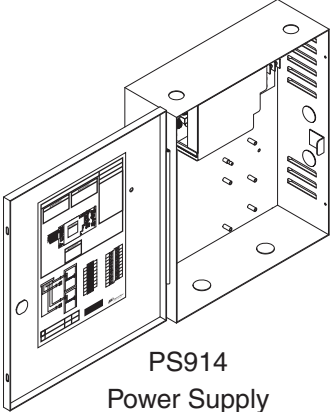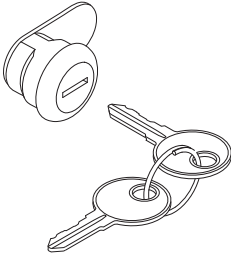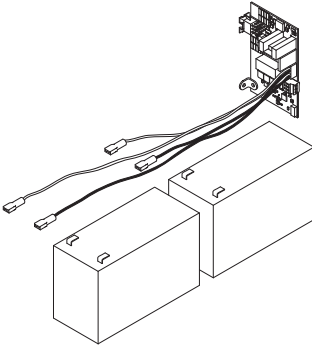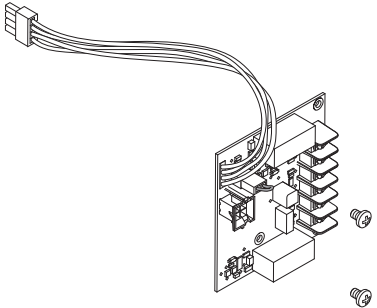 <p>PS914 Power Supply Pages 1-3</p>	 <p>900-KL Keylock (optional) Page 2</p>	 <p>900-BB Battery Backup (optional) Page 3</p>	 <p>900-2RS (optional) - Page 4 (2 Zone EL Control - Individual/Sequential)</p>
--	---	---	--

PS914 Power Supply Specifications:

Input	120/240 VAC, 1.4 A, 50/60Hz, High Voltage Class 1 Wiring Required	
Output	4 Amp DC @ 12/24 VDC May be used to power Von Duprin & Falcon EL device at 24VDC, 16A, 300ms	
Enclosure	14" H x 12" W x 4" D (8 knockouts, 1/2" or 3/4")	
Temperature Range	32°-120° F (0°- 49° C)	
Fuse	F1, T6.3A 250 VAC	 For protection against risk of fire, replace fuse with same type and rating
Compliance	UL 294, ULC-S318, RoHS, & FCC Part 15, Class 2 Output	
Compatible Boards (Optional, 2 boards maximum)	900-2RS	INST. INSTRUCTIONS - 44487056
	900-2Q	INST. INSTRUCTIONS - 44487098
	900-4R	INST. INSTRUCTIONS - 44487106
	900-4RL	INST. INSTRUCTIONS - 44487080
	900-8F	INST. INSTRUCTIONS - 44487106
	900-8P	INST. INSTRUCTIONS - 44487106
Fire Alarm Input Board (Optional)	900-FA (Requires one option board above)	INST. INSTRUCTIONS - 44487072
Battery Backup Board (Optional)	900-BB	INST. INSTRUCTIONS - 44487064
AC Monitor Output	Form C Contacts, 30 VDC, 1 Amp, Resistive Load	

900-2RS Specifications:

Inputs i1 , i2	Dry contacts required (Closed = Active) Connect control contacts between SC (Signal Common) and any input
Outputs o1 , o2	• 12/24VDC, 3A (wet) when AC powered • 9.6-13.2VDC or 19.2-26.4VDC when battery powered • May be used with PS914 to power EL device at 24VDC, 16A, 300ms • Maximum load cannot exceed power supply ratings or 3A for outputs combined
Board Input Power	Board requires 0.1A max. of power supply output current to operate
Temperature Range	32°-120° F (0°- 49° C)
Compliance	UL 294, ULC-S318, RoHS, & FCC Part 15
Fire Alarm Input	Accepts 900-FA Fire Alarm Board (Optional)

Mounting notes

The PS914 must be installed in accordance with the article 760 of the National Electrical Code or NFPA 72, Canadian Electrical Code, or any other applicable codes.


Install the PS914 indoors within the protected premises.

Check national and local codes for additional installation requirements.


Enclosure must be firmly mounted to a solid surface using hardware suitable for the surface.

1 Mount power supply

1a Mark 2 Top Holes

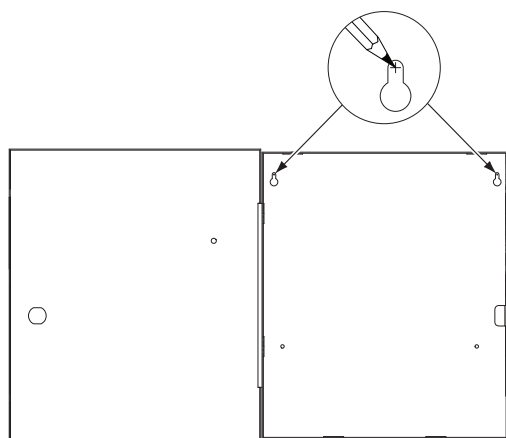


1b Secure Enclosure with 4 Screws

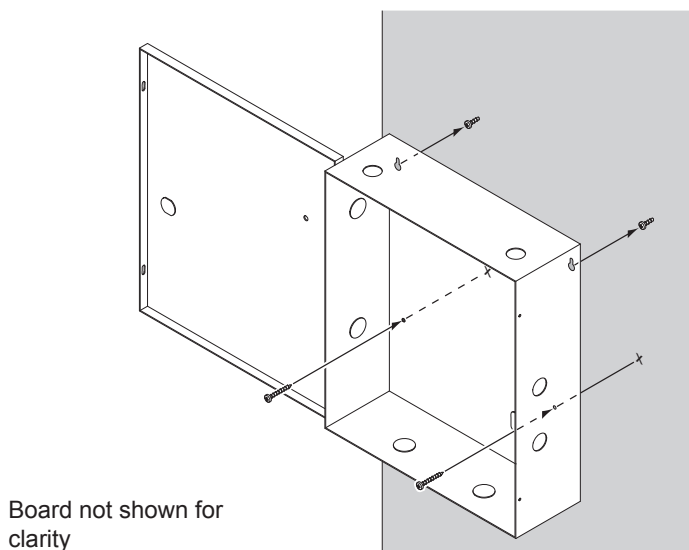

2 Secure enclosure door

If No Keylock


Enclosure will be secured with 2 screws as shown (done as last step)

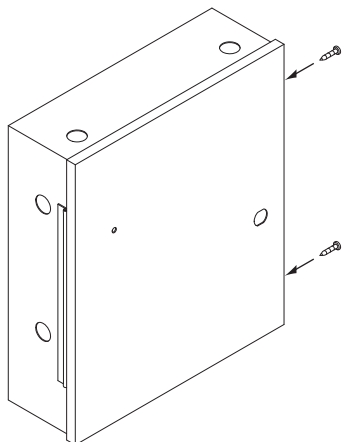

OR


If Keylock

Remove knockout and insert key cylinder, then slide in clip

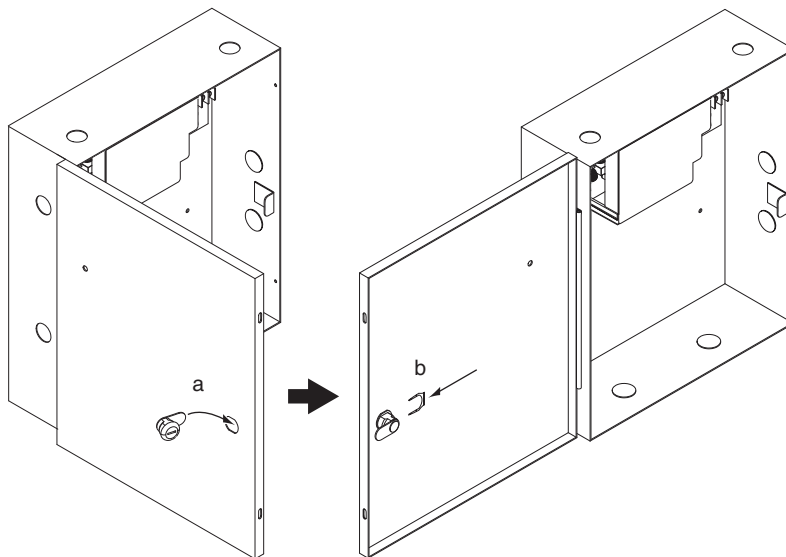


3 PS914 setup and testing


3a Connect AC Wiring

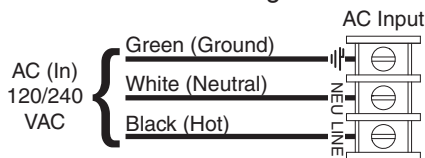

3b Use Jumper to Select 24 VDC or 12 VDC Output

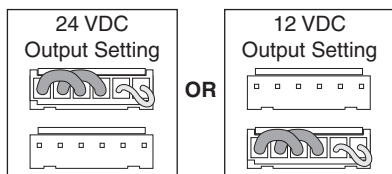

Note: Minimum of 1/4" separation between AC and DC wiring as well as power limited and non-power limited.

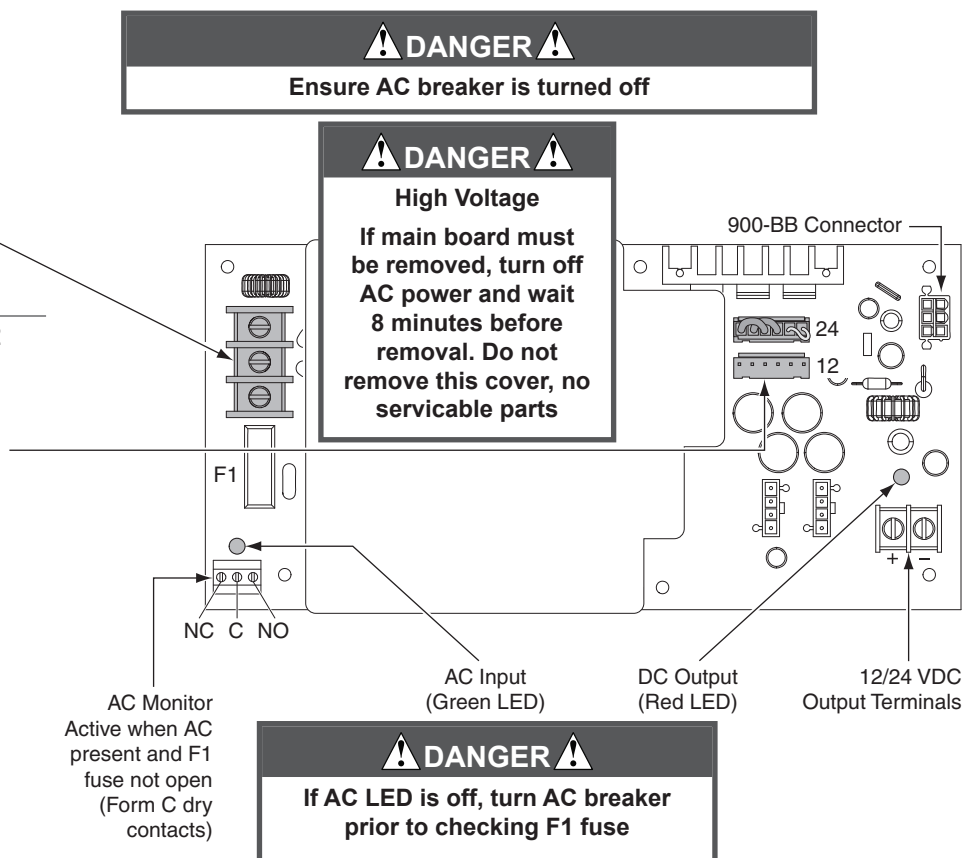

4 Install 900-BB battery backup (if included)


Refer to 900-BB instructions for additional info

1a Place Batteries in Box with Terminals to the Left

1b Attach Wires from Battery Board

Red wires = (+)
Black wires = (-)

Note: Allow 24 hours for batteries to fully charge


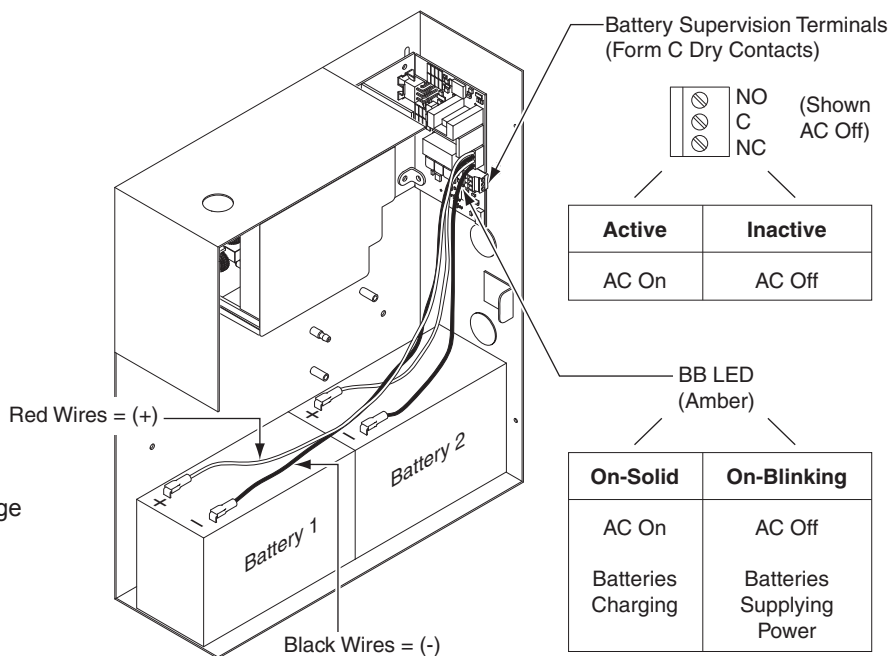


5 Turn on AC breaker to test power supply

- Verify AC LED is On = GREEN
- Verify DC LED is On = RED
- Verify BB LED (if applicable) is On = AMBER


6 Install 900-2rs option board (if required)

6a Use Jumper to Select Function

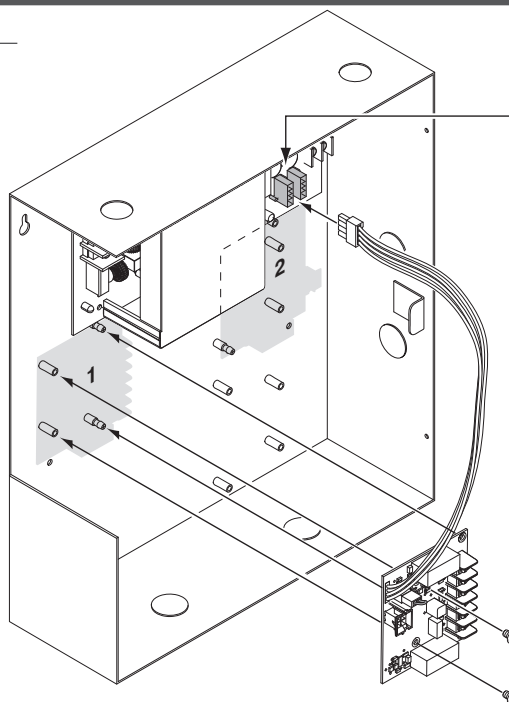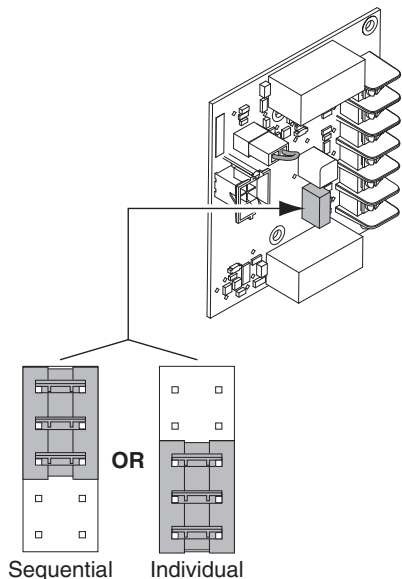

DANGER
Ensure AC breaker is turned off when installing or wiring option boards

6b Plug 2RS Cable into any Available Option Connector

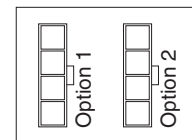


6c Secure Board with Screws

Note: 24VDC output setting required when EL device connected


If installing board in location 2, rotate board 180°

7 Connect wiring to 900-2rs option board

Individual Mode - Typical Wiring

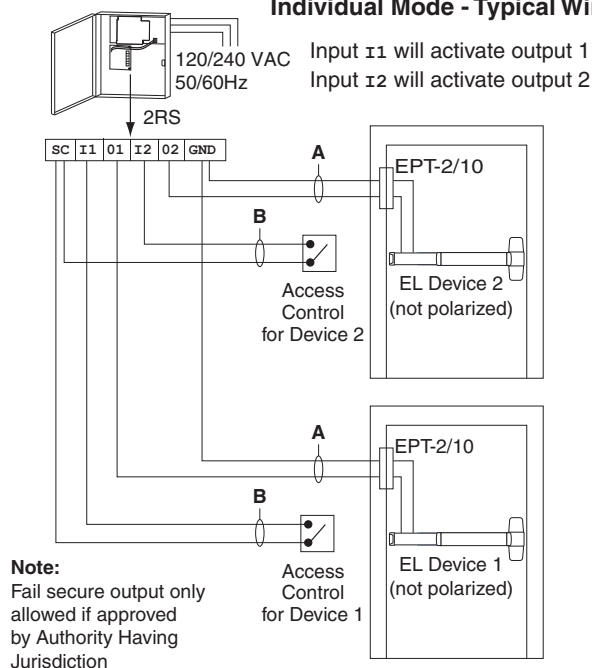

Sequential Mode - Typical Wiring

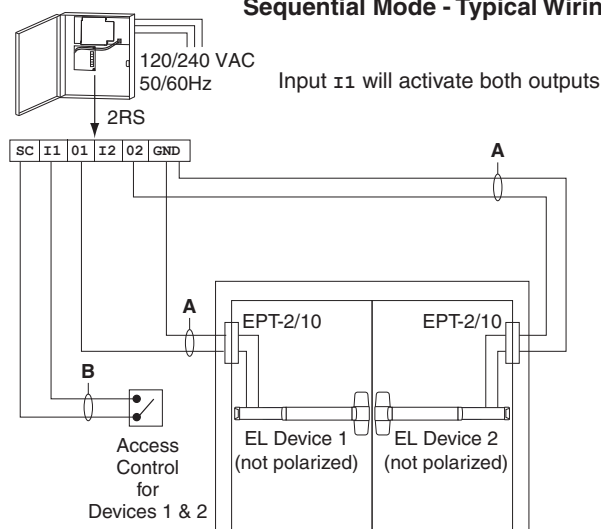

Wire table (suggested maximum)

Wire Ga (AWG)	Device Current (Amps DC)	Output* (max. ft)	Input (max. ft)
14	0.3	850	
	0.5	500	
18	0.3	340	1200
	0.5	200	
12	Using EL device with EPT or Door Loop (PS914 required)	200	
14		100	
12	Using EL device with Electric Hinge/Pivot (PS914 required)	150	
14		75	

*Wiring allows for 10% voltage drop at device current at 12 or 24VDC

Max. ft = one way distance between power supply and device

8 IF PS-914 has other option boards, see their instructions

NOTE: WHEN INSTALLATION IS COMPLETE, SECURE ENCLOSURE DOOR WITH SCREWS OR KEYLOCK

Customer Service

1-877-671-7011

www.allegion.com/us



© Allegion 2014
Printed in U.S.A.
44487056 Rev. 01/14-b



44487080

900-4RL Option Board



Installation Instructions

**DANGER**

To avoid risk of electric shock, turn off AC power to power supply before installing or wiring option board.


900-4RL Specifications

Inputs I1-I4	Dry contacts required (Closed = Active)
Outputs O1-O4	Connect control contacts between SC (Signal Common) and any input • Form C contacts rated 30VDC, 3A (Dry) • 12/24VDC, 3A (Wet) when AC powered • 9.6-13.2VDC or 19.2-26.4VDC when battery powered • May be used with PS914 to power EL device at 24VDC, 16A, 300ms • Maximum load cannot exceed power supply ratings or 6A for outputs combined
Board Input Power	Board requires 0.18A max. of power supply output current to operate
Temperature Range	32°-120°F (0°- 49° C)
Compliance	UL 294, ULC-S318, RoHS, & FCC Part 15
Fire Alarm Input	Accepts 900-FA Fire Alarm Board (Optional)

1 Install 4RL Board(S) into Power Supply


1a Review Available 900-4RL Mounting Locations (Gray)

PS902

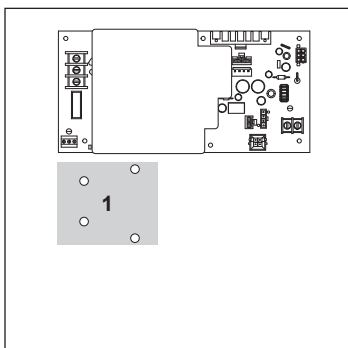


PS904


PS914

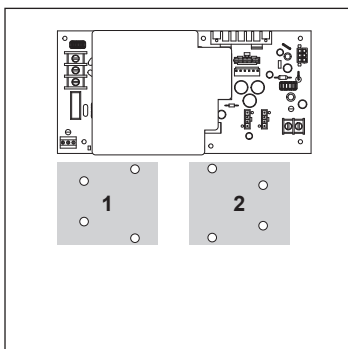


PS906

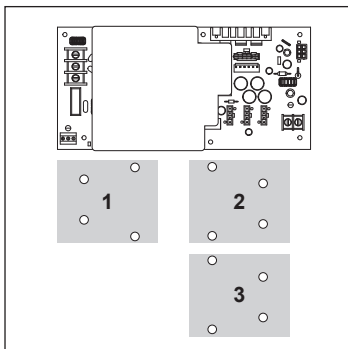


Refer to installation instructions for compatible supply models - PS902, PS904, PS906, and PS914.

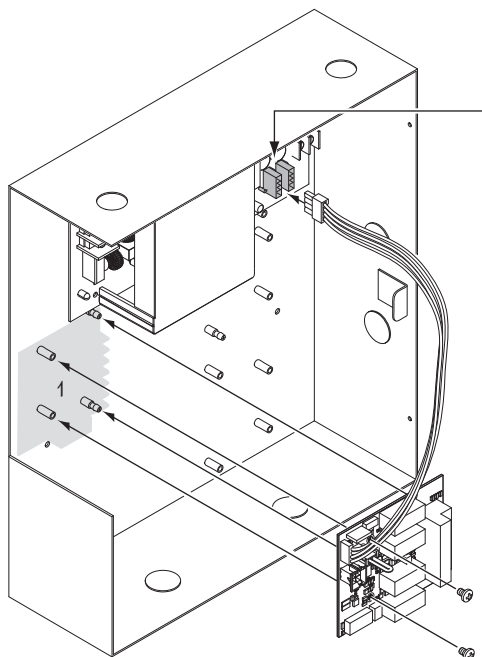


1b Plug 4RL Cable into any Available Option Connector

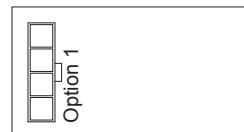

PS902

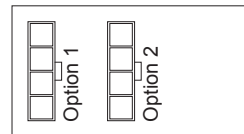

PS904, 914

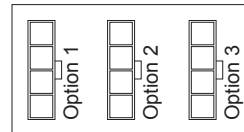


PS906

1c Secure Board(s) with Screws


NOTE

For UL listed installations, use only UL listed locks and strikes

2 Choose Function of 900-4RI Board by Setting SW2 Dip Switches

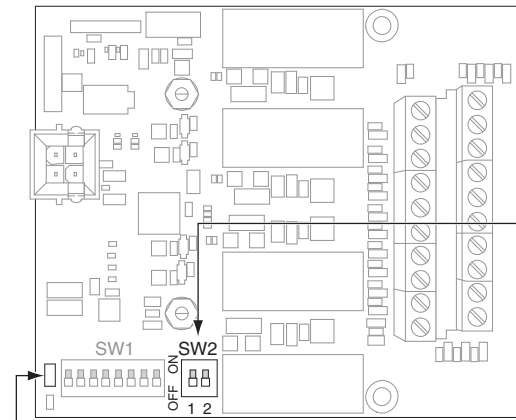


Function LED (D17)

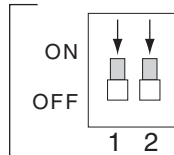


4TD Four Zone Controller Function (4TD):

Controls up to four inputs and four outputs with time delay. This is the default setting.
Function LED will blink one time every 5 seconds

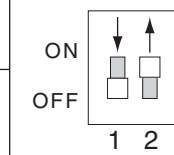

AO Auto Operator Function (AO):

Coordinates the unlocking of one or two zones with the signaling of an auto operator.
Function LED will blink two times every 5 seconds

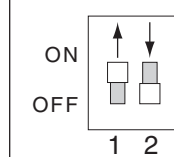

SI Security Interlock Function (SI):

Controls multi-door interlocks. Two through six door systems are possible (additional boards required for three to six doors).
Function LED will blink three times every 5 seconds

3 To Complete Configuration and Wiring, go to Appropriate Section

For 4TD: Go to pages 3-4

For AO: Go to pages 5-6

For SI: Go to pages 7-8


Basic Troubleshooting: Go to page 8

(Optional) Dry Contact Configuration

Powered Outputs (Default)

By default, all outputs provide 12/24VDC


Jumpers factory installed

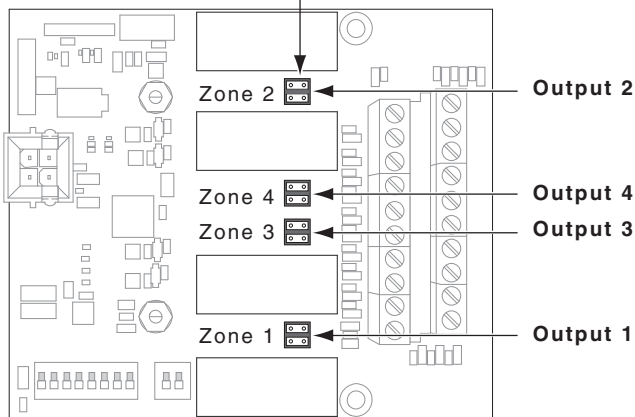

Dry Contact Outputs (Optional)

For dry contact outputs, remove appropriate jumpers and rotate 90°, then reinstall (Zone 1 - Zone 4)

Jumper rotated 90°


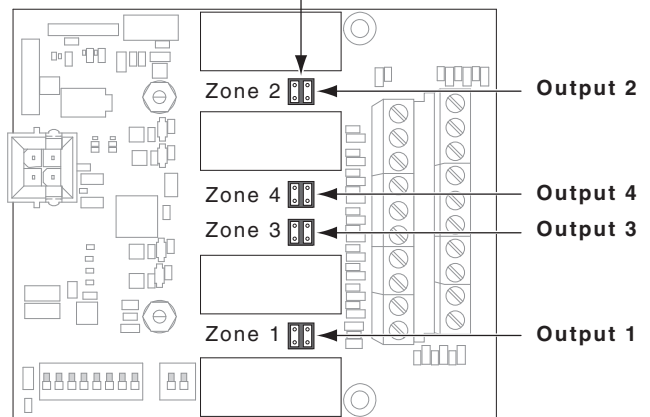


4TD - Set Time Delay Using SW1 Dip Switches

Summary of Operation

- Output turns "ON" when input is activated (closed).
- Time delay begins when input is released (opened).
- Locking Device output will remain "ON" during time delay.
- If I1-I4 inputs are wired together, outputs will sequence.


DIP switches on SW1 can be turned "ON" by moving them in the direction that the arrow is pointing. Switches below shown in "OFF" position

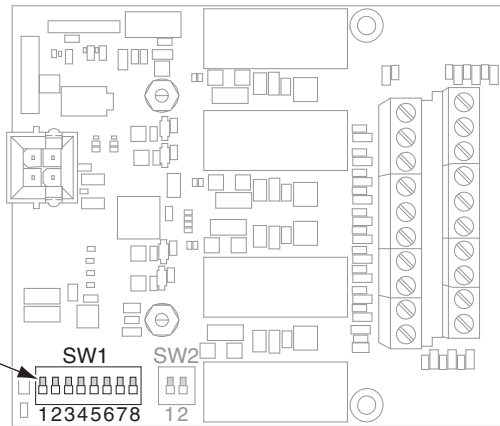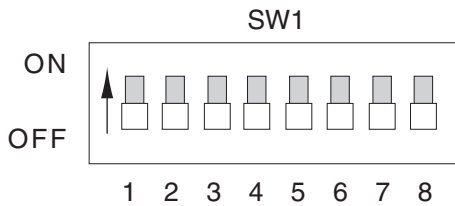

4TD DIP Switch Definitions		
Switch Number	All switches shown in "OFF" position in wiring diagram	
Enable Time Delay	1	Turn "ON" to enable time delay for Locking Device 1
Allows you to choose which outputs will have the below time delay.	2	Turn "ON" to enable time delay for Locking Device 2
	3	Turn "ON" to enable time delay for Locking Device 3
	4	Turn "ON" to enable time delay for Locking Device 4
Set Time Delay	5	Adds 5 seconds to the time delay when "ON"
(0-75 seconds, 5 second increments)	6	Adds 10 seconds to the time delay when "ON"
0 Sec: Switches 5-8 "OFF"	7	Adds 20 seconds to the time delay when "ON"
75 Sec: Switches 5-8 "ON"	8	Adds 40 seconds to the time delay when "ON"


4TD Input / Output	
Terminal Block Definitions	
Input 1	Access Control 1
Input 2	Access Control 2
Input 3	Access Control 3
Input 4	Access Control 4
Output 1*	Lock 1
Output 2*	Lock 2
Output 3*	Lock 3
Output 4*	Lock 4
*See page 2 for dry contacts	

4TD - Wiring Example - Fail Secure

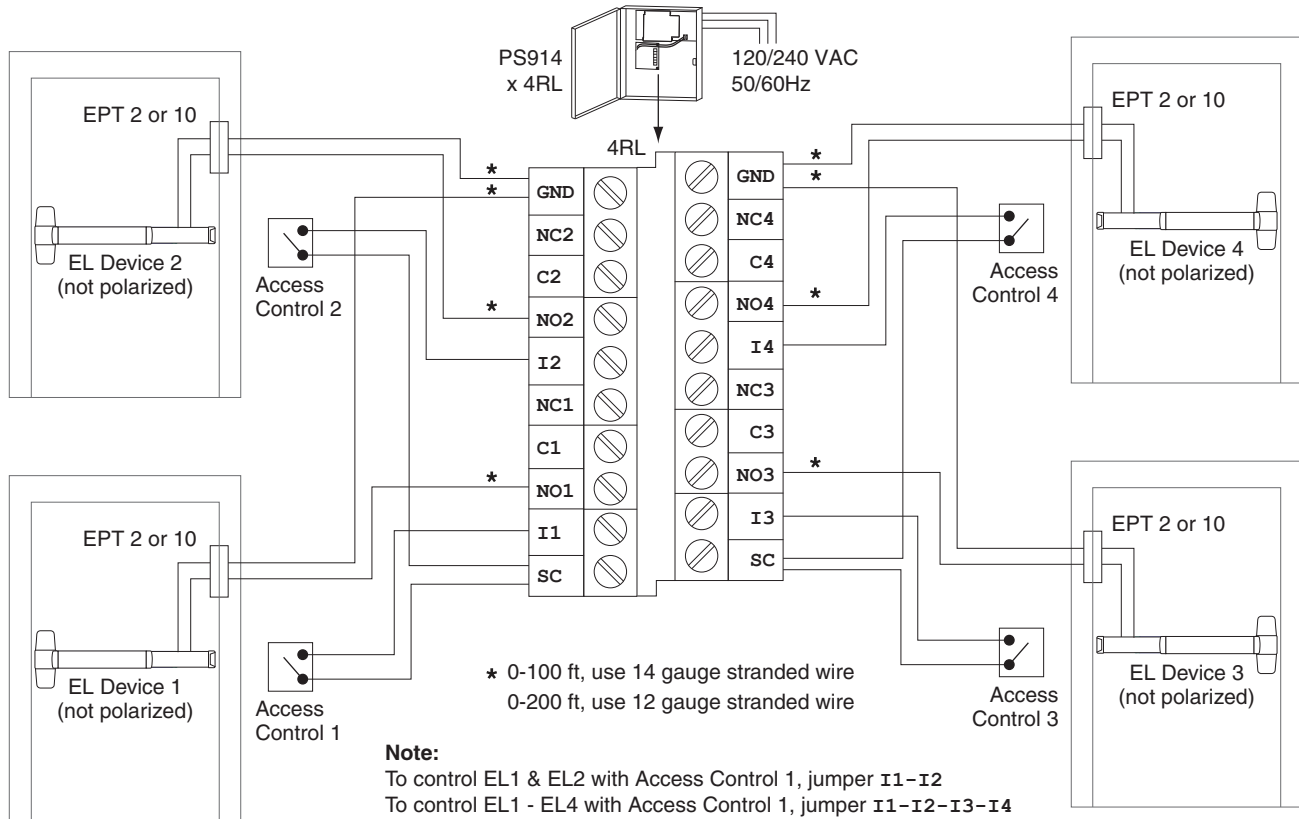



Note:
Fail secure output only allowed if approved
by Authority Having Jurisdiction

4TD - Wiring Example - Fail Safe

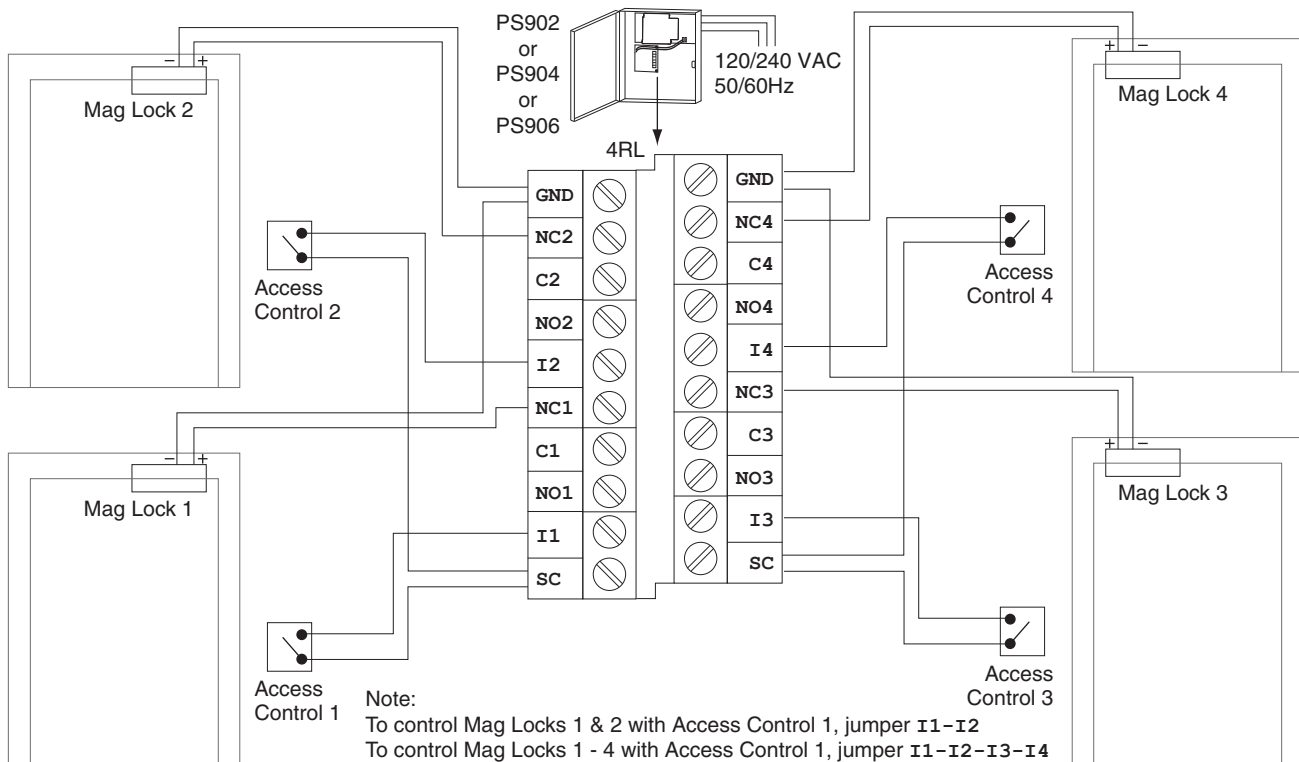

AO - Set Configuration Using SW1 Switches

DIP switches on SW1 can be turned "ON" by moving them in the direction that the arrow is pointing. Switches below shown in "OFF" position

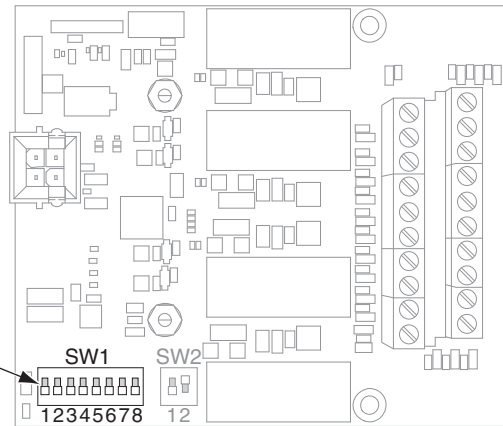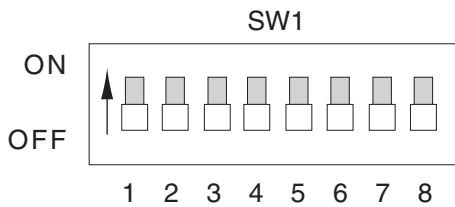

SW1 Switch		AO DIP Switch Definitions
	Number	All switches shown in "OFF" position in wiring diagram
Set Auto Operator Signaling Option Determines when the auto operator signal will be active	1 Off	Operator is signaled when latch monitor switch becomes active. Monitor switch required
	2 Off	Operator is signaled 0.5 seconds after control switch becomes active. No monitor switch used.
	1 On	Operator is signaled 1.0 seconds after control switch becomes active. No monitor switch used.
	2 On	Operator is signaled 1.5 seconds after control switch becomes active. No monitor switch used.
	1 On	Operator is signaled 1.5 seconds after control switch becomes active. No monitor switch used.
	2 On	Operator is signaled 1.5 seconds after control switch becomes active. No monitor switch used.
Not Used	3	Not used
Set Individual Mode or Sequential Mode Individual Mode - One input will trigger one locking device. Sequential Mode - One input will trigger two locking devices.	4	Turn "OFF" (default) to enable Individual Mode (single doors). Turn "ON" to enable Sequential Mode (double doors).
Set Time Delay* (0-30 seconds, 2 second increments) 0 Sec: Switches 5-8 "OFF" 30 Sec: Switches 5-8 "ON"	5	Adds 2 seconds to the time delay when "ON"
	6	Adds 4 seconds to the time delay when "ON"
	7	Adds 8 seconds to the time delay when "ON"
	8	Adds 16 seconds to the time delay when "ON"

* Time Delay begins when an input is released.

AO INPUT / OUTPUT TERMINAL BLOCK DEFINITIONS	
Input 1	Access Control 1
Input 2	Lock Monitor 1
Input 3	Access Control 2
Input 4	Lock Monitor 2
Output 1*	Lock 1
Output 2*	AO Signal 1
Output 3*	Lock 2
Output 4*	AO Signal 2
*See page 2 for dry contacts	

AO - Wiring Example - Two Single Doors


Summary of Operation

For each door, access control input unlocks door.

Latch monitor (LX) triggers auto operator.

Single Door Board Configuration

1. Position jumpers for dry contact for outputs 2 and 4 (see page 2).
2. Turn on switches 5 and 6 on SW1 (6 second time delay).
3. If LX is not used, turn on switch 1 on SW1.

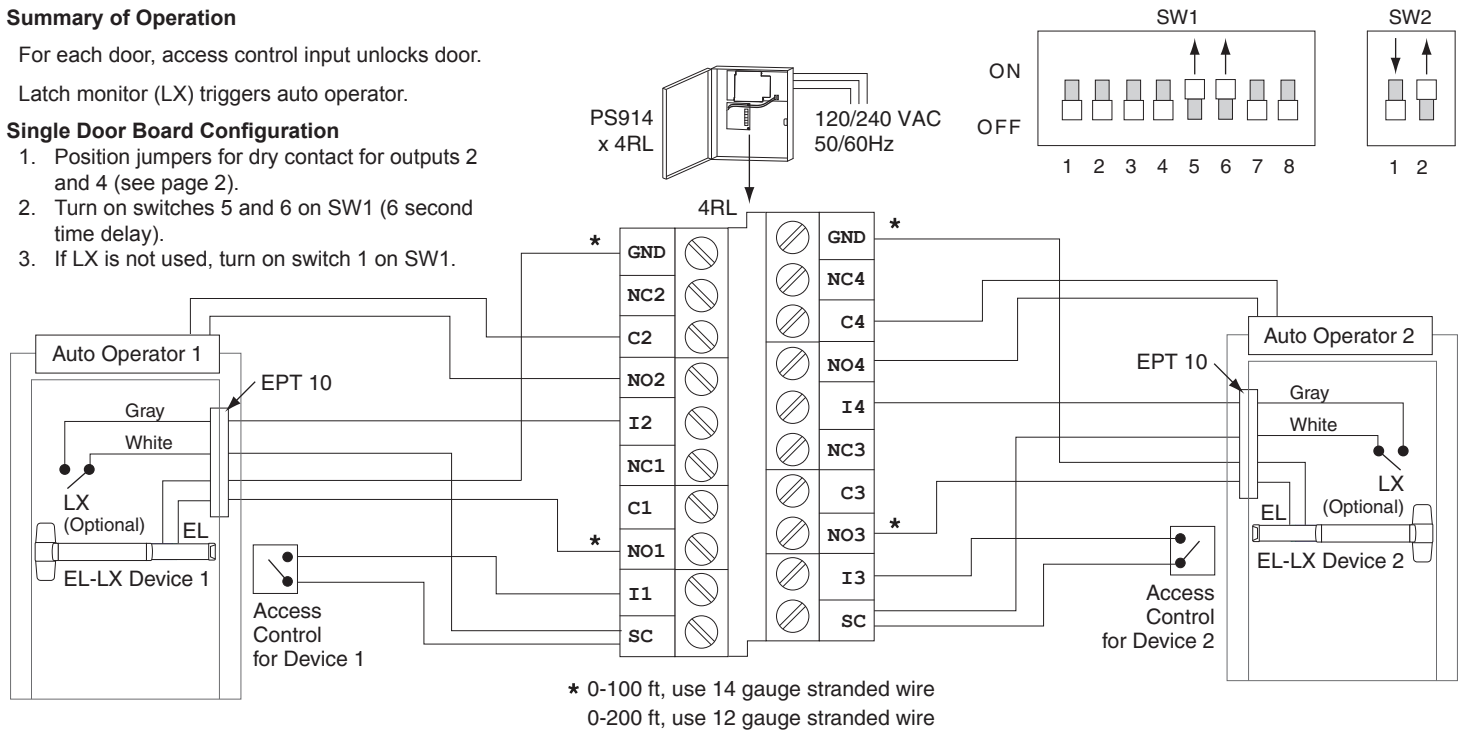


AO - Wiring Example - Double Doors

Summary of Operation

Access control input unlocks both doors. Both latch monitors (LX) trigger auto operators.

Double Door Board Configuration

1. Position jumpers for dry contact for outputs 2 and 4 (see page 2).
2. Turn on switches 4, 5, and 6 on SW1 (6 second time delay).
3. If LX is not used, turn on switch 1 on SW1.

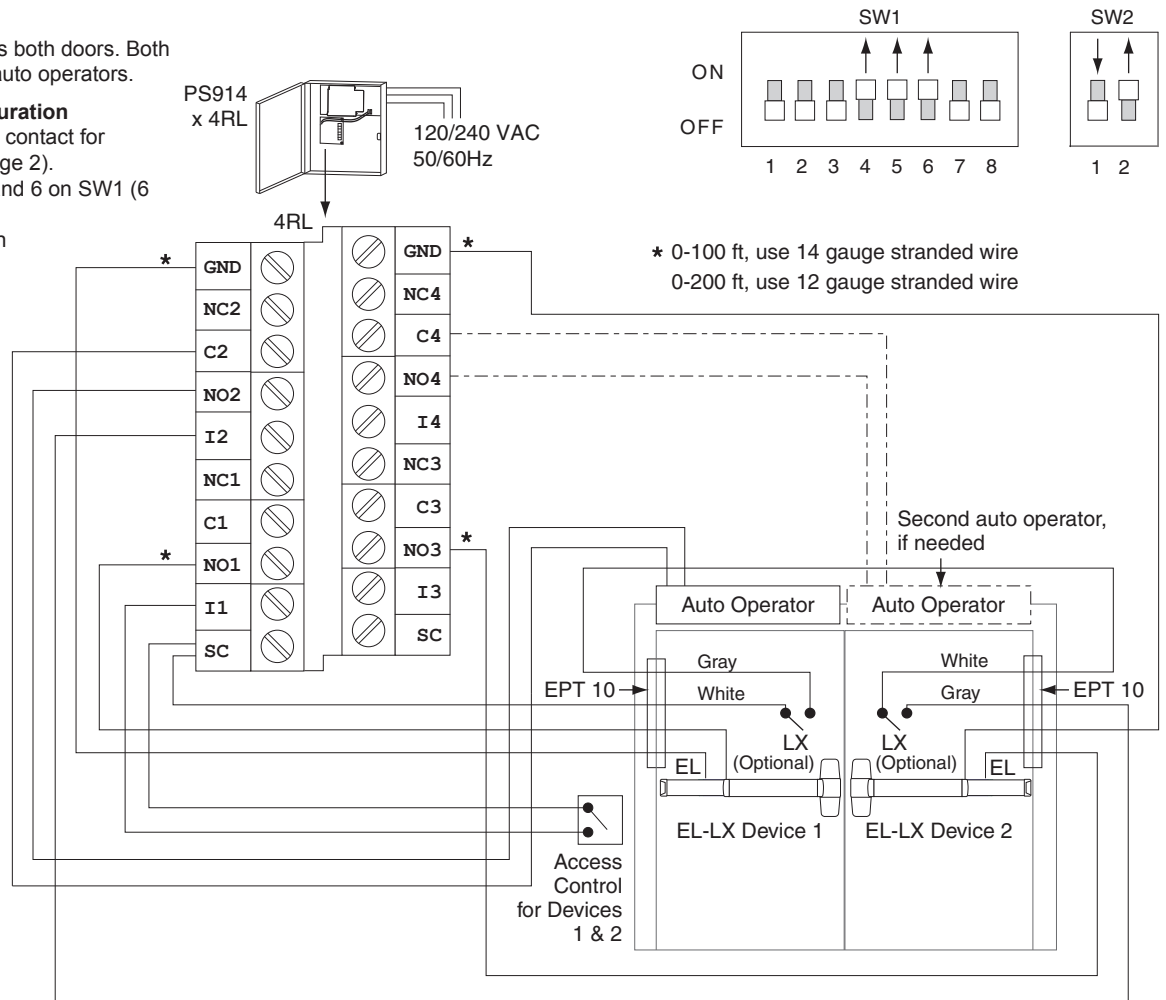



Note:

Fail secure output only allowed if approved by Authority Having Jurisdiction

Refer to Wire Table (page 7)

SI - Configure SW1 DIP Switches

DIP switches on SW1 can be turned "ON" by moving them in the direction that the arrow is pointing. Switches below shown in "OFF" position

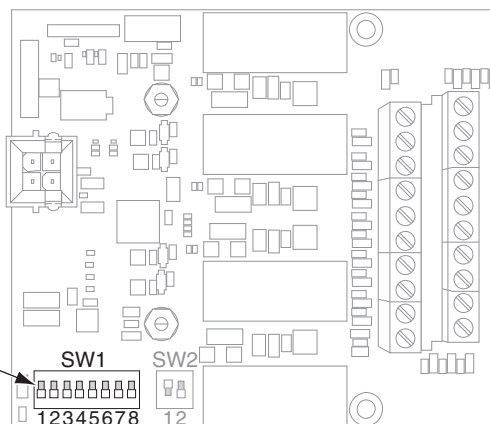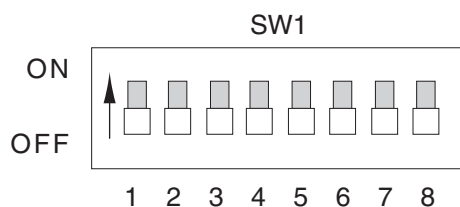

SI DIP Switch Definitions		
Switch Number	All switches shown in "OFF" position in wiring diagram	
Enable Time Delay Allows you to choose which outputs will have the below time delay.	1	Turn "ON" to enable time delay for Locking Device 1
	2	Turn "ON" to enable time delay for Locking Device 2
Enable Interlock	3	Turn "ON" to remove O2 from interlock (Allows a single independent door)
	4	Turn "ON" for global interlock (interlocks with other SI boards that have this switch "ON")
Set Time Delay (Output Active)* (0-30 seconds, 2 second increments) 0 Sec: Switches 5-8 "OFF" 30 Sec: Switches 5-8 "ON"	5	Adds 2 seconds to the time delay when "ON"
	6	Adds 4 seconds to the time delay when "ON"
	7	Adds 8 seconds to the time delay when "ON"
	8	Adds 16 seconds to the time delay when "ON"
*See page 2 for dry contacts		

SI Input / Output Terminal Block Definitions

Input 1	Access Control 1
Input 2	Access Control 2
Input 3	Lock Monitor 1
Input 4	Lock Monitor 2
Output 1*	Lock 1
Output 2*	Lock 2
Output 3*	Follows Output 1 by .5 Sec
Output 4*	Follows Output 2 by .5 Sec

*See page 2 for dry contacts

Global Interlock Switch Setting Examples

SI Board #1		SI Board #2		SI Board #3		Application
SW1-3	SW1-4	SW1-3	SW1-4	SW1-3	SW1-4	
Off	Off	Off	Off	Off	Off	Each SI board is a standalone, 2-door interlock.
Off	On	Off	On	Off	On	6-door interlock by setting all boards "global".
Off	On	On	On			A three-door interlock, plus an additional independent door on output 2 of SI Board #2.
Off	On	Off	On	Off	Off	4-Door interlock (SI Board #1,2) and a standalone 2-door interlock (SI Board #3).

Wire table (suggested maximum)


Wire Ga (AWG)	Device Current (Amps DC)	Output* (max. ft)	Input (max. ft)
14	0.3	850	1200
	0.5	500	
18	0.3	340	
	0.5	200	
12	Using EL device with EPT or Door Loop (PS914 required)	200	
14		100	
12	Using EL device with Electric Hinge/Pivot (PS914 required)	150	
14		75	

*Wiring allows for 10% voltage drop at device current at 12 or 24VDC
Max. ft = one way distance between power supply and device

SI - Wiring Example - 2 to 6 Door Interlock, Normally Locked

SI Configuration

1. Turn on switches 1, 2, 4, 5, and 6 on SW1.
2. Install 2 doors per SI board.
3. Add up to 2 additional SI boards for a total of 6 door interlock per power supply:
 - PS902 (2 doors maximum)
 - PS904 (4 doors maximum)
 - PS906 (6 doors maximum)

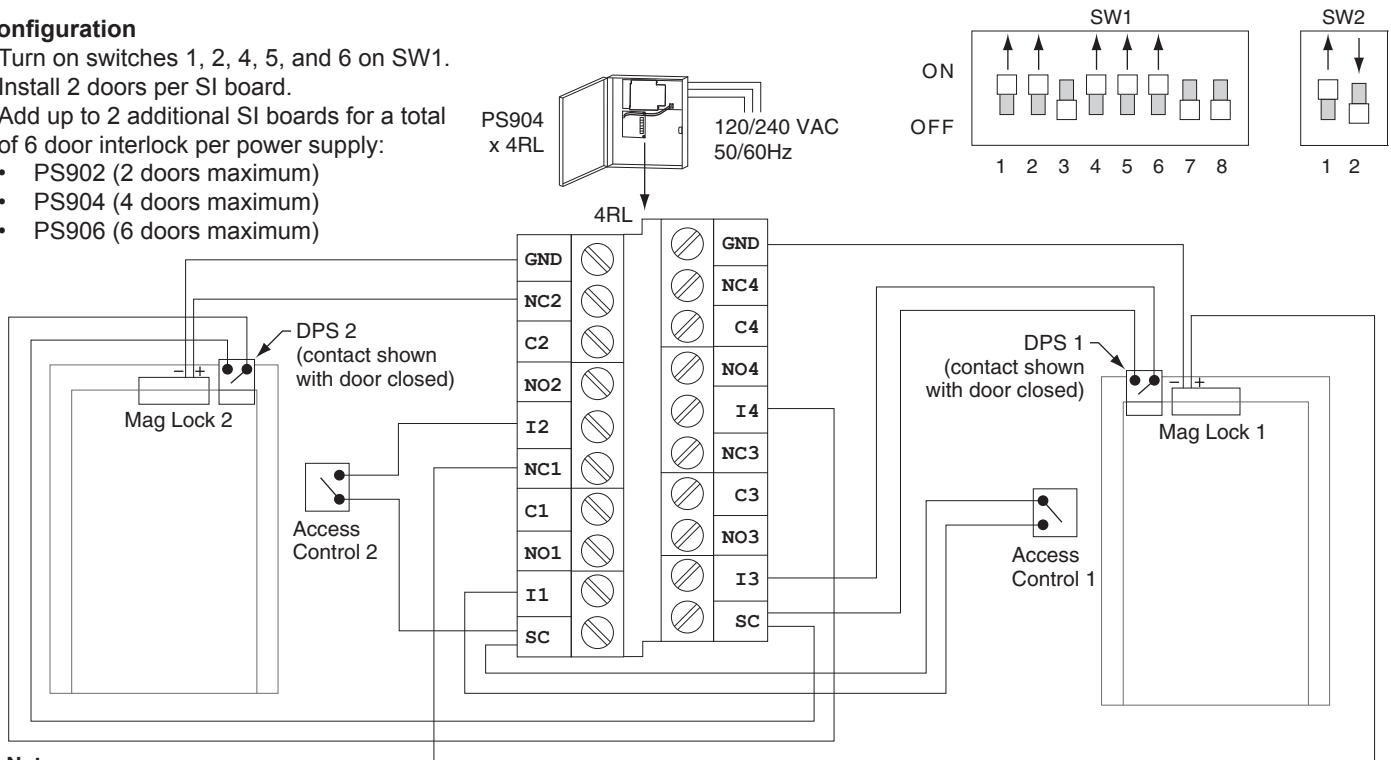

Note:

Fail secure output only allowed if approved by Authority Having Jurisdiction

Refer to Wire Table (page 7)

Basic Troubleshooting for All Functions

Symptom	Check
900-4RL Function LED (yellow) is not blinking, and inputs and outputs are inactive	Verify 900-4RL cable is plugged into an "option" connector on the main board. Check AC wiring and AC breaker. Check PS-900 main board F1 fuse. Use voltmeter to verify 12 VDC or 24 VDC output on PS-900 main board.
900-4RL Function LED (yellow) is blinking, but inputs and outputs are inactive	If 900-FA option is installed onto 900-4RL, verify fire alarm contacts are closed across FA1 and FA2. If 900-FA option is not installed, then verify jumper wire is installed into FA-JMPR connector on the 4RL board.
Inputs and outputs behaving incorrectly.	Verify 2-position DIP switch is set for proper function. Watch yellow LED to confirm 4RL function setting. See page 2. (Verify each DIP switch is pushed into its fully-on or fully-off position.) Verify 8-position DIP switch is set properly for your application. If you are unsure of proper settings, contact Technical Services for assistance. (Verify each DIP switch is pushed into its fully-on or fully-off position.) Verify wiring for all input and output hardware is connected to proper terminals. (Reminder: If 900-4RL is mounted in location 1, top terminals will be GND. If 900-4RL mounted in location 2 or 3, top terminals will be SC.)

NOTE

When installation is complete, secure enclosure door with screws or keylock.