



Detex Corporation, 302 Detex Drive, New Braunfels, Texas 78130-3045
 (830)629-2900 / 1-800-729-3839 / Fax (830)620-6711
 E-MAIL: detex@detex.com INTERNET: www.detex.com

INSTALLATION INSTRUCTIONS FOR DX BOLT


Drawing # 103694

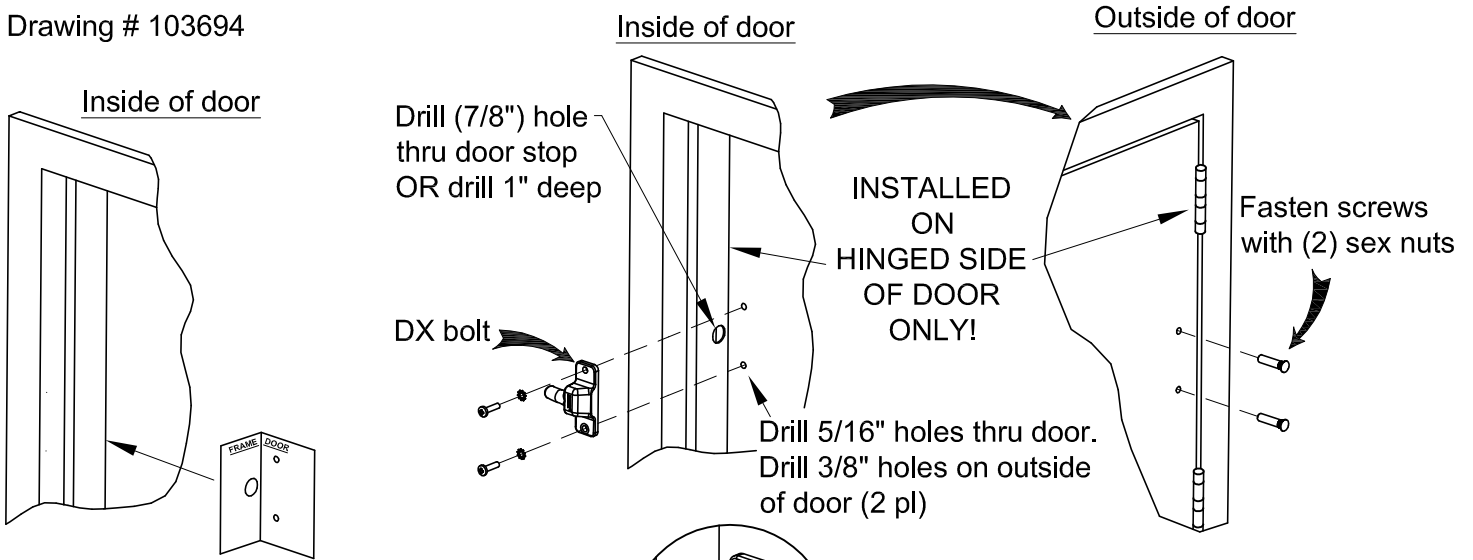

Cut out template below & fold as shown.
 Place on inside face of door (hinged edge)
 & frame and mark hole locations

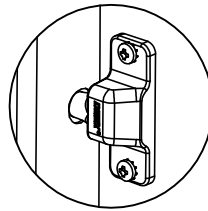

Finished install view

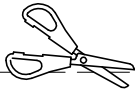


FRAME

DOOR

FOLD

FOLD

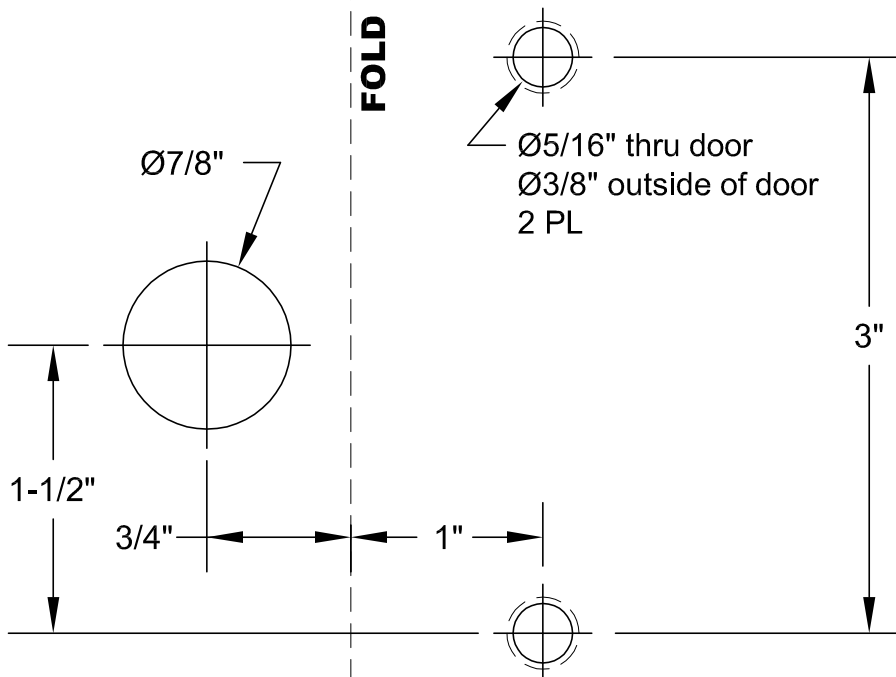

DX bolt kits

Part No	Color	BOLT QTY per Kit
DX1	GRAY	1
DX2		2
DX3		3
DX1-BK	BLACK	1
DX2-BK		2
DX3-BK		3

**Use template
for marking holes!**