



LG10, LG11, LG12, LG13, & LG14

IVES

INST.LG1014

Lock Guard

Installation Instructions

1.

1/4-20 SCREW

WELD STUD

"A"

CHECK THIS DIMENSION FOR CLEARANCE BEFORE DRILLING HOLES.

NOTE: THE DIMPLE DEPTH IS 1/4" (6MM)

3.

C OF HOLES

SEE DIM. "A" ON REVERSE SIDE

1. MARK HOLES ON EACH SIDE OF DOOR.
2. SUBTRACT 1/8" (3) FROM CENTERLINE OF HOLES ON SHORT SIDE OF BEVEL

2.

EQUAL

C OF LATCH

EQUAL

4.

5/16" (8) DIA. INTERIOR SIDE OF DOOR

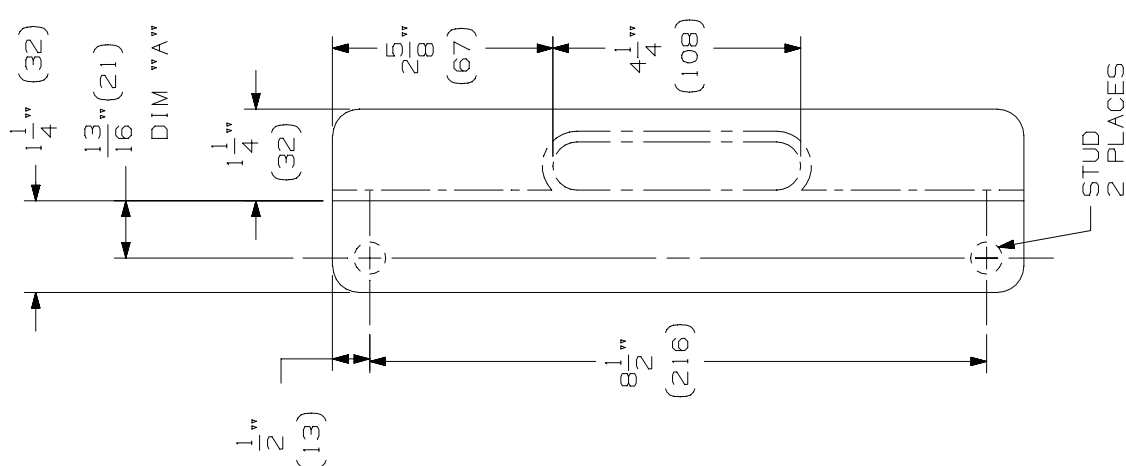
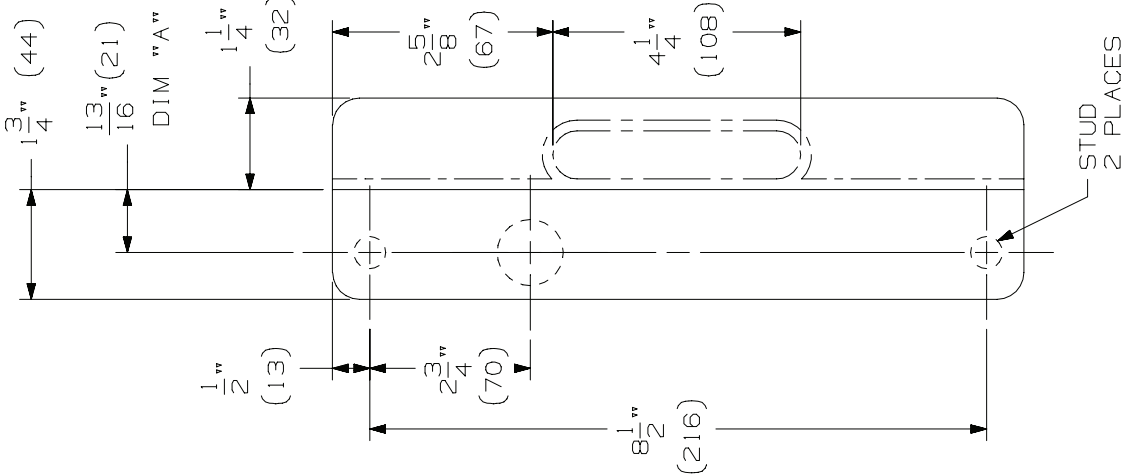
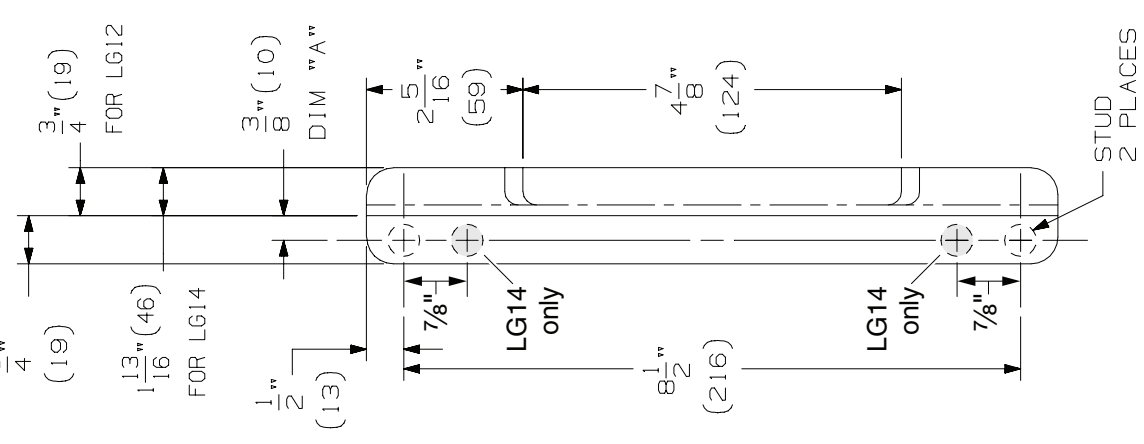
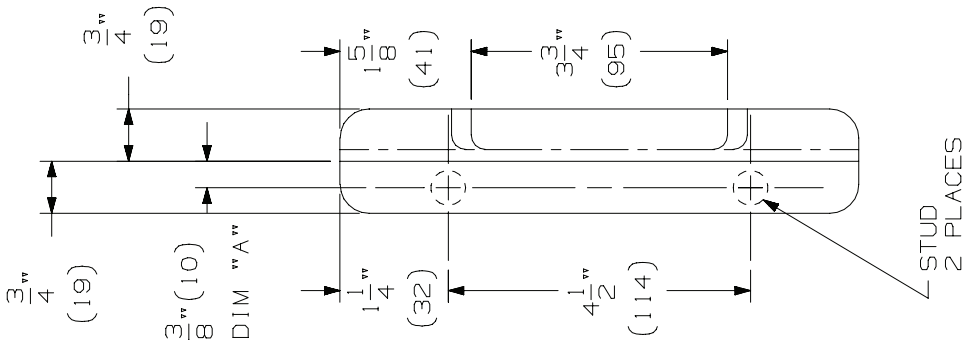
DRILL HOLE FOR LOCK GUARD (DRILL HOLES FROM EACH SIDE TO ENSURE PROPER ALIGNMENT.)

	QTY	SCREW DETAILS
LG10	2	1/4-20 X 1 1/4" OPHMS
LG11	2	1/4-20 X 1 1/4" OPHMS
LG12	2	1/4-20 X 1 1/4" OPHMS
LG13	2	1/4-20 X 1 1/4" OPHMS
LG14	4	1/4-20 X 1 1/4" OPHMS

NOTE: DIMENSIONS IN () ARE MILLIMETERS.

5.

INSTALL SCREWS AND TIGHTEN SECURELY.

<p>LG10 OVERALL SIZE 2 1/2" X 9 1/2"</p> 	<p>LG11 OVERALL SIZE 3" X 9 1/2"</p>  <p>RH SHOWN LH OPPOSITE</p>	<p>LG12 & LG 14 LG12 OVERALL SIZE 1 1/2" X 9 1/2" LG14 OVERALL SIZE 2 9/16" X 9 1/2"</p> 	<p>LG13 OVERALL SIZE 1 1/2" X 7"</p> 
<p>STANDARD LINE - FOR ESCUTCHEONS 2 3/4" (70) WIDE AND LESS</p>	<p>FOR NARROW SITE ALUMINUM DOORS AVAILABLE WITHOUT HOLE</p>	<p>FOR USE WITH WIDE ESCUTCHEONS 3 1/2" (89) WIDE OR LESS</p>	<p>CYLINDER LOCK APPLICATIONS</p>