


Architectural Door Accessories

ASSA ABLOY

Rockwood 570 Dust Proof Strike

The global leader in
door opening solutions

NOT TO SCALE

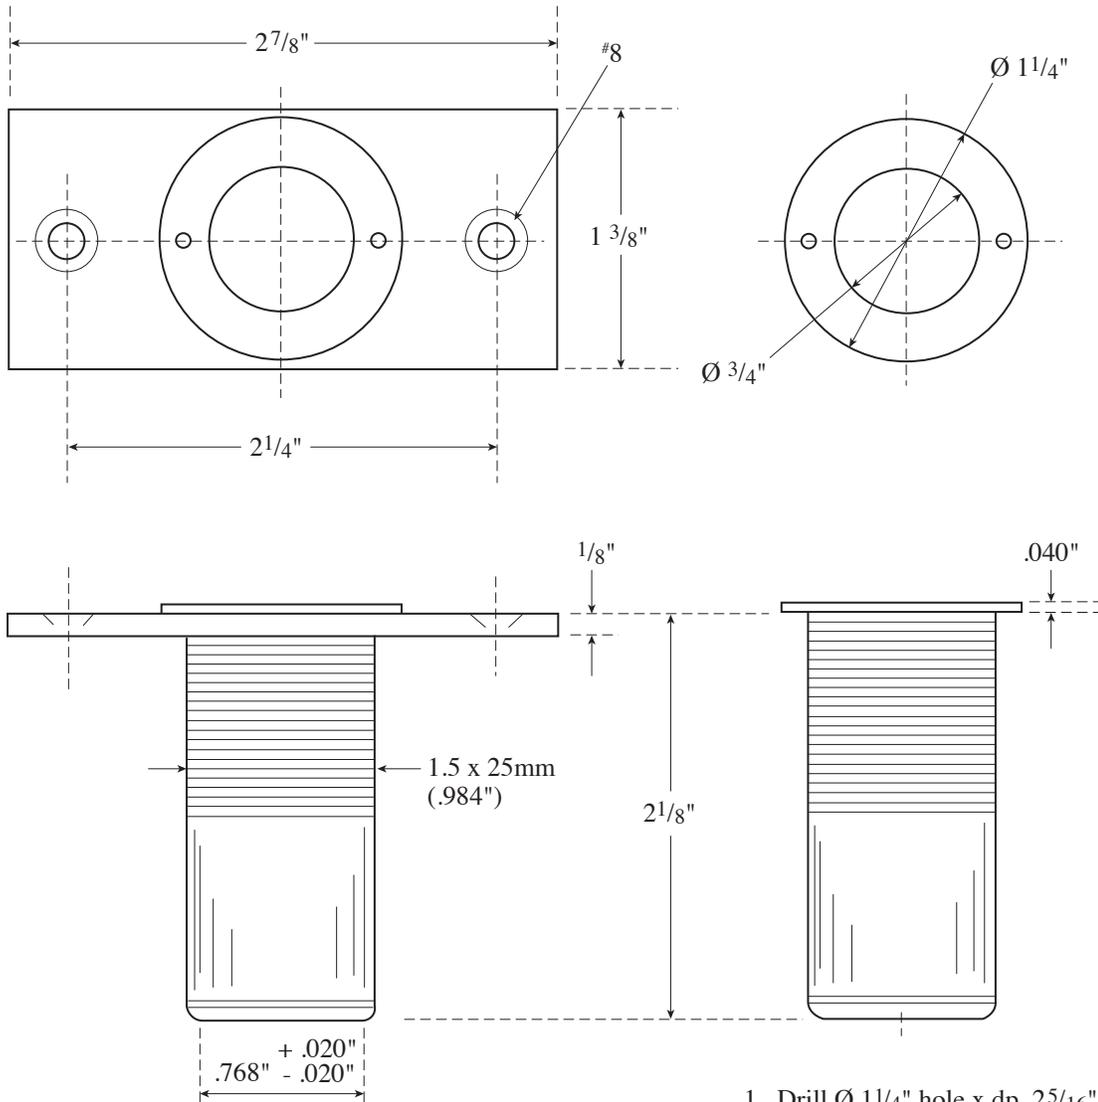

Template T-570

Effective date: January 1, 2017
Supersedes: All Previous

NOTE: ASSA ABLOY reserves the right to make product changes and is not responsible for obsolete template errors. To ensure your template is current, please visit our website at www.rockwoodmfg.com or call us at 800-458-2424

1. Mortise plate into surface.
2. Drill $\text{Ø } 1\frac{1}{4}"$ hole x dp. $2\frac{3}{16}"$.
3. Drill two holes for plastic anchors or lead anchors to suit conditions.
4. Place anchors into holes.
5. Grout strike into floor.
6. Insert mounting screws.

1. Drill $\text{Ø } 1\frac{1}{4}"$ hole x dp. $2\frac{5}{16}"$ from top of threshold.
2. Grout strike into floor.

300 Main Street
Rockwood, Pennsylvania 15557
P: 800.458.2424 | F: 800.922.9212
www.rockwoodmfg.com | orders.rockwood@assaabloy.com

Copyright © 2017, Rockwood Manufacturing Company, an ASSA ABLOY Group company. All rights reserved.
Reproduction in whole or in part without the express written permission of Rockwood Manufacturing Company is prohibited.

T-570 - 1/17