

# Cover plates

## 889 Kit

(For 373L Control)

Required when 373L controls are used with sex bolts. Four studs on cover plate allow through bolting to the device center case  
**Note:** Sex bolts must be used on wood or composite fire doors. Specify device type R, M, or V and finish.

## 998 Kit

(For 994L Trim)

For use with 994 lever trim to cover existing 992 lever trim cut-out. Specify finish

## #10 WDA Kit

(For 370 Series controls)


For wood door applications, used to cover up door preparations for control, also prevents the control from boring into the wood door. Finished to match control.

## 33A WDA Kit

(For 360 Series controls)


For wood door applications to cover up door preparations for control, also prevents the control from boring into the wood door. Finished to match control.

## Dog keys

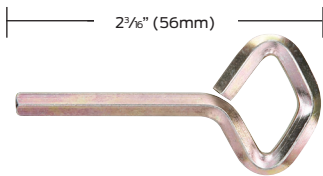

**222 Dog key (old style)**

$\frac{5}{32}$ " (4mm) hex

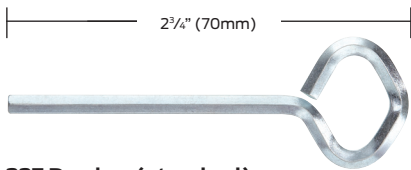

**227 Dog key (standard)**

$\frac{7}{32}$ " (4mm) hex

