



941104-00

373-L, 373-L-BE



VON DUPRIN®


Control for 88 Rim Device on Metal or Wood Door

Installation Instructions

INSTALLATION INSTRUCTIONS

1. Prepare door for exit device. See exit device instructions for locations of holes, backset (line X-X), and center lines.
2. Prepare door for control:
 - a. Transfer line X-X from inside (exit device side) of door to outside (control side) of door. Use extra care if edge of door is beveled. Be sure line X-X is parallel to edge of door.
- ① **Note: See back side of sheet for hole preparation for metal or wood.**
 - b. Locate and prepare holes as indicated.
3. Install cylinder into control if required (Figures 1 & 2). Insure cylinder cam is set for required function and replace if necessary.
- ① **Note: Exit device must be in unlocked position before installation.**
4. Install control and exit device to door.
5. Test key, control, and device action.

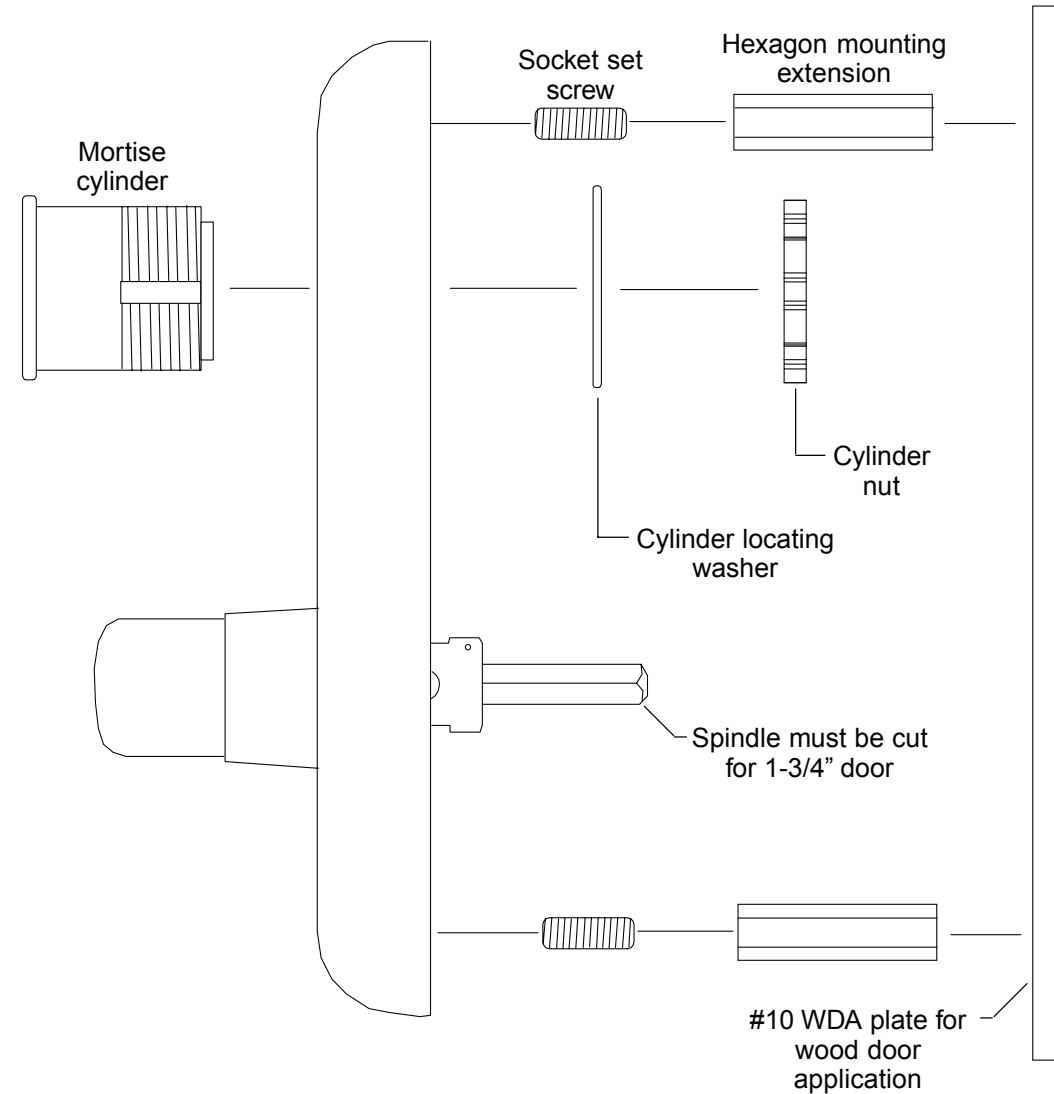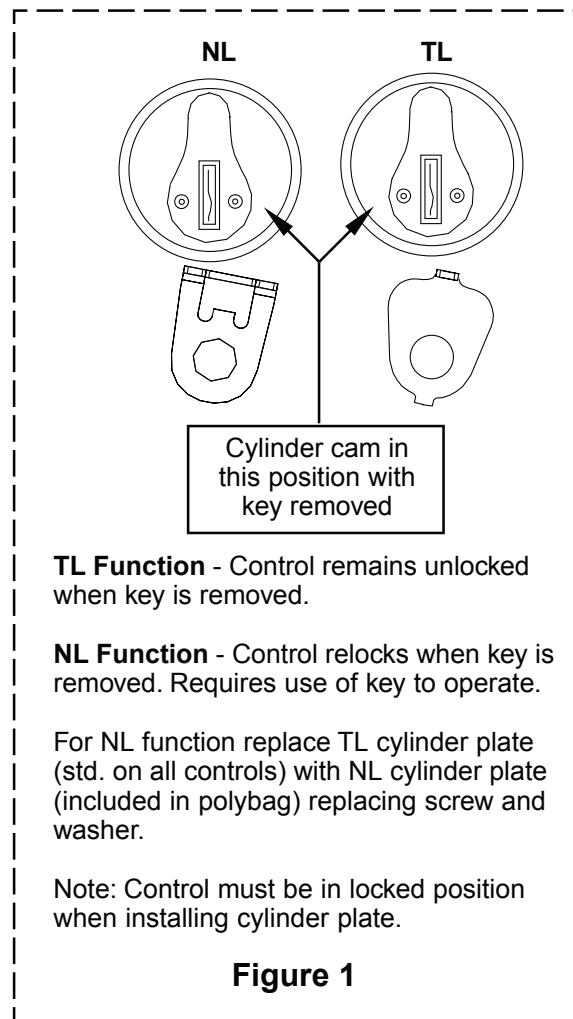

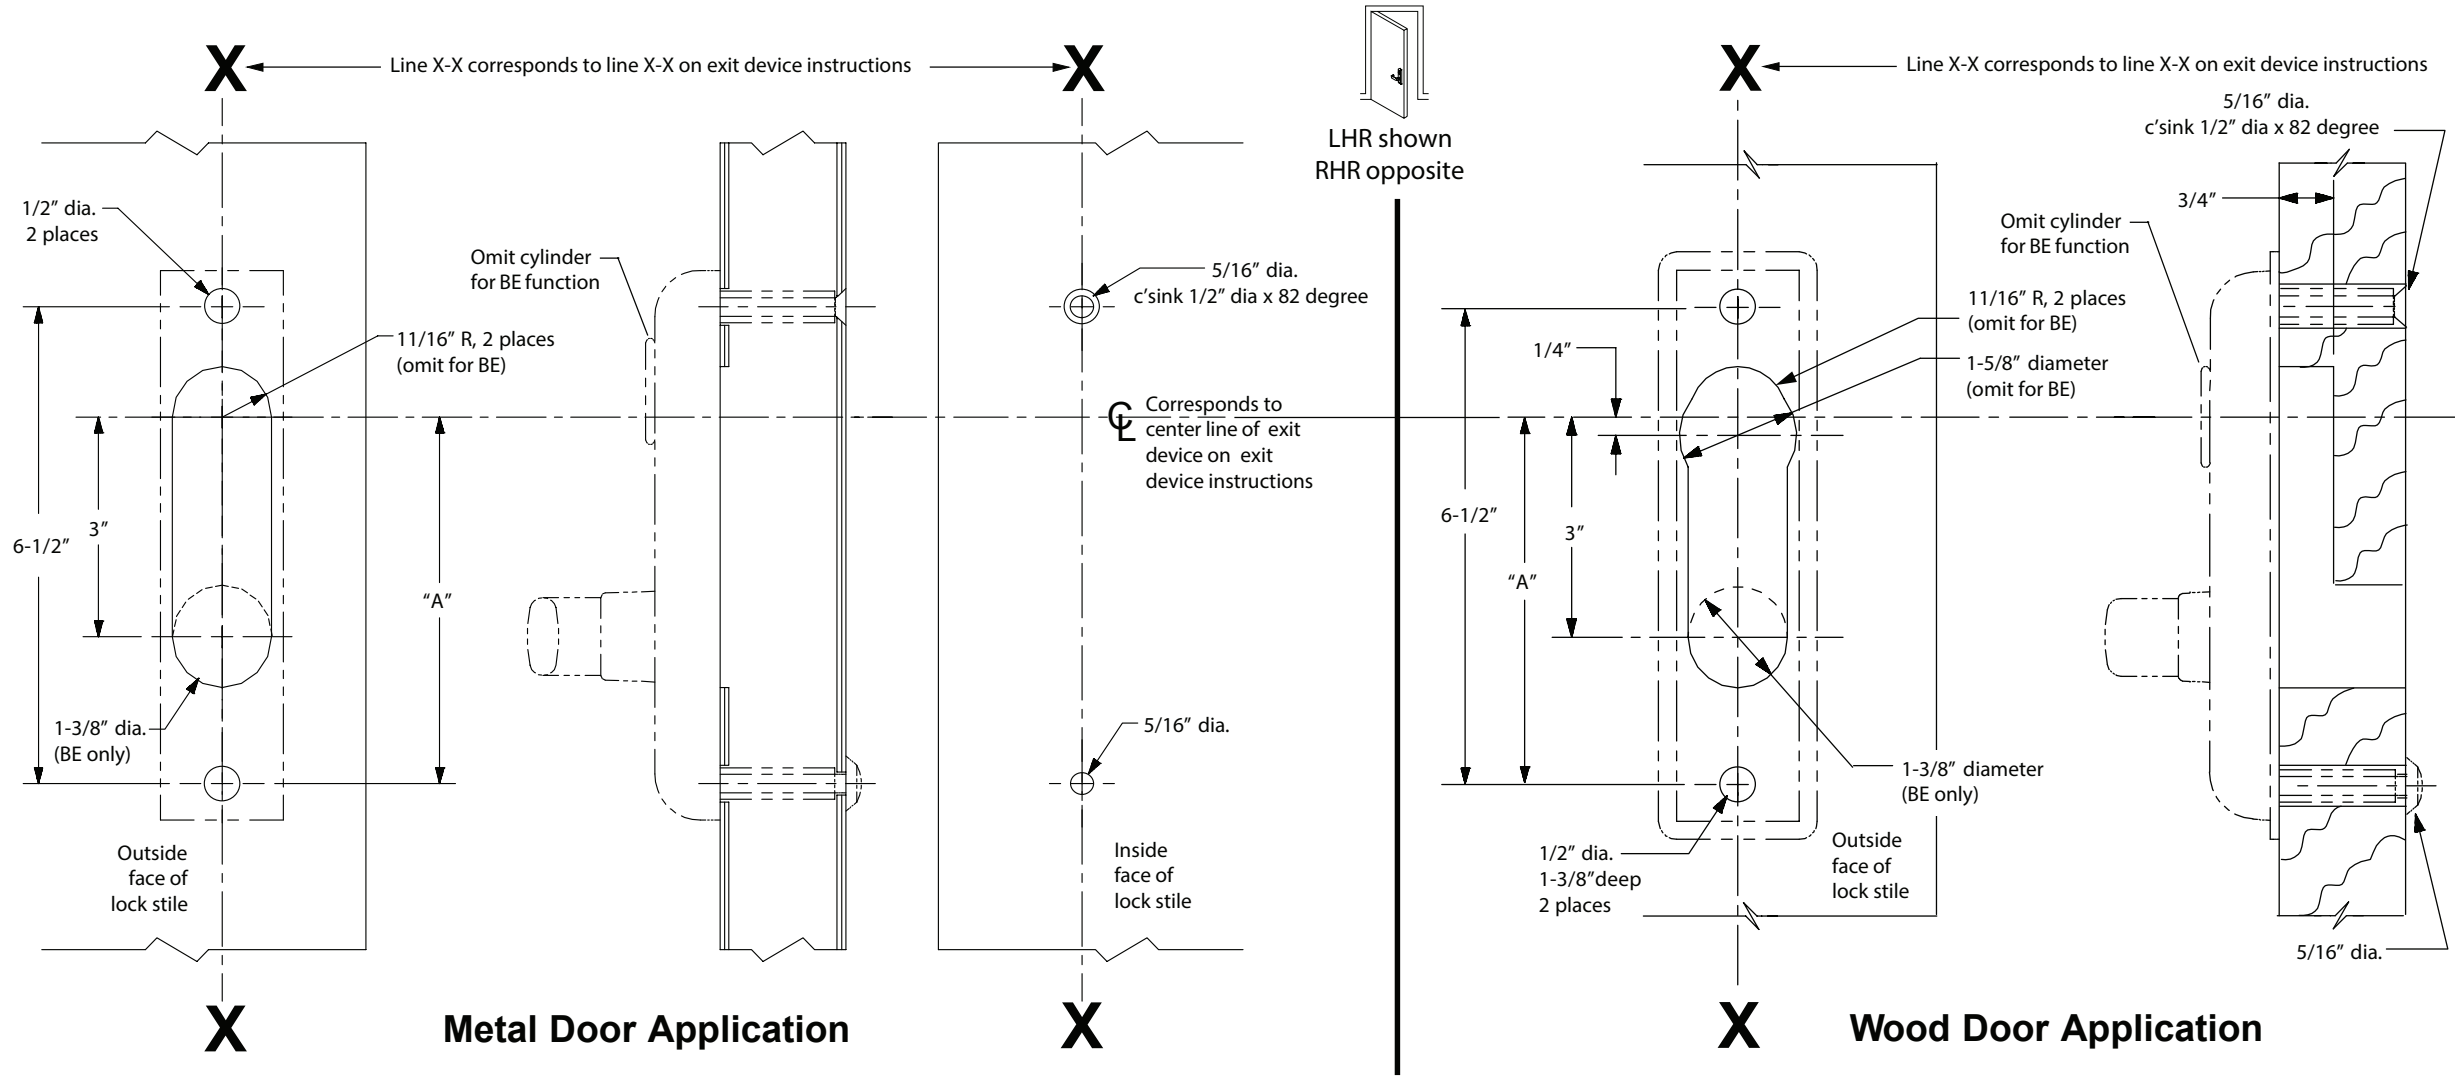

For cutouts on inside face of door see instructions in device carton.	Device Application Schedule	
	Device	Dimension "A"
	88K Rim	5"



941108-00

373-L, 373-L-BE



VON DUPRIN®


Control for 44/88 Mortise and 8827 Device on Metal or Wood Door

Installation Instructions

INSTALLATION INSTRUCTIONS

1. Prepare door for exit device. See exit device instructions for locations of holes, backset (line X-X), and center lines.
2. Prepare door for control:
 - a. Transfer line X-X from inside (exit device side) of door to outside (control side) of door. Use extra care if edge of door is beveled. Be sure line X-X is parallel to edge of door.
- ① **Note: See back side of sheet for hole preparation for metal or wood.**
 - b. Locate and prepare holes as indicated.
3. Install cylinder into control if required (Figures 1 & 2). Insure cylinder cam is set for required function and replace if necessary.
4. Mortise lock or exit device must be in unlocked position before installation.
5. Install control and exit device to door.
6. Test key, control, and device action.

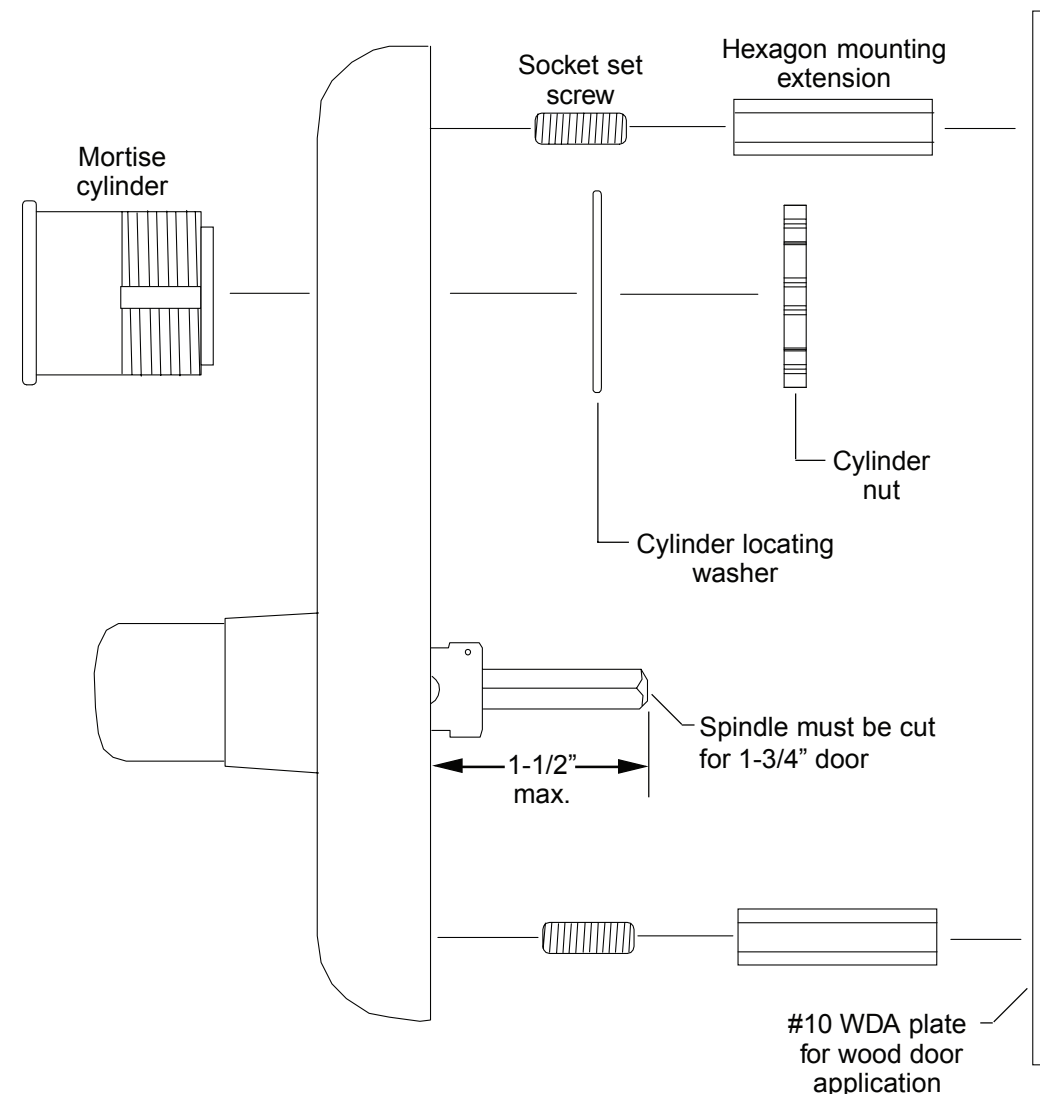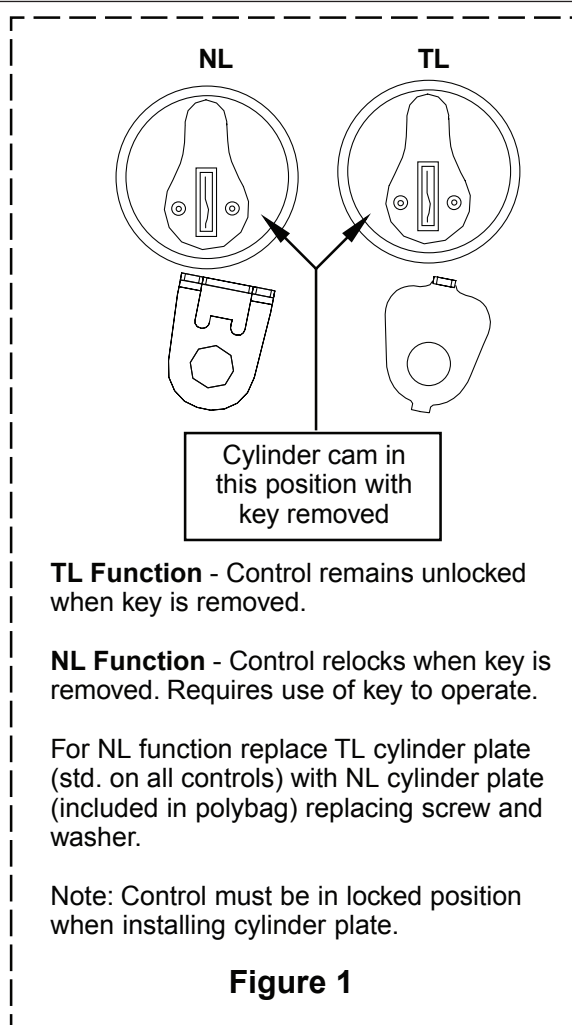

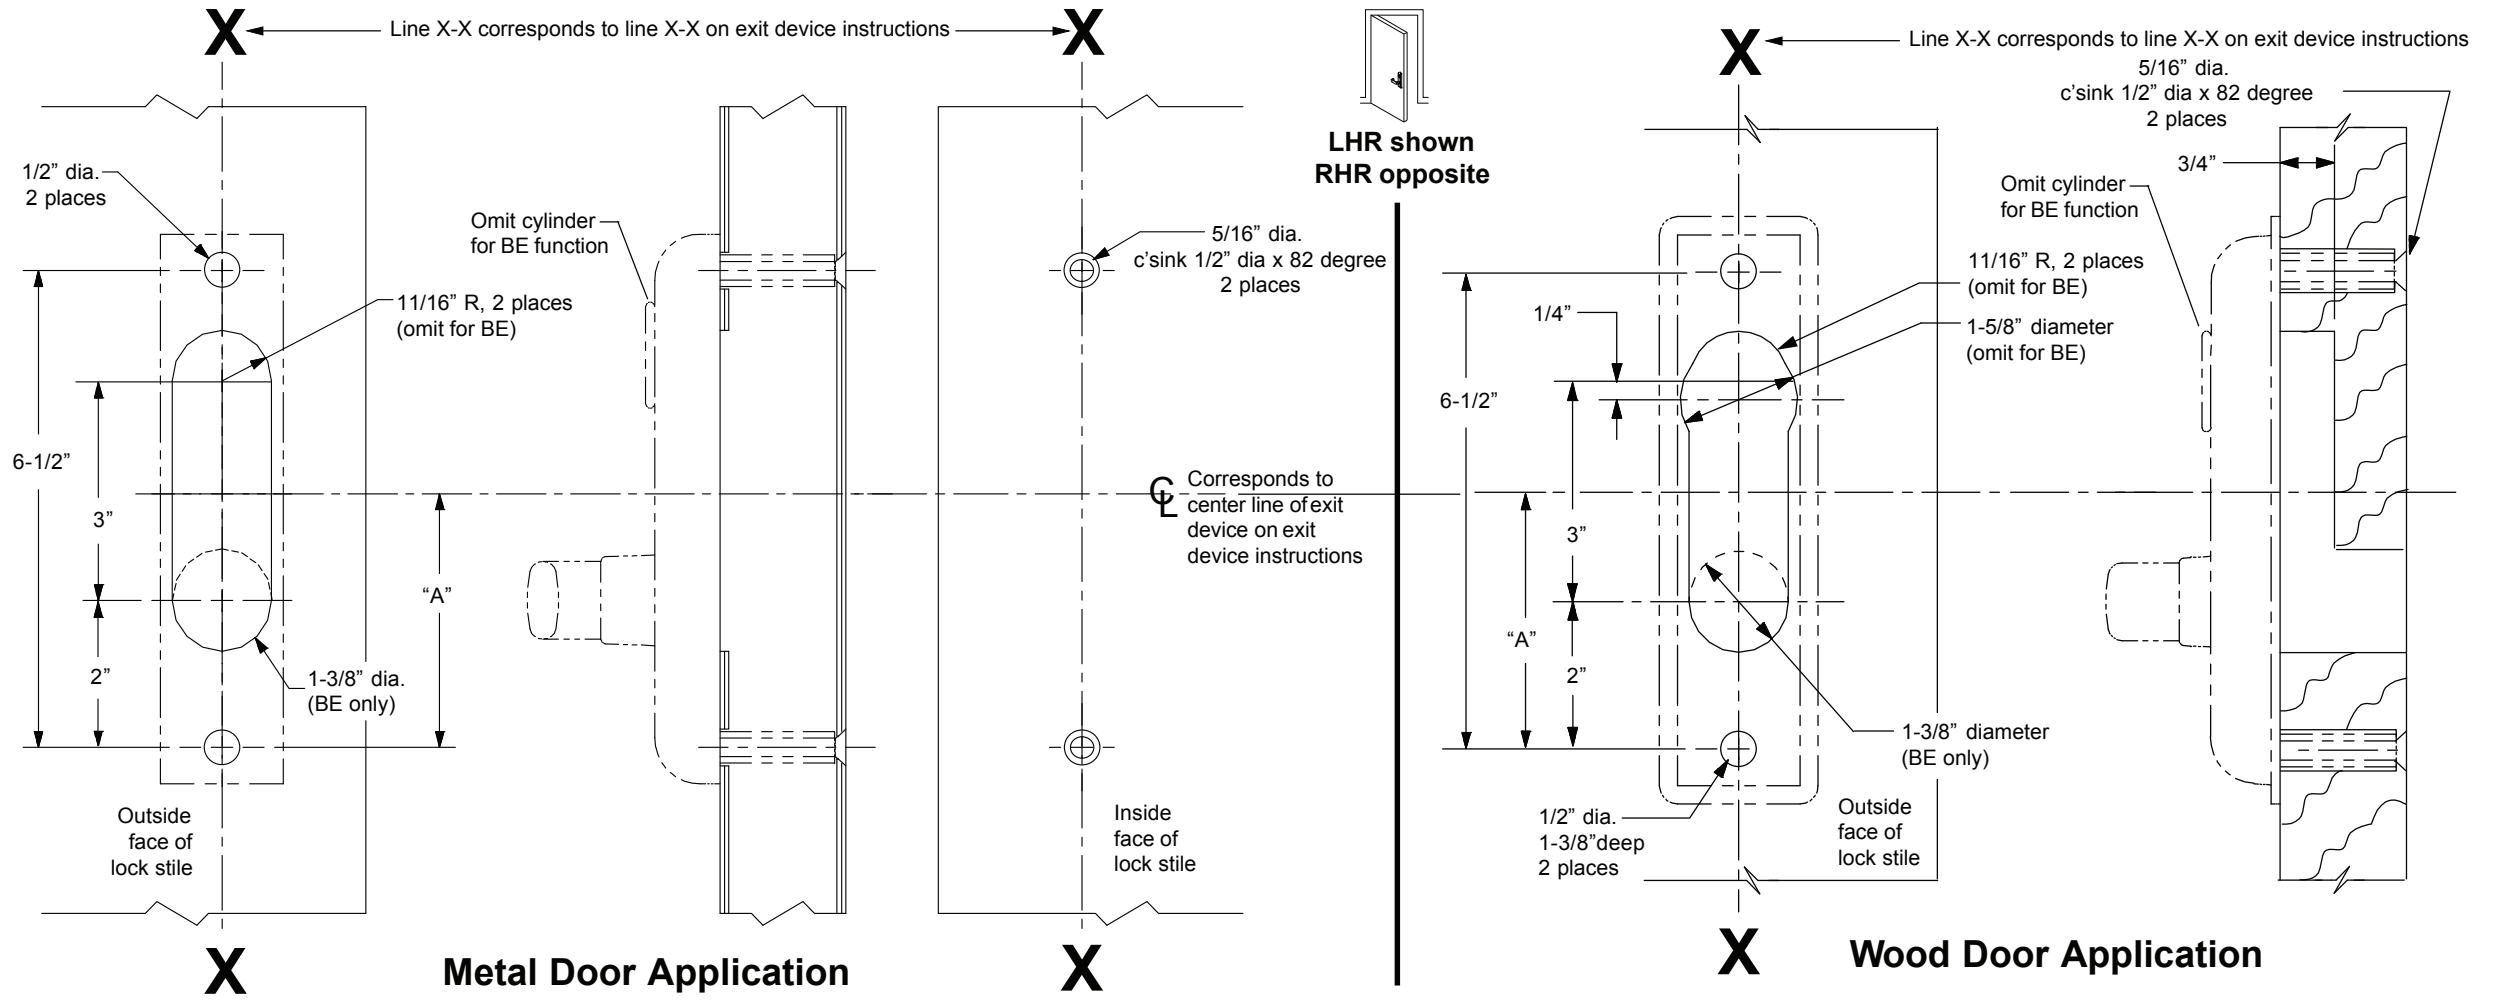

Metal Door Application

Wood Door Application

For cutouts on inside face of door see instructions in device carton.	Device Application Schedule	
	Device	Dimension "A"
	8827-K, 8827-K-F	3-1/2"
	88 Mortise	3-1/4"
	44 Mortise	3-3/16"



941108-00

373-L, 373-L-BE



VON DUPRIN®


Control for 44/88 Mortise and 8827 Device on Metal or Wood Door

Installation Instructions

INSTALLATION INSTRUCTIONS

1. Prepare door for exit device. See exit device instructions for locations of holes, backset (line X-X), and center lines.
2. Prepare door for control:
 - a. Transfer line X-X from inside (exit device side) of door to outside (control side) of door. Use extra care if edge of door is beveled. Be sure line X-X is parallel to edge of door.
- ① **Note: See back side of sheet for hole preparation for metal or wood.**
 - b. Locate and prepare holes as indicated.
3. Install cylinder into control if required (Figures 1 & 2). Insure cylinder cam is set for required function and replace if necessary.
4. Mortise lock or exit device must be in unlocked position before installation.
5. Install control and exit device to door.
6. Test key, control, and device action.

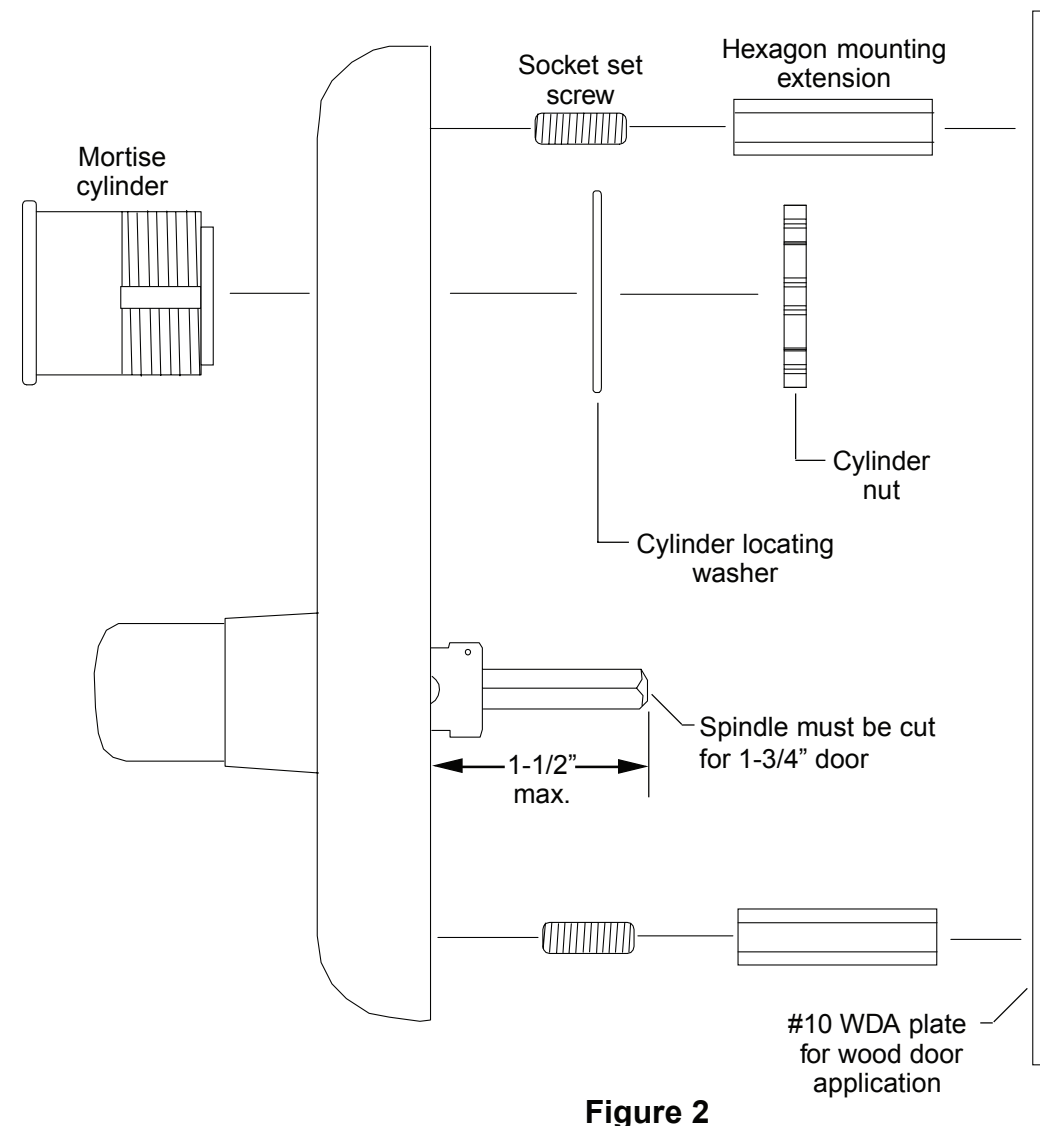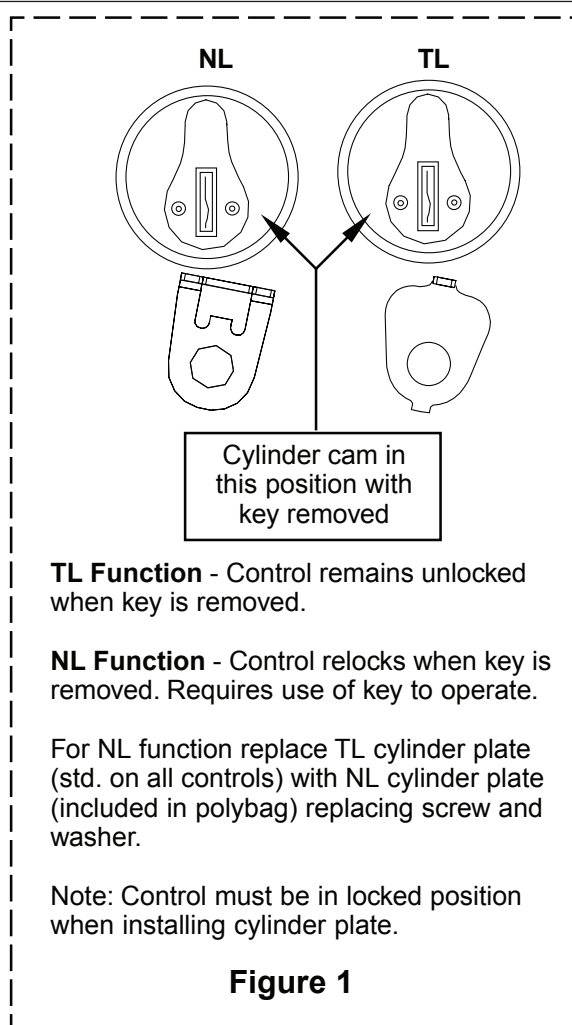

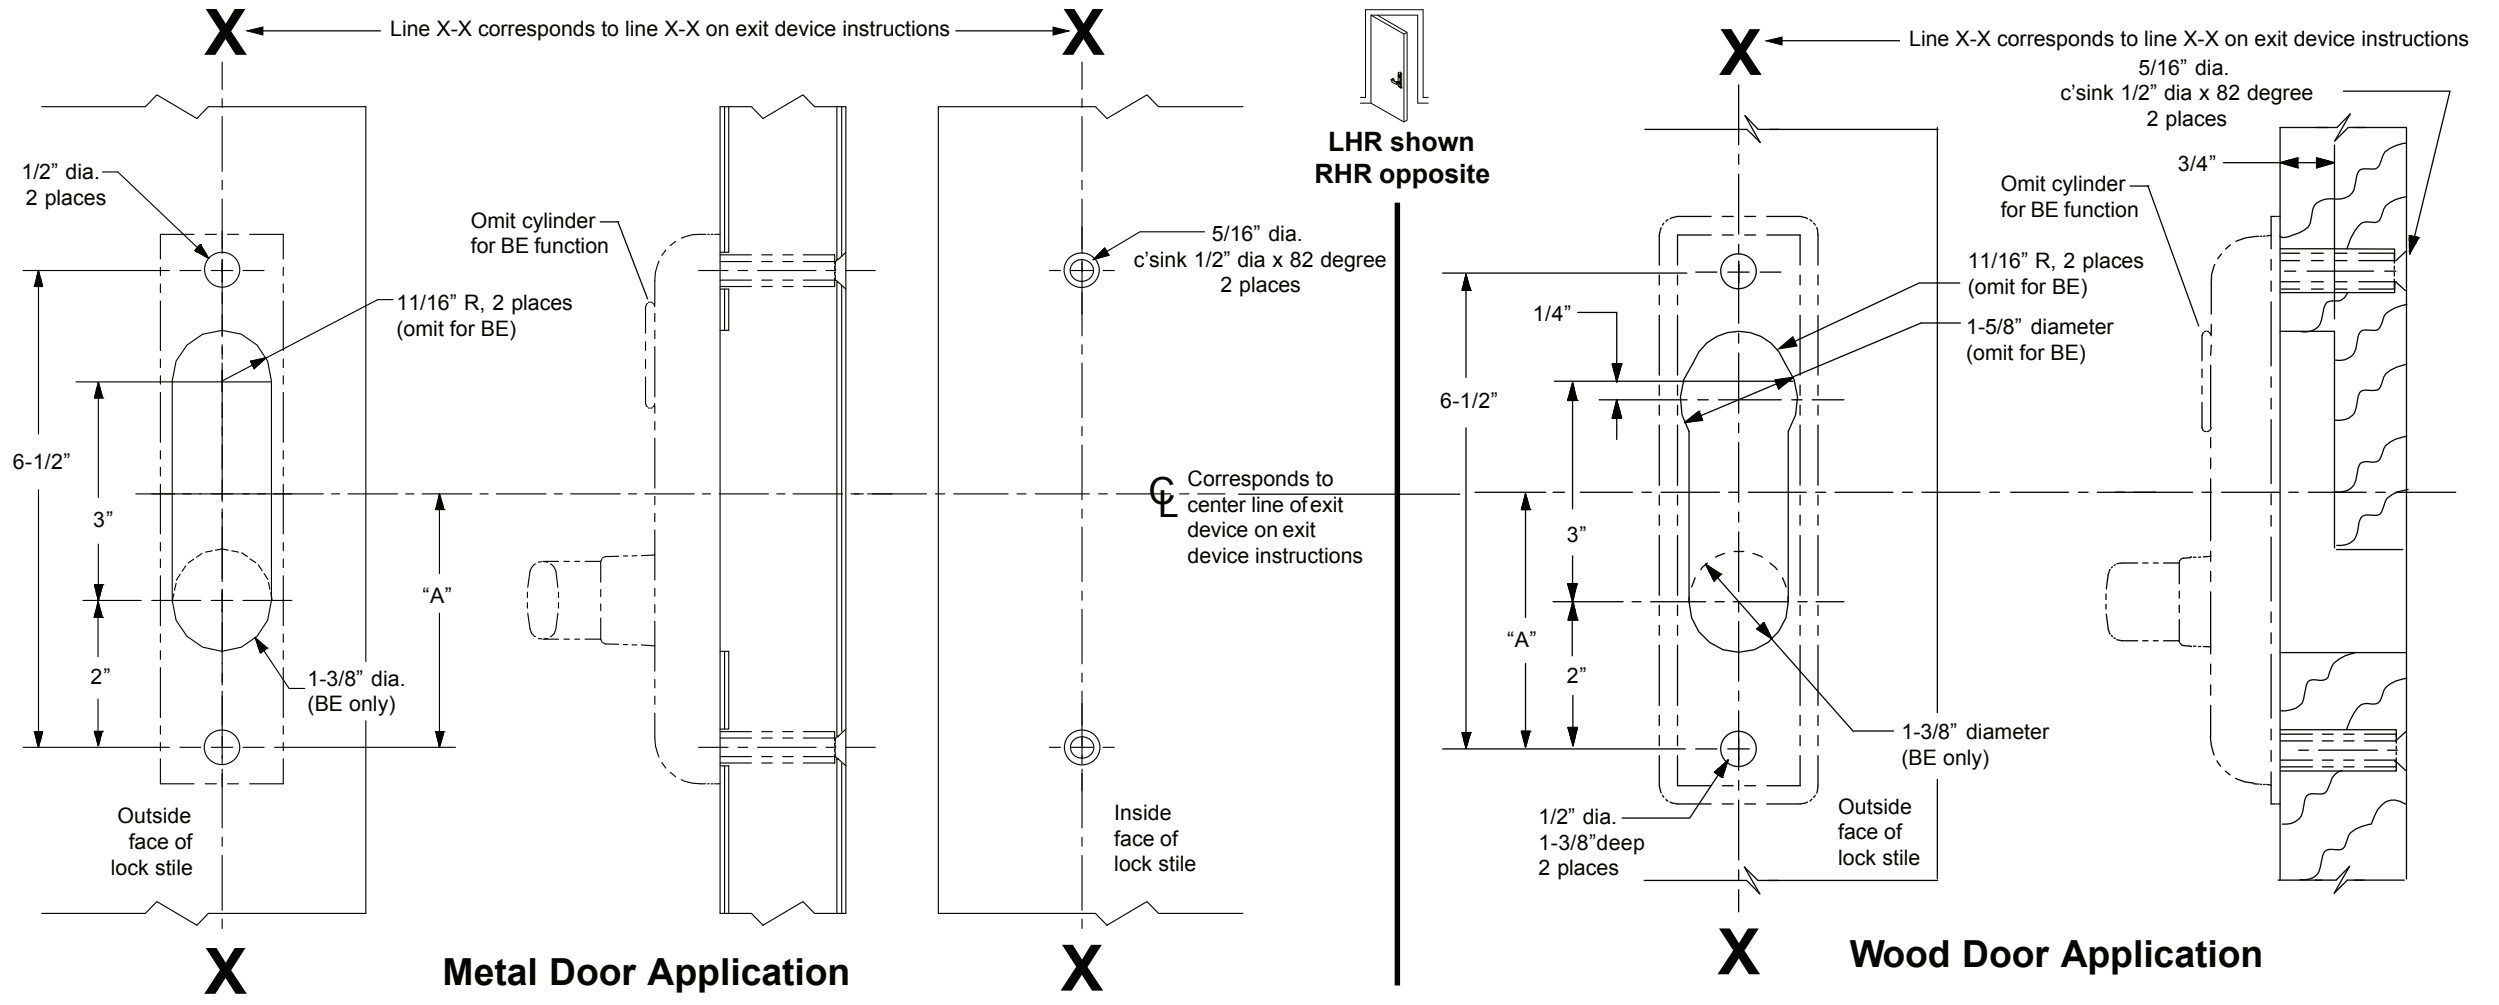

For cutouts on inside face of door see instructions in device carton.	Device Application Schedule	
	Device	Dimension "A"
	8827-K, 8827-K-F	3-1/2"
	88 Mortise	3-1/4"
	44 Mortise	3-3/16"

Customer Service
 1-877-671-7011 www.allegion.com/us

