



921257-00

Trim


880EO/DT/NL

VON DUPRIN®

Installation Instructions

- 1. Prepare door for exit device. See exit device instructions for holes, line X-X, and center lines.
- 2. Prepare door for trim:
 - A. Transfer line X-X from inside (exit device side) of door to outside (trim side) of door. Use extra care if edge of door is beveled.
 - B. Locate and prepare all holes as shown.
- 3. Apply trim.
- 4. Apply exit device.

Device Application Schedule	
Trim	Device
880EO/DT	8827 Vertical Rod 8875 Mortise Lock
880NL	8875 Mortise Lock

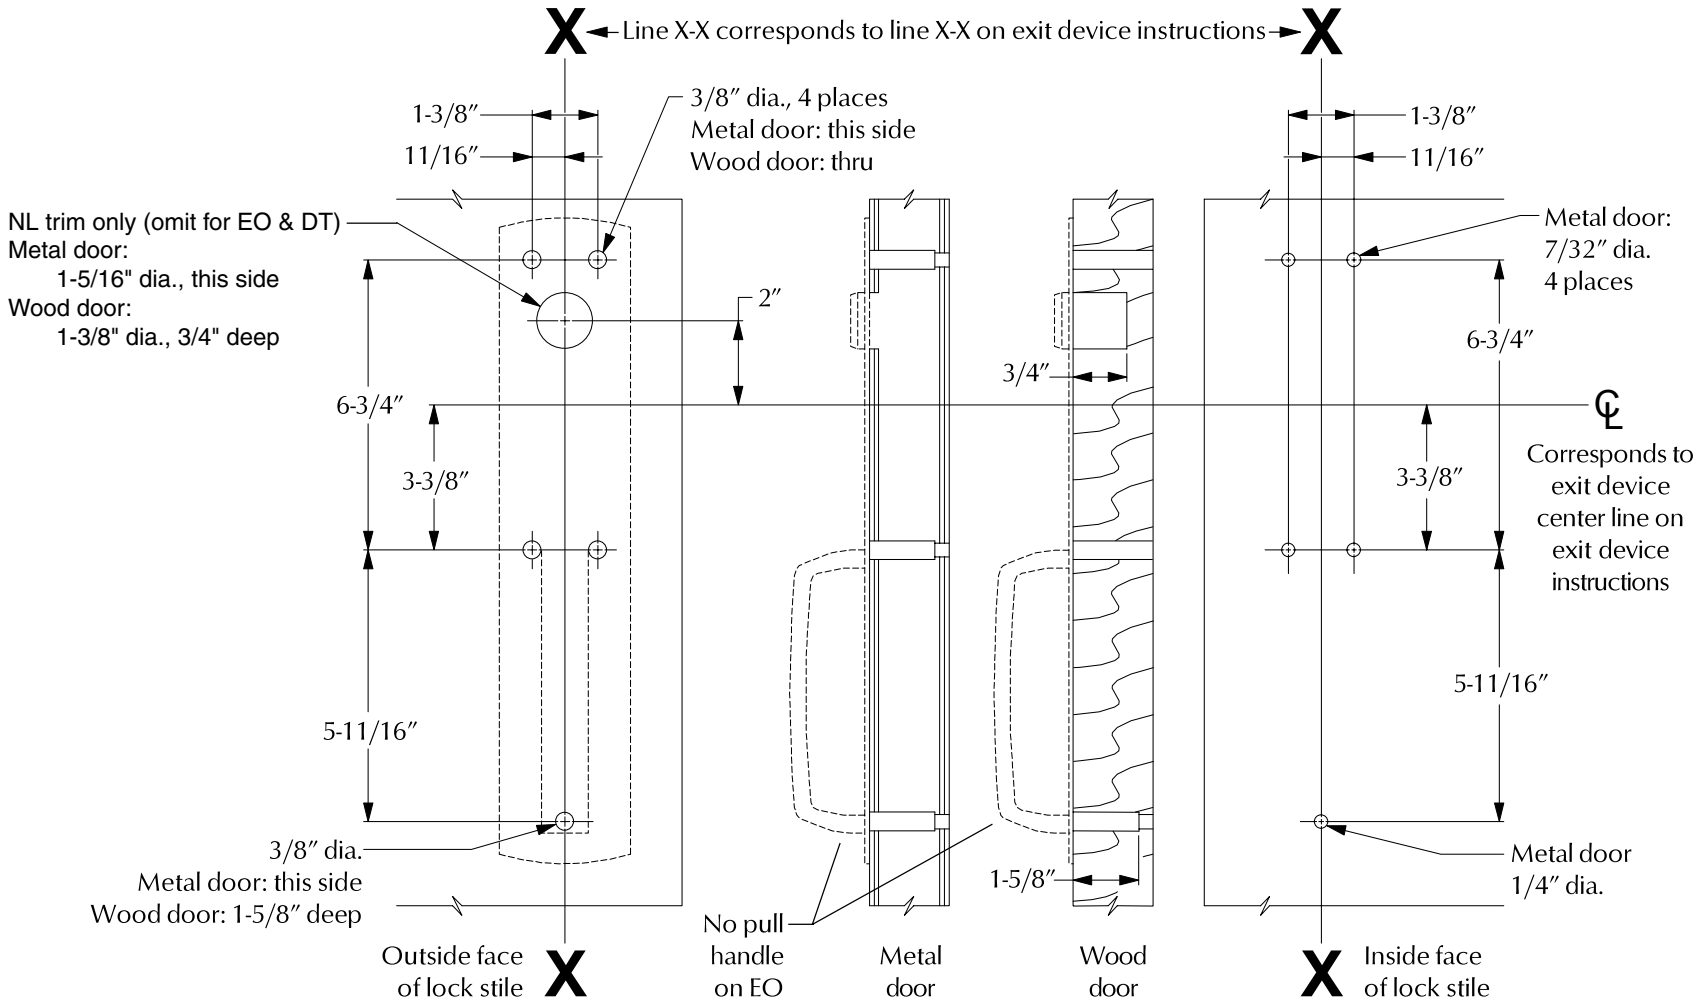

LHR shown, RHR opposite
For cutouts on inside face of door, see exit device instructions

Customer Service

1-877-671-7011 www.allegion.com/us



© Allegion 2014
Printed in U.S.A.
921257-00 Rev. 01/14-c



921249-00


Surface Applied Trim for 8847/47-F Vertical Rod Devices

880DT

VON DUPRIN®

Installation Instructions

1. Prepare door for exit device. See exit device instructions for holes, line X-X, and center lines.
2. Prepare door for trim:
 - A. Transfer line X-X from inside (exit device side) of door to outside (trim side) of door. Use extra care if edge of door is beveled.
 - B. Locate and prepare all holes as shown.
3. Apply trim.
4. Apply exit device.

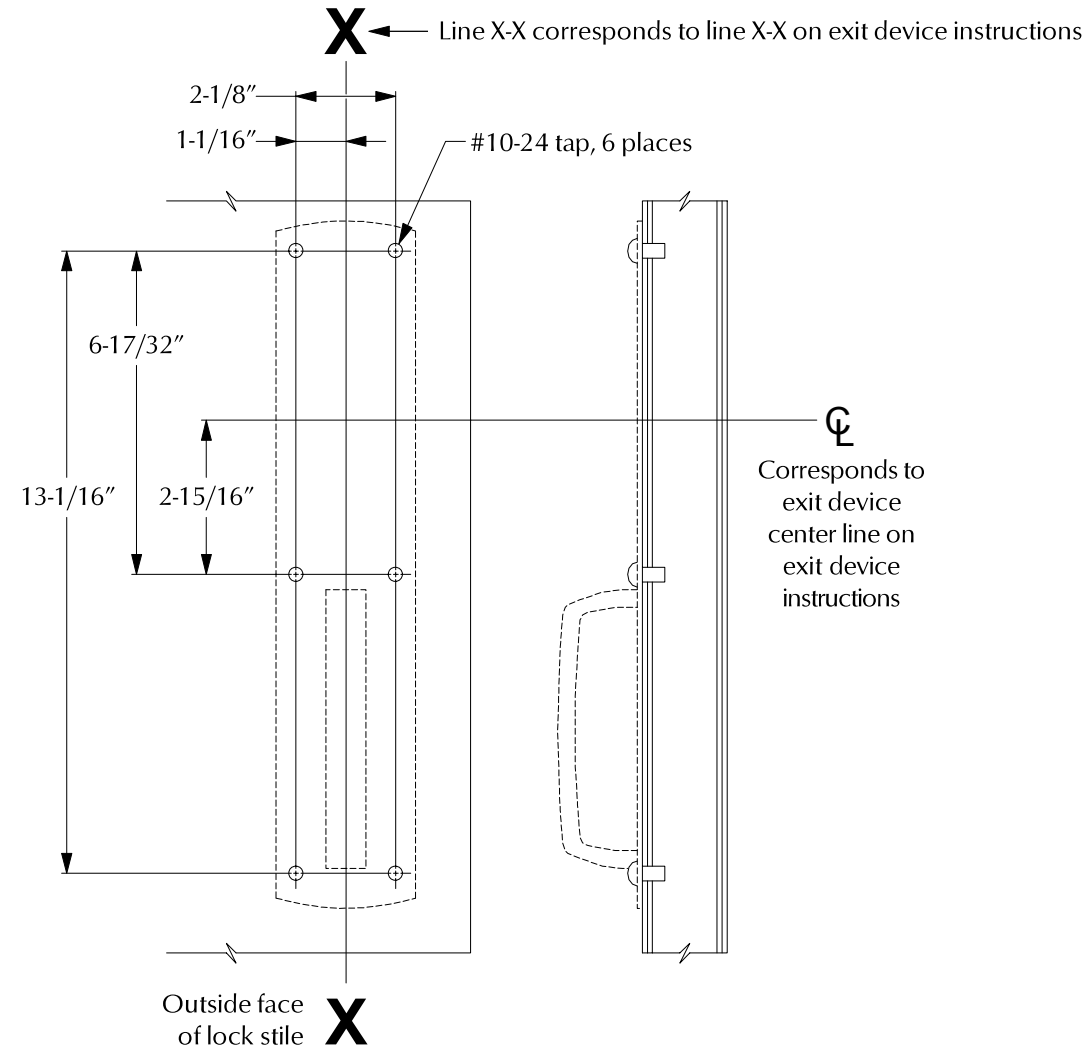

LHR shown, RHR opposite

For cutouts on inside face of door, see exit device instructions

Customer Service

1-877-671-7011

www.allegion.com/us



© Allegion 2014
Printed in U.S.A.
921249-00 Rev. 01/14-b