



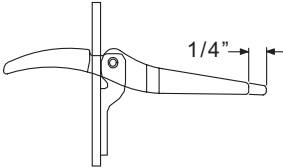
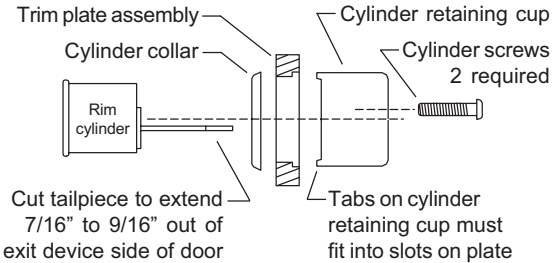
921265-00

990TP/TP-BE/NL

VON DUPRIN®

Trim for Rim and Vertical Rod Devices

Installation Instructions

1 Prepare door for exit device. See exit device instructions for holes, line X-X, and center lines.	4 For TP and TP-BE trim on 1-3/4" thick door, cut 1/4" off hump piece.
2 Prepare door for trim: 2a Transfer line X-X from inside (exit device side) of door to outside (trim side) of door. Use extra care if edge of door is beveled. Be sure line X-X is parallel to edge of door. 2b Locate and prepare holes as shown.	 1/4" cutoff required on thumbpiece for TP and TP-BE trim on 1-3/4" thick doors
3 For TP and NL trim, install rim cylinder.  Trim plate assembly Cylinder collar Rim cylinder Cut tailpiece to extend 7/16" to 9/16" out of exit device side of door Cylinder retaining cup Cylinder screws 2 required Tabs on cylinder retaining cup must fit into slots on plate	5 Apply trim. 6 For TP and NL trim, cut cylinder tailpiece to extend 7/16" to 9/16" out of exit device side of door. 7 Apply exit device, thru-bolt to trim (4 places), and use screw and #12 countersink washer for lower trim mounting stud.

