






911373-00

98/99

VON DUPRIN®

Rim Exit Device

Installation Instructions

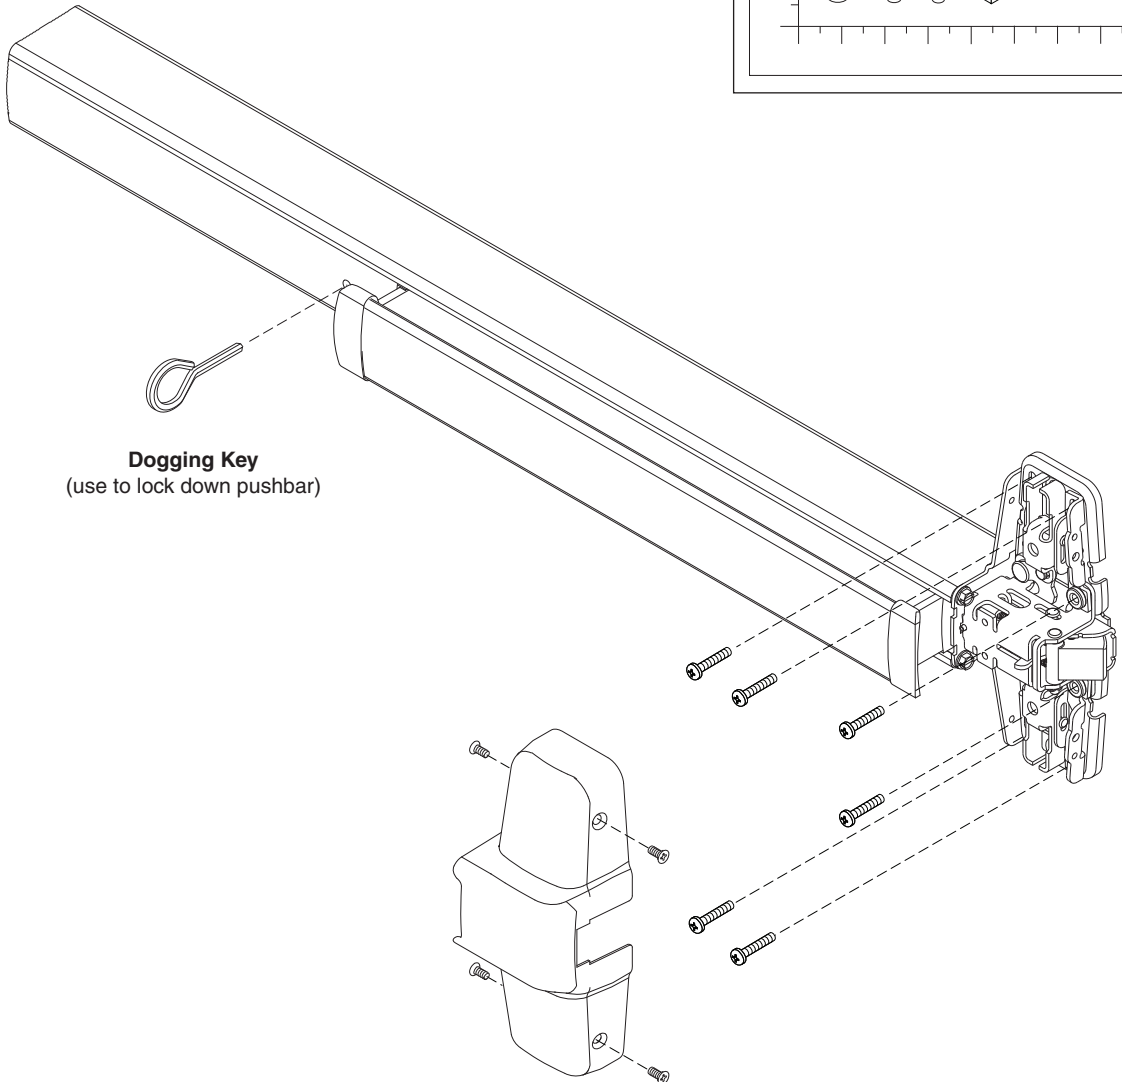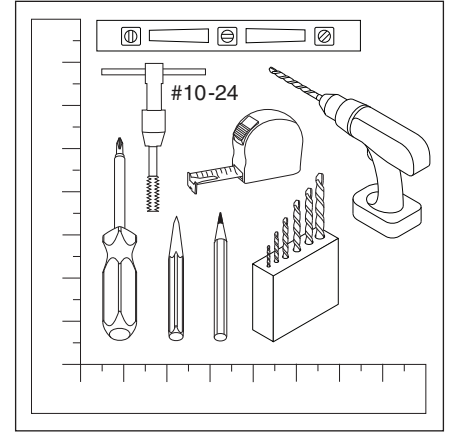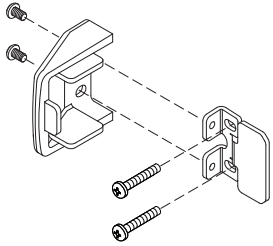













Dogging Key
(use to lock down pushbar)





Customer Service
1-877-671-7011 www.allegion.com/us

© Allegion 2015
Printed in U.S.A.
911373-00 Rev. 11/15-g

SCREW CHART

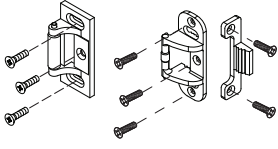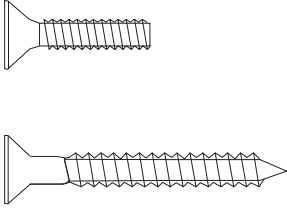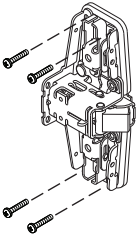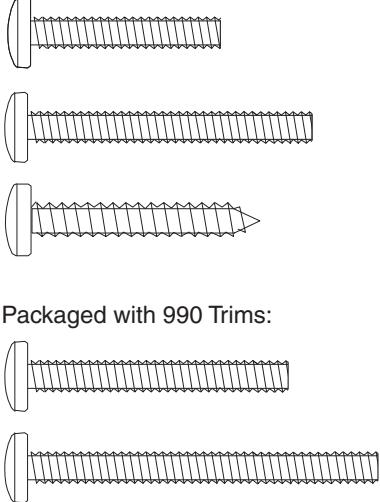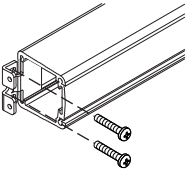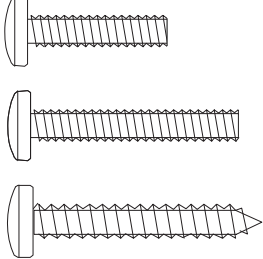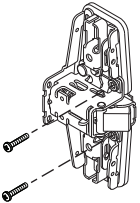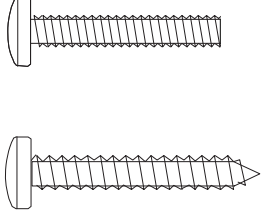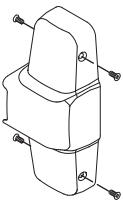Subassembly	Screw		Application
<p>A</p>  <p>299 Strike 499F Strike</p>		<p>#10-24 x 3/4" (19 mm)</p> <p>#10 x 1 1/2" (38 mm) Wood screw</p>	<p>Metal frame</p> <p>Wood frame</p>
<p>B</p> 	 <p>Packaged with 990 Trims:</p>	<p>#10-24 x 1" (25 mm)</p> <p>#10-24 x 1 1/2" (38 mm)</p> <p>#10 x 1 1/4" (32 mm) Wood screw</p> <p>#10-24 x 1 3/8" (35 mm)</p> <p>#10-24 x 1 7/8" (48 mm)</p>	<p>Surface mount or Sex bolts 1 3/4" (44 mm) door</p> <p>Sex bolts, 2 1/4" (57 mm) door</p> <p>Surface mount (wood)</p> <p>1 3/4" (44 mm) door, 990 Trim</p> <p>2 1/4" (57 mm) door, 990 Trim</p>
<p>C</p> 		<p>#10-24 x 3/4" (19 mm)</p> <p>#10-24 x 1 1/8" (29 mm)</p> <p>#10 x 1 1/4" (32 mm) Wood screw</p>	<p>Surface mount or Sex bolts 1 3/4" (44 mm) door</p> <p>Sex bolts, 2 1/4" (57 mm) door</p> <p>Surface mount (wood)</p>
<p>D</p> 		<p>#10-16 x 3/8" (10 mm) Thread cutting</p>	<p>End cap</p>
<p>E</p> 		<p>#10-24 x 1" (25 mm)</p> <p>#10 x 1 1/4" (32 mm) Wood screw</p>	<p>Surface mount (metal)</p> <p>Surface mount (wood)</p>
<p>F</p> 		<p>#8-18 x 3/8" (10 mm) Thread cutting</p>	<p>Center case cover</p>


1 Draw horizontal device and strike center lines (☉).

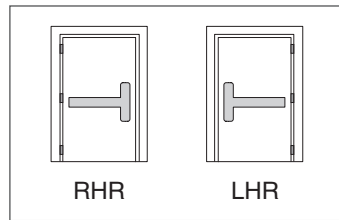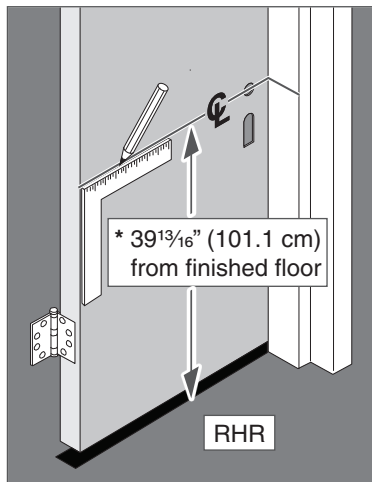


* For double doors with a mullion and strike already installed, use existing strike center line.

2 Align strike on ☉ and mark the two slotted holes.

ⓘ For 499F strike installation, see page 6.


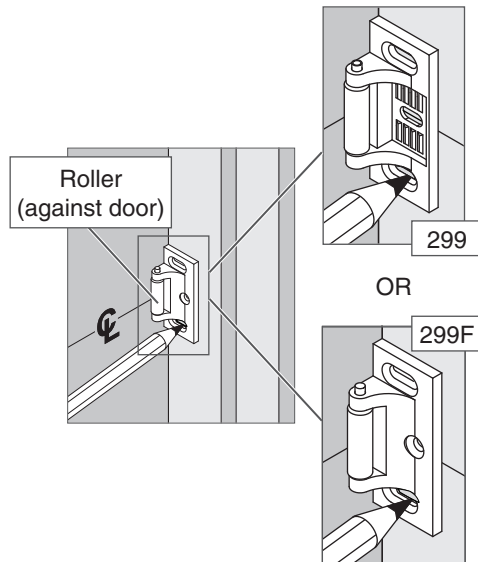


ⓘ For more information on the strikes shown below, go to <http://w3securitytechnologies.com> and look for the Support area for Von Duprin installation instructions.

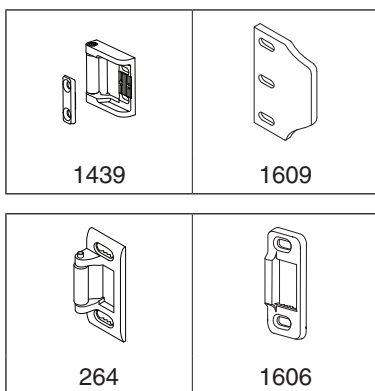


3 Prepare 2 holes and install 2 screws.


ⓘ See "Screw Chart" on previous page for screw types and sizes

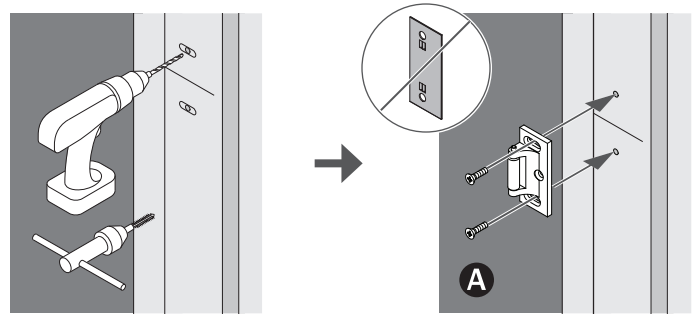


OR




4 Position template against strike and on ☉ and mark door.

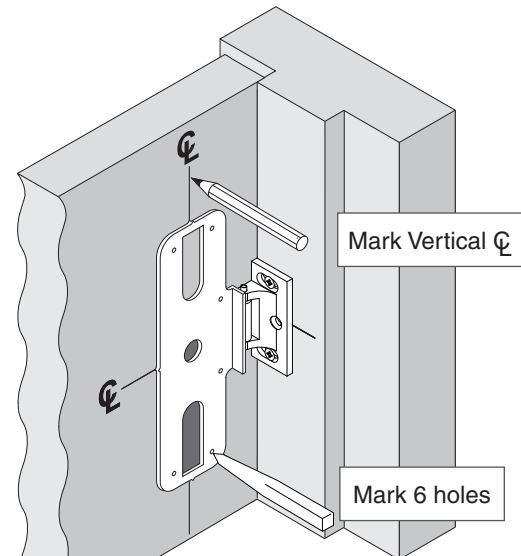

5 If necessary, prepare cutouts for cylinder and trim.

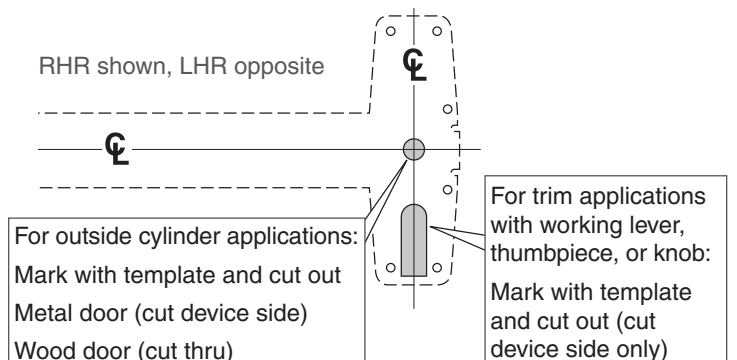


6 Prepare 4 center case mounting holes.

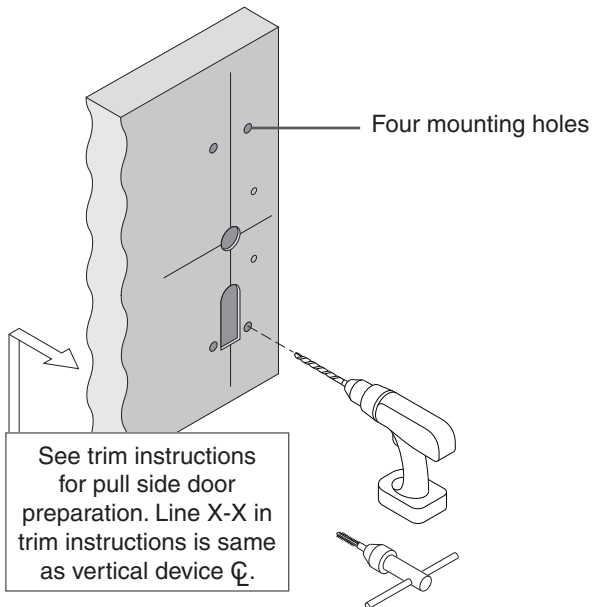

	SURFACE MOUNT	OR	SEX BOLTS or 990 TRIMS
WOOD	#25		1/4" (6 mm) Device Side
METAL	#10-24		13/32" (10 mm) Trim Side
	1/8" (3 mm) x 1" (25 mm) Deep		13/32" (10 mm) Drill Thru

7 Prepare 2 center case support holes.

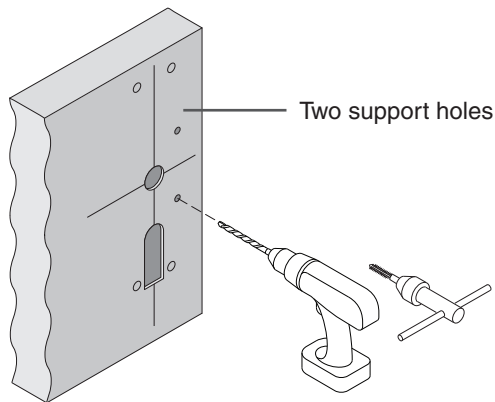


	METAL	OR	WOOD
	98/99 and 98/99-F		98/99
	#25		1/8" (3 mm) x 1" (25 mm) Deep
	#10-24		98/99-F
			#825 Sex bolts (2) required
			1/16" (2 mm) 3/8" (10 mm)
			Exterior
			5/16" (16 mm)

8 If necessary, remove NL drive screw

NL drive screw

Factory installed on back of center case

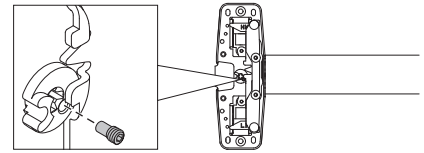

With the NL drive screw removed, key locks and unlocks lever, knob, or thumb piece. For the trims listed below, **REMOVE** NL drive screw.


996L	696TP	990TP
996K	697TP	

With the NL drive screw installed, key retracts latch bolt. **DO NOT** remove NL drive screw for the following applications:

NL, EO, DT trims and 98/99-2 double cylinder devices (i.e. TP-2, L-2, and K-2).


*996L-BE	*E996L	*696TP-BE	*990TP-BE
*996K-BE	*E996L-BE	*697TP-BE	

* If the trim being installed is "BE" (i.e. 996L-BE), the trim lock tumbler on the back of the device must be in the **UP** position before device is installed. This allows the trim to be unlocked at all times.

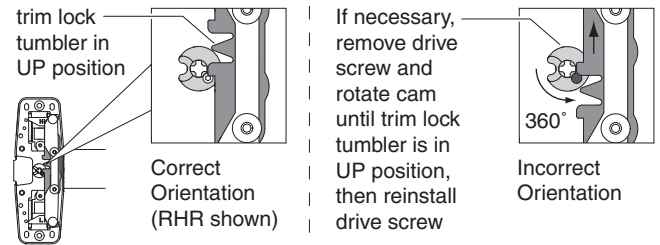


9 If using a cylinder with a tailpiece, prepare device and cylinder.


9a Install tailpiece guide.

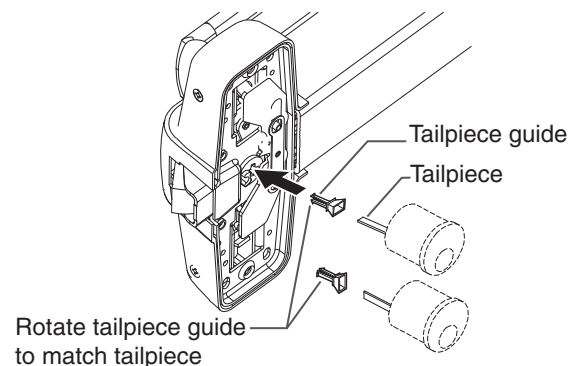

9b Cut tailpiece as needed.

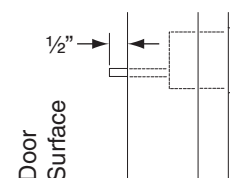


10 If necessary, cut device.

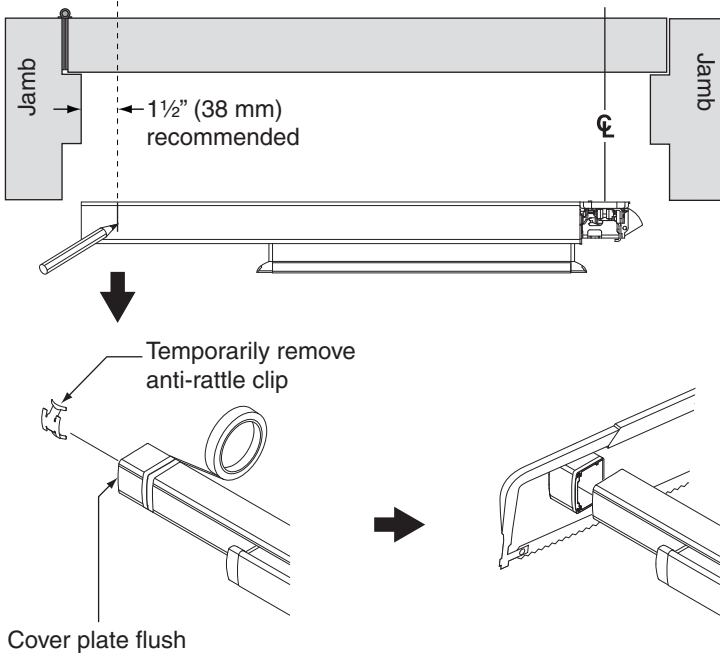


12 Mark and prepare two (2) holes.


i Prepare holes after lock side of device is mounted and hinge side is leveled.

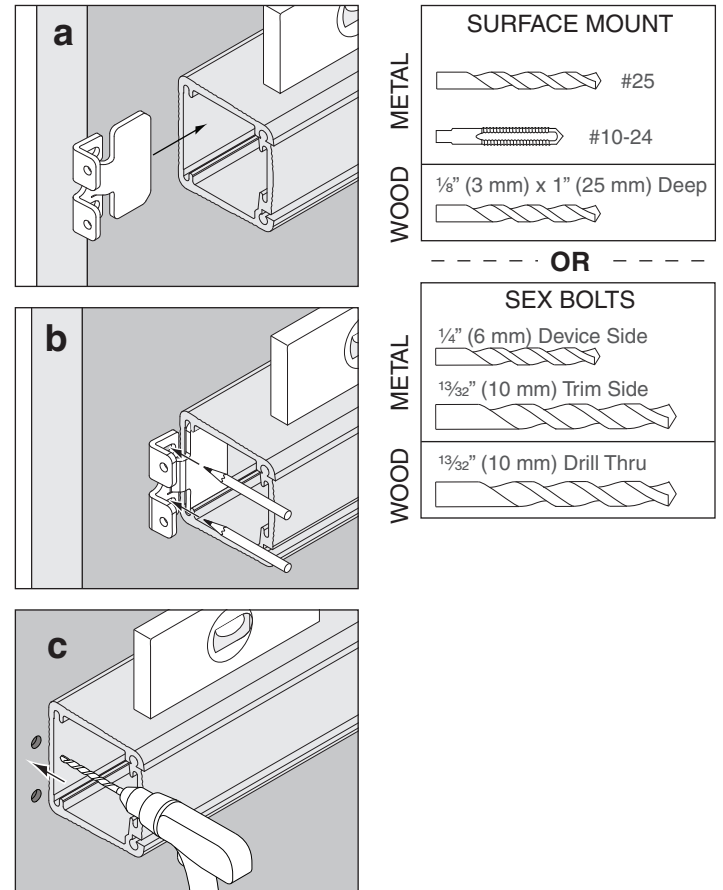

11 Attach center case to door.

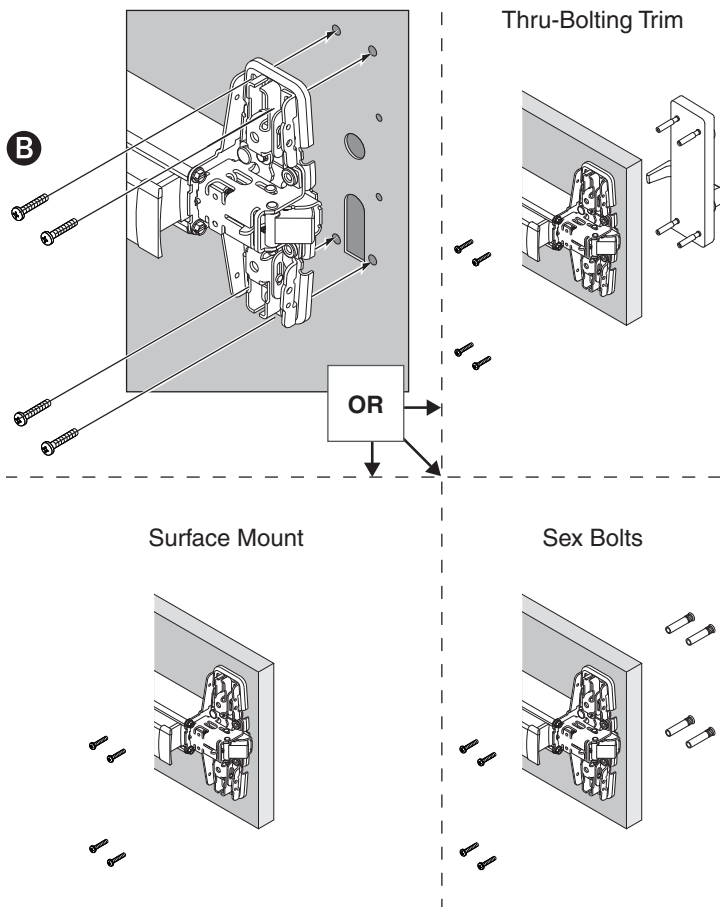


13 Install end cap bracket and end cap.

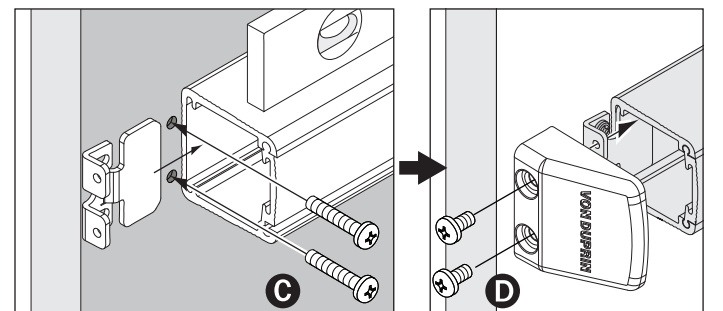


14 Install required support screws and center case cover.

Remove protective film from pushbar

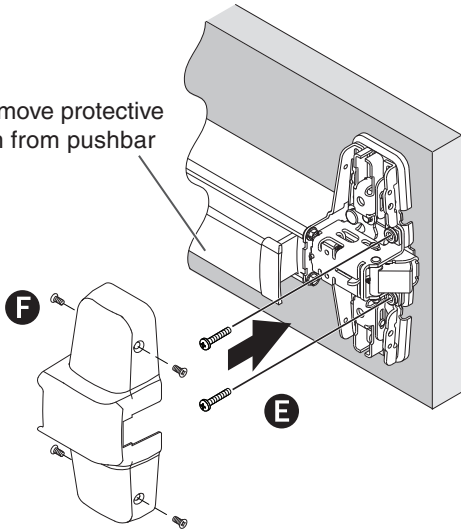


15 Adjust strike as needed.


299/299F Strike

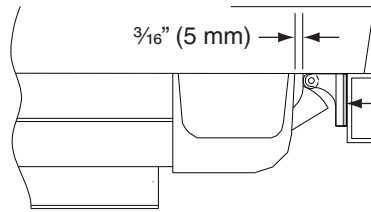

Shim as needed

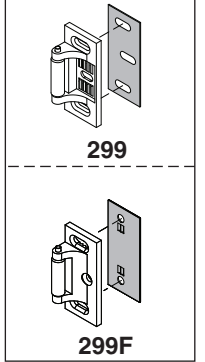


16 Install strike support screw.

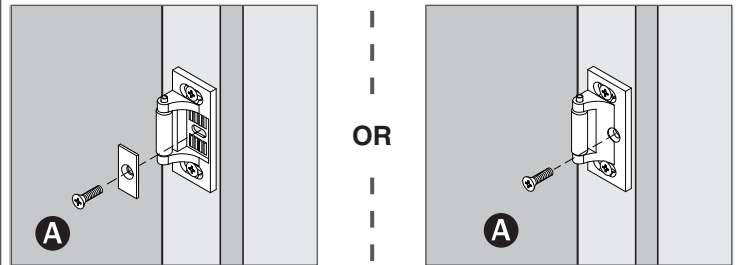

METAL	WOOD
#25	1/8" (3 mm) x 1" (25 mm) Deep
#10-24	


499F STRIKE INSTALLATION

1. Prepare and install screws through two strike slots.

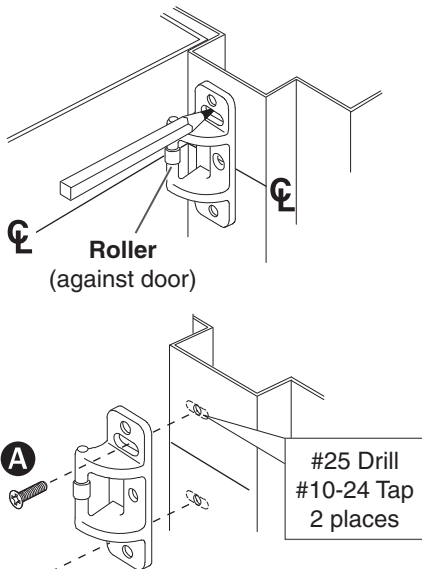


i If using a mullion, holes may be predrilled

2. Install strike hook and additional strike screws.


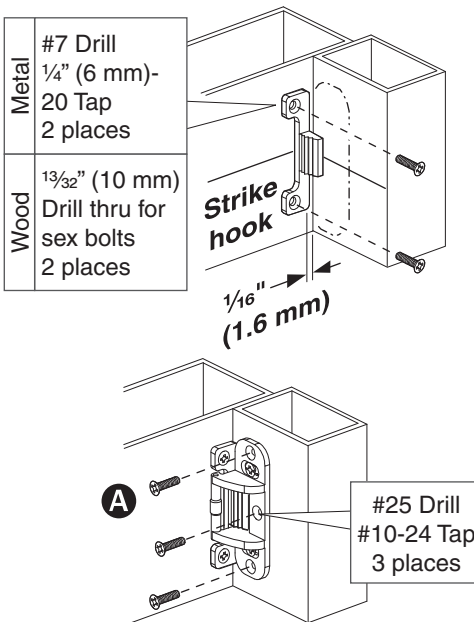


3. Template aligns as shown.

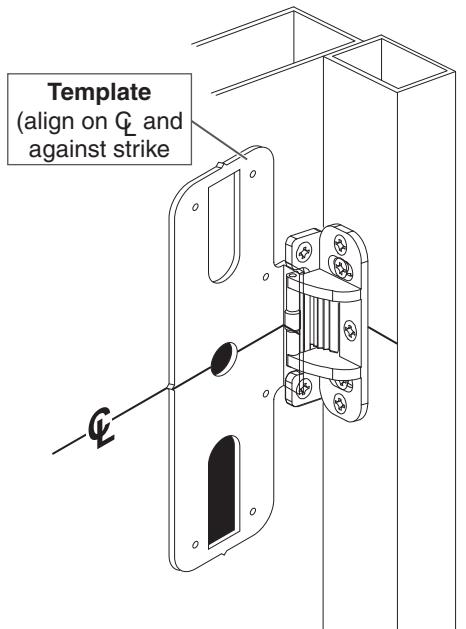


OPTIONAL EQUIPMENT

CD (Cylinder Dogging) Option

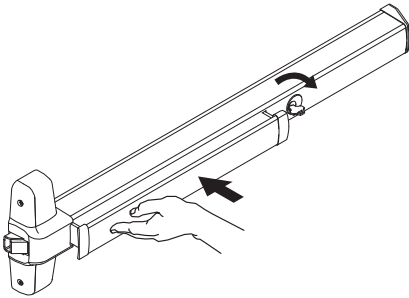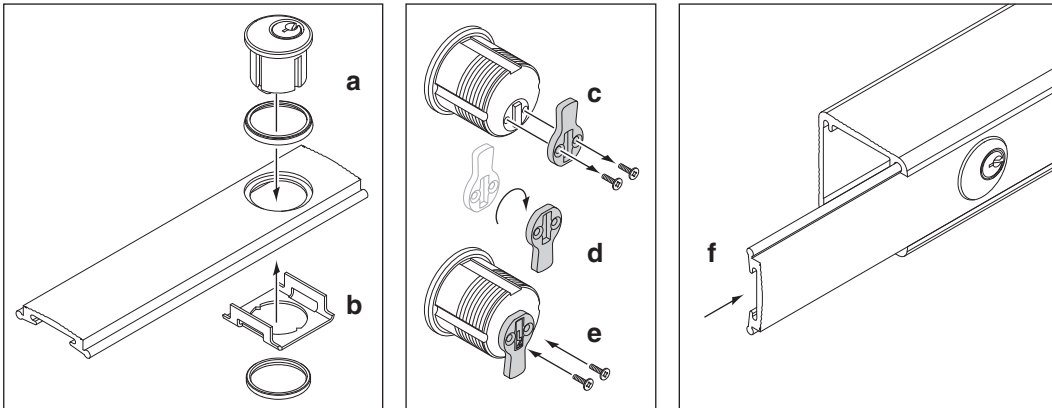





Dog

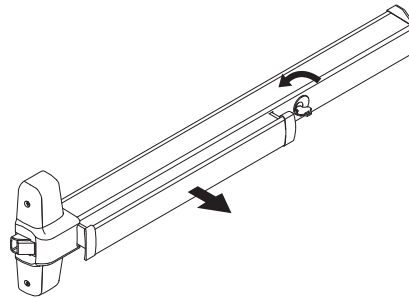

Undog


OPTIONAL EQUIPMENT

99-2 (Double Cylinder) Option

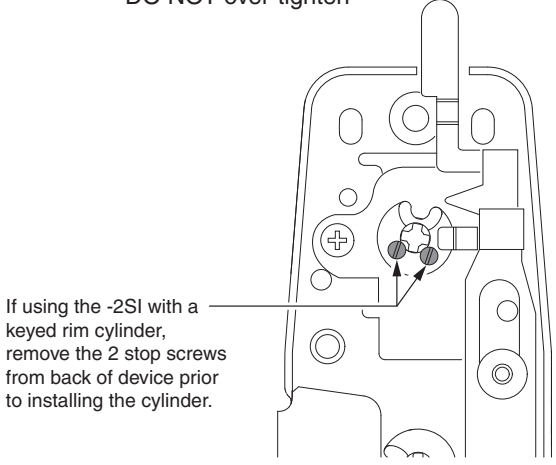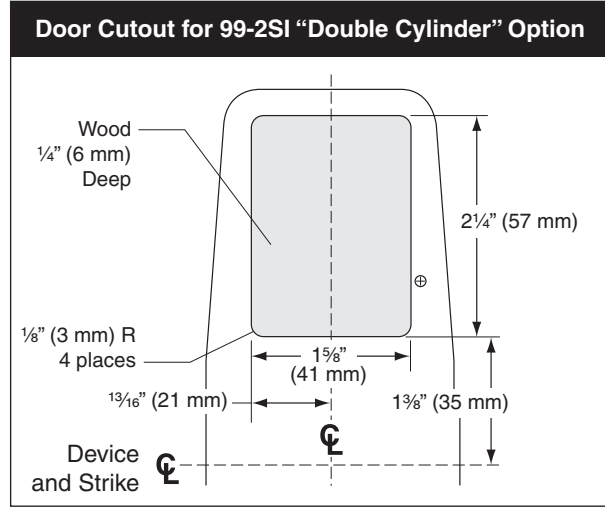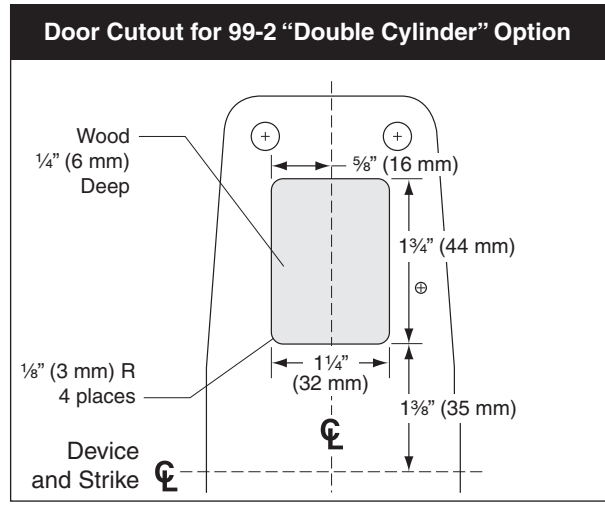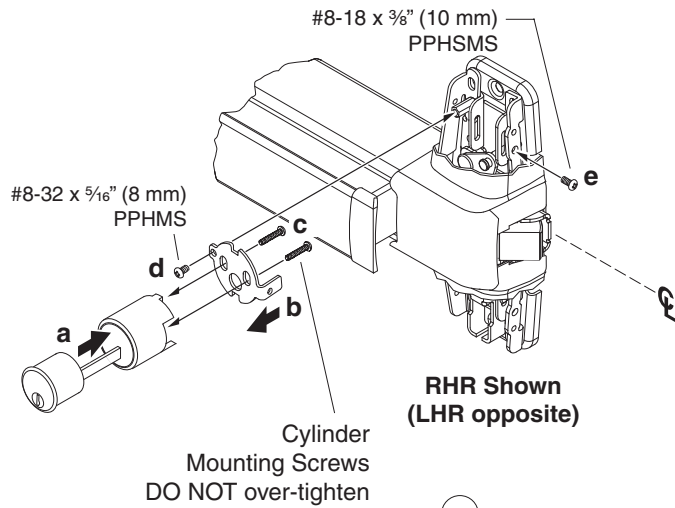

If using the -2SI with a keyed rim cylinder, remove the 2 stop screws from back of device prior to installing the cylinder.


For 98/99-2SI models with Classroom Security Indicator, apply supplied labels above and below cylinder to match door handing, and  label on indicator.

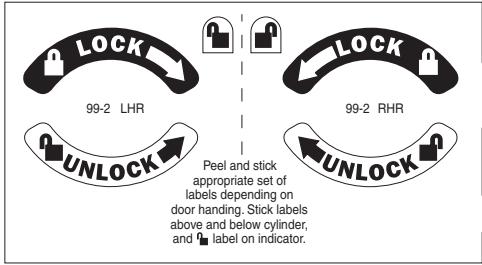

Manually affix the label:

Ensure surface is clean of dirt, dust, or oils. Clean with alcohol if necessary.

Peel the label from the paper backing and apply to the surface. Minimize handling when applying and use pressure to burnish label to surface. The adhesive will require up to 8 hours to achieve the proper bond.

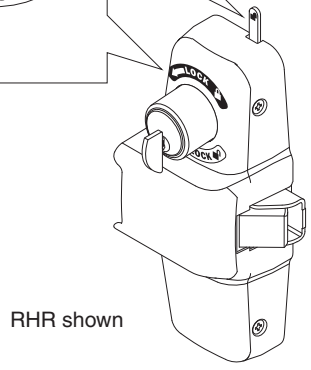



24908386

QEL 33A/35A, 98/99 Series

VON DUPRIN®


Conversion Kit

Installation Instructions




1. This kit converts all 33/35A and 98/99 series mechanical exit devices to quiet electric latch (QEL) retraction devices.
2. This kit can also be used for motor replacement on existing QEL devices.
3. Install according to instructions or device will not function and panic or fire label will be void.
4. The QEL wiring must be attached to the fire alarm system if installed on fire exit hardware.
5. If existing device is fire rated or less dogging a QEL baseplate conversion kit is required.

Parts

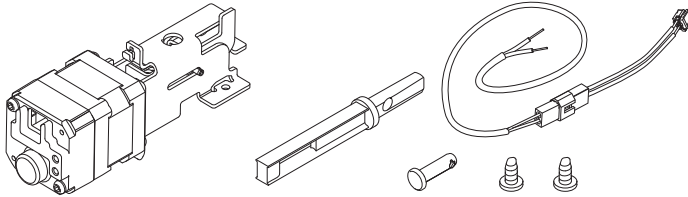

QEL

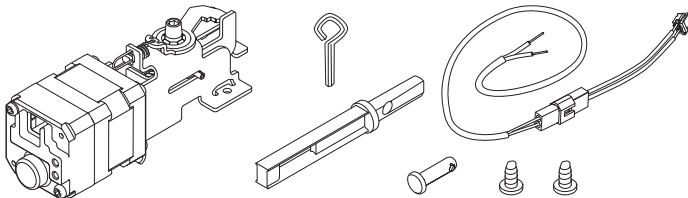


HD-QEL (Hex Dogging QEL)



WARNING

If existing exit device is fire rated, do not install HD-QEL (hex dogging) type motor. Doing so will void fire rating.

3 Remove Exit Device from Door

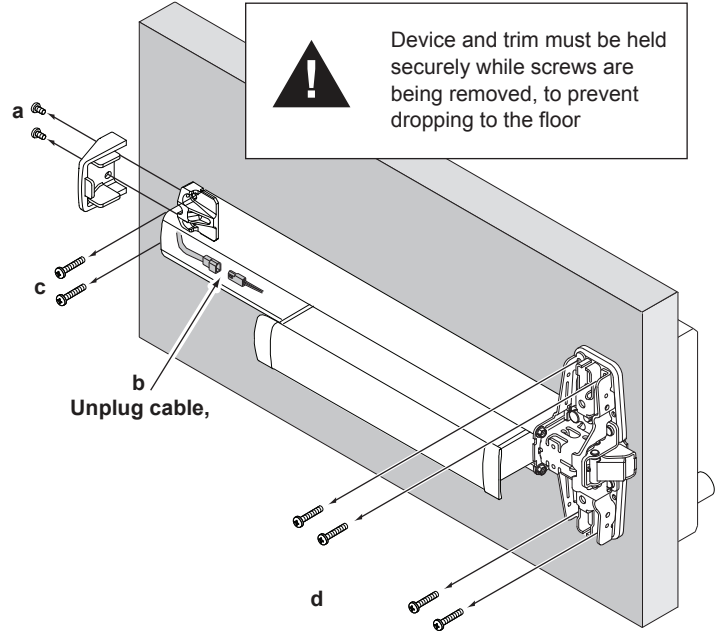


1 Disconnect Power

To avoid risk of shock, disconnect AC power from power supply before proceeding with this conversion. If using 900-BB Battery Backup option, unplug all four wires from battery terminals.

2 Detach Vertical Rods if present

Refer to device instructions as needed.


4 Remove Mechanism Case

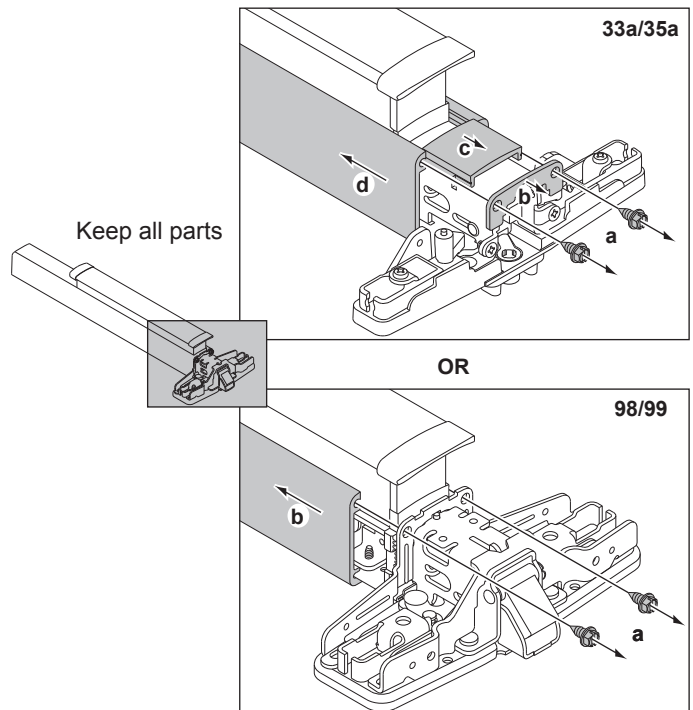


5 Prepare baseplate for new motor. Find your existing application below (on page 2 or 3) and follow steps.

FIRE OR LESS DOGGING DEVICE
(Applies to exit devices built after October 2014.
Baseplate conversion kit required for earlier devices.)

1. Remove pushpad from baseplate.

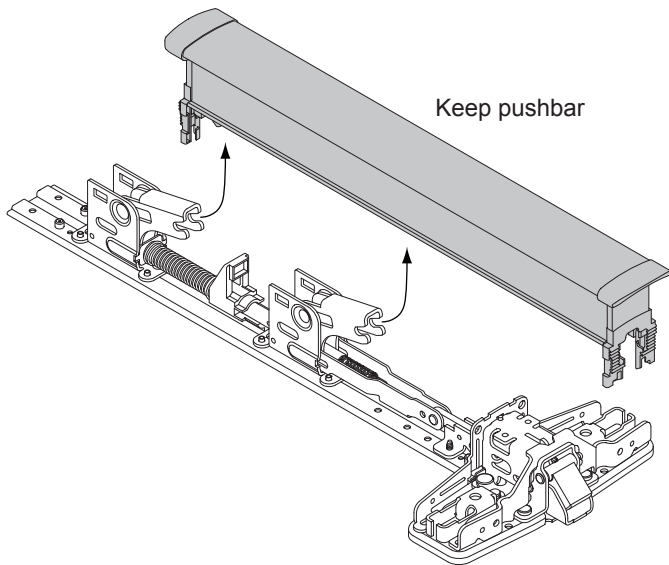


2. Install connector and pin.

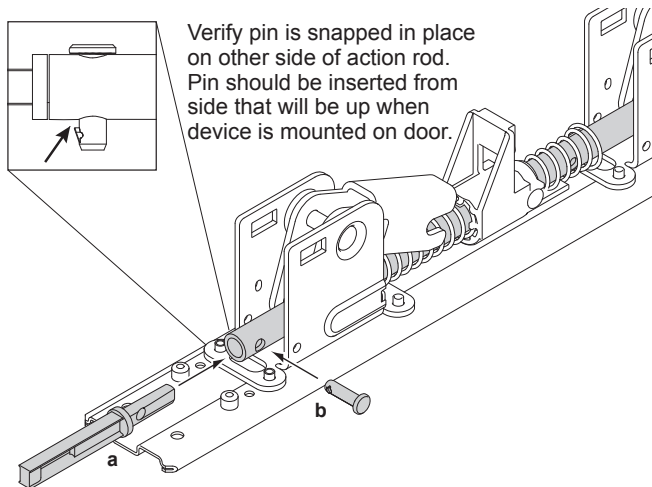


QEL DEVICE (built prior to December 2014)

1. Remove existing QEL motor

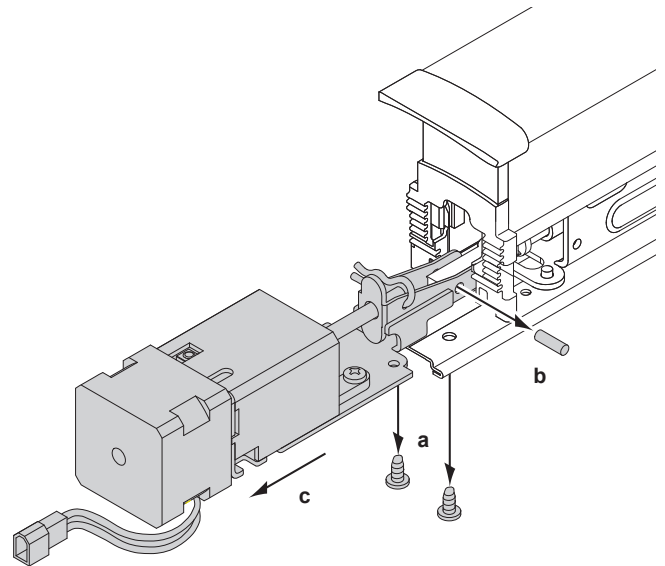


2. Discard old QEL motor assembly.

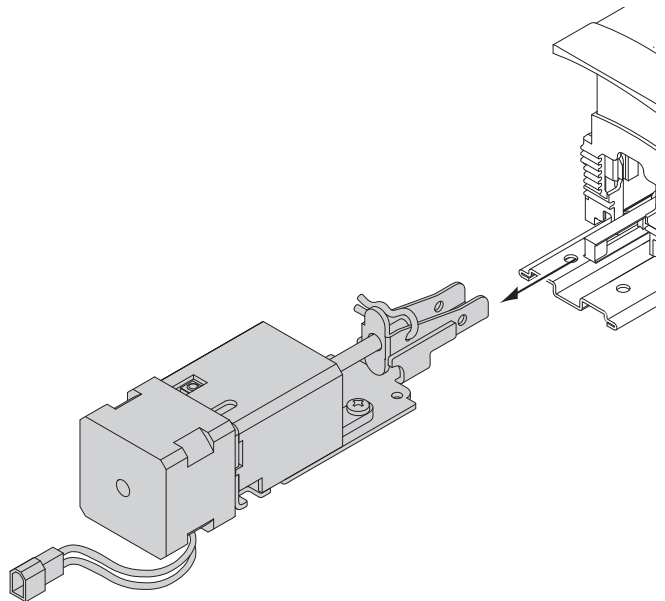


QEL DEVICE (built after December 2014)

1. Remove existing QEL motor.

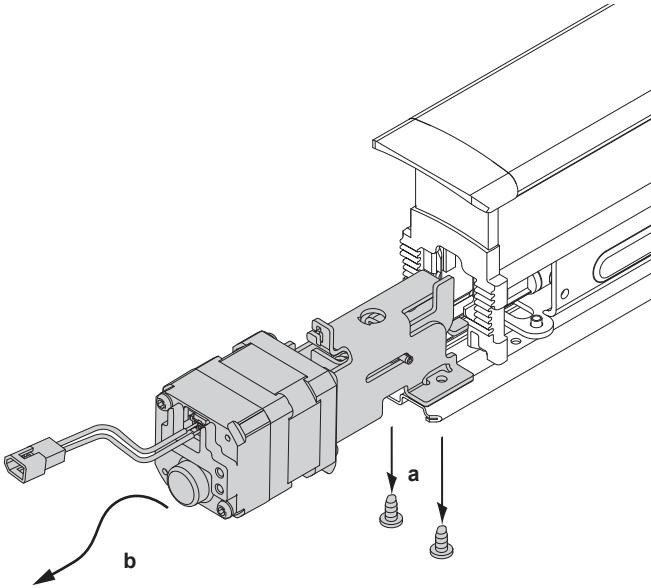


2. Discard old QEL motor assembly.

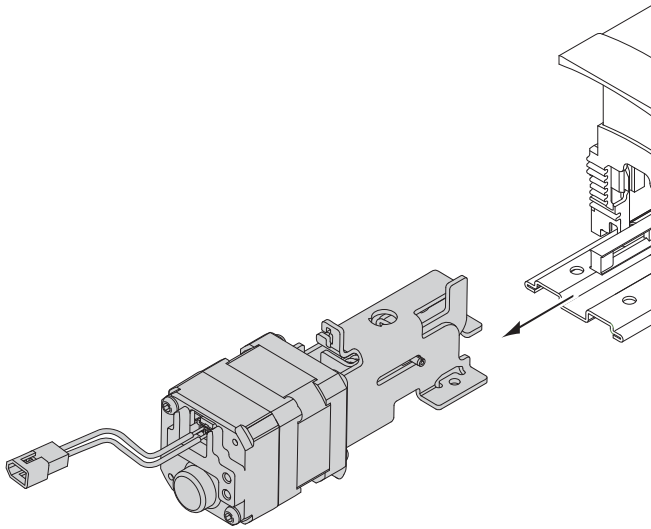


PANIC DEVICE (with dogging assembly)


1. Remove two screws from dogging assembly. If riveted see below.

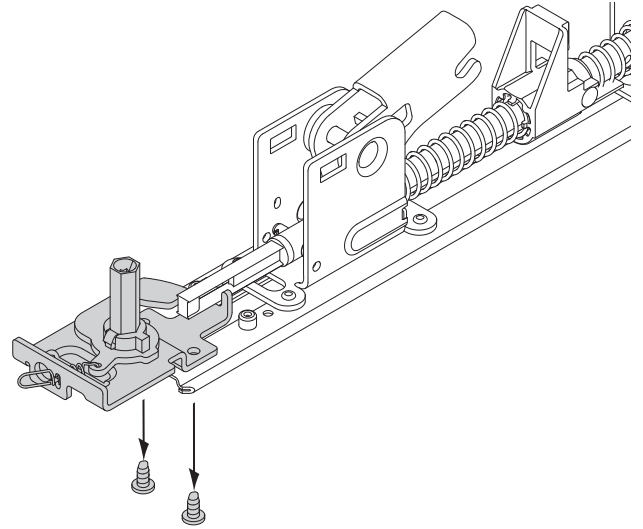



2. Drill or use center punch on two rivet heads until rivets can be removed from baseplate.

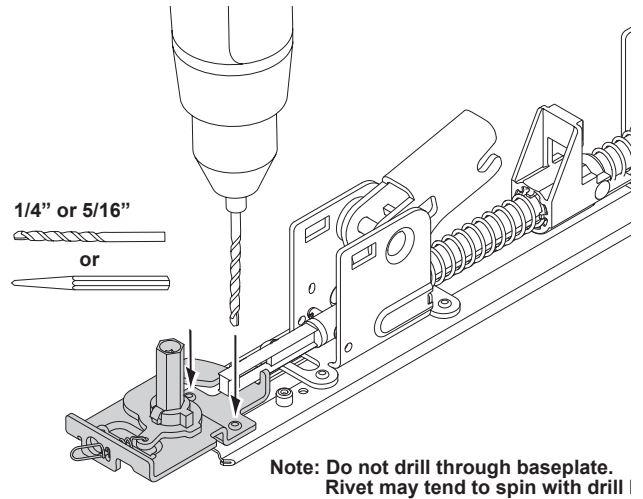


3. Remove and discard dogging assembly.

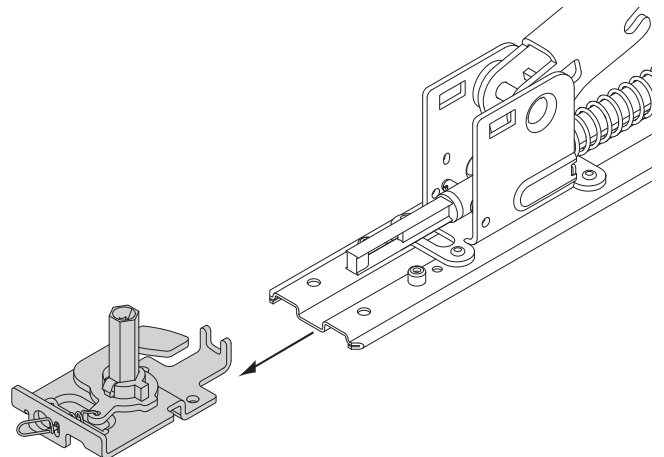


6 Install New QEL Motor Assembly

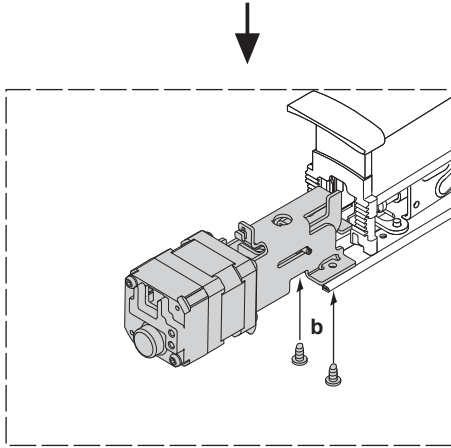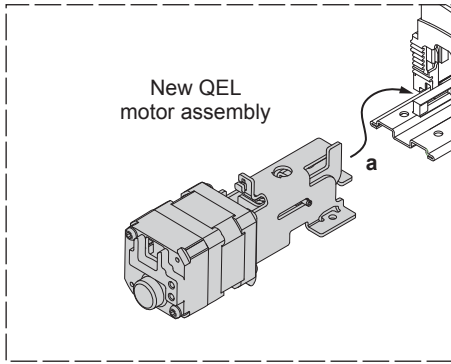

7 Install Mechanism Case

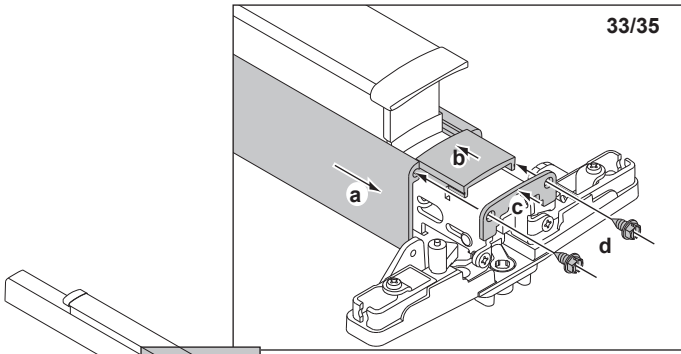


OR

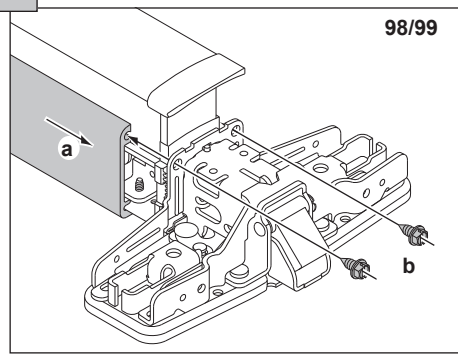


8 Prepare dogging cover for HD dogging key (if applicable and only on panic devices).


8a Locate and drill hole

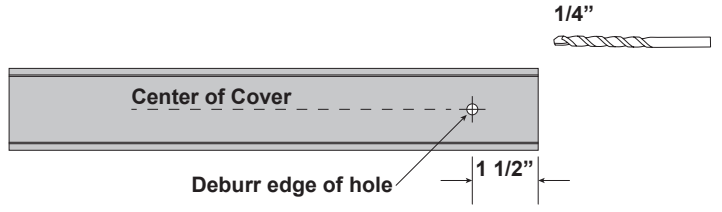


8b Install dogging cover

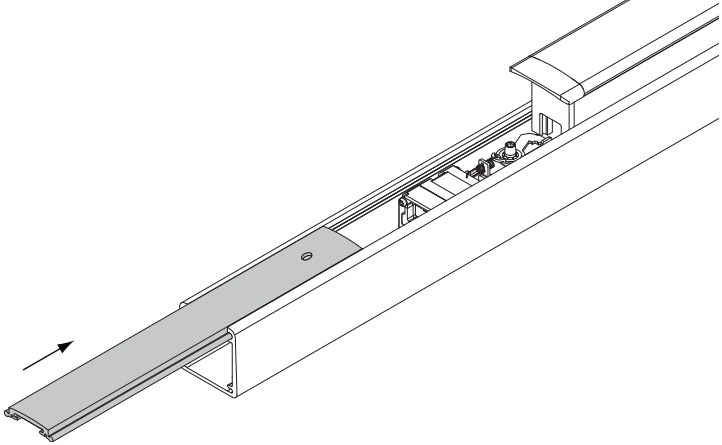

9 Drill Wire Access Hole (if required)

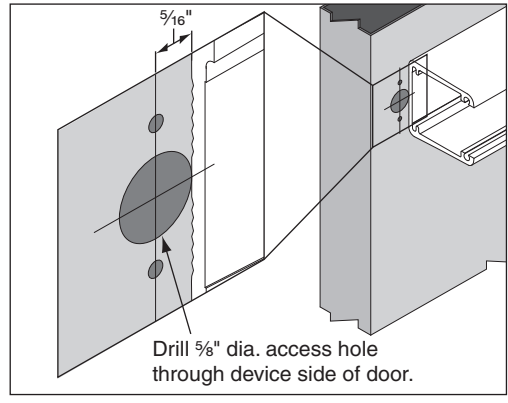

10 Attach Exit Device to Door

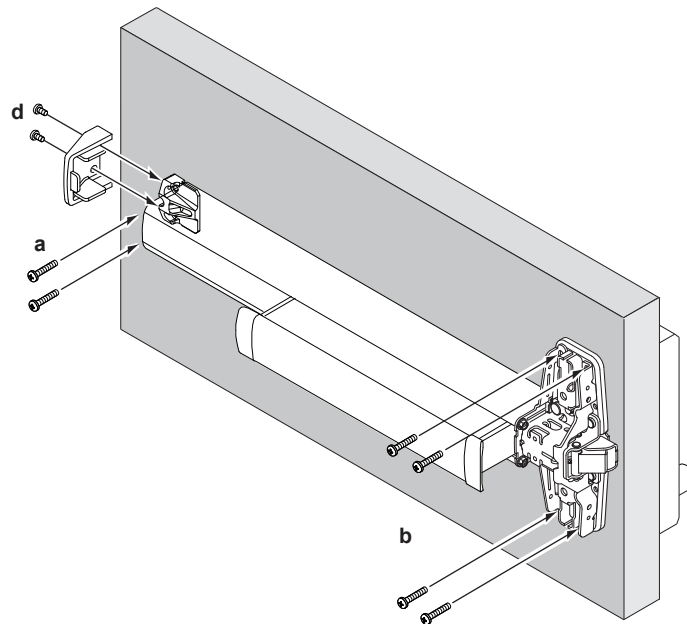


For more detailed installation instructions for specific Exit Devices, visit the Support area of the Allegion website at www.allegion.com/us

11 Confirm Equipment Compatibility

The QEL is compatible with the following equipment (refer to individual instructions as needed):


- PS900-SERIES Power Supplies - PS902, PS904, PS906, PS914
- 900-SERIES Option Boards - 900-2RS, 900-4R, 900-4RL, 900-2Q
- PS873 Power Supply Plus 871-2, 871-2Q, 873-4TD/AO Option Boards

12 Route Two Wires from QEL Exit Device to Power Supply

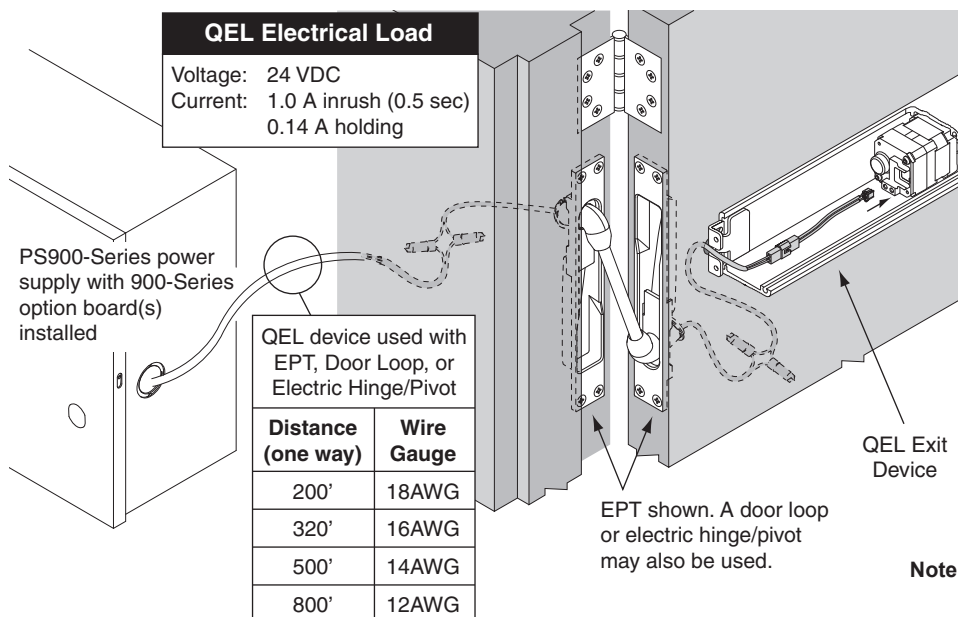


13 Install 900-2Rs, 4RI, or 4R Option Board(s) into Power Supply


a Review Available 900 series Option Board Mounting Locations (Gray)

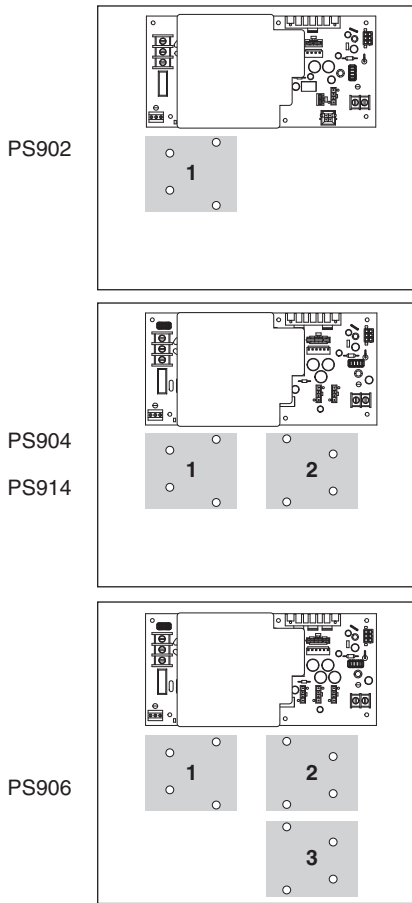

b Plug Option Board Cable into any Available Option Connector

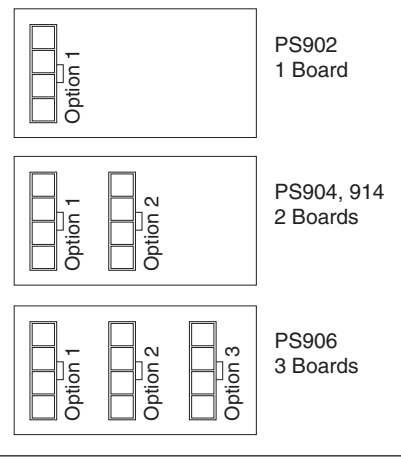


c Secure Board(s) with Screws

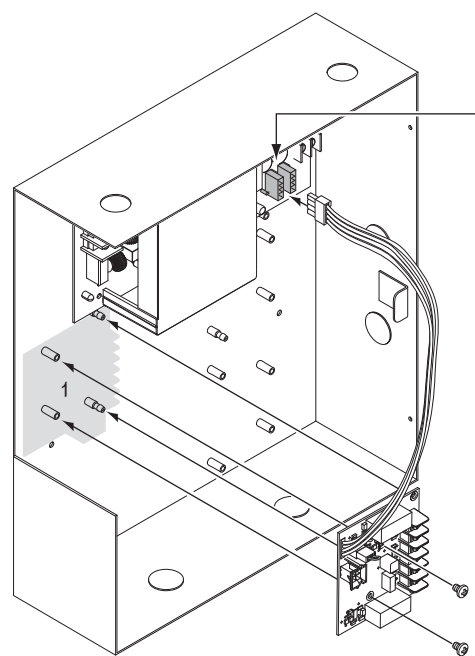

- Notes:**
1. 24VDC output setting required when QEL device connected
 2. If installing board in location 2 or 3, rotate board 180°
 3. The QEL is compatible with an existing 900-2Q board if currently installed.
 4. Latchbolt retraction of (2) sequenced QEL's requires more than 1 second to complete.
 5. When powering multiple components, verify that the amperage requirements of all components combined does not exceed the power supply output rating.


14 Connect Input and Output Wires to Option Board (2RS Shown)

Sequential Mode - Typical Wiring

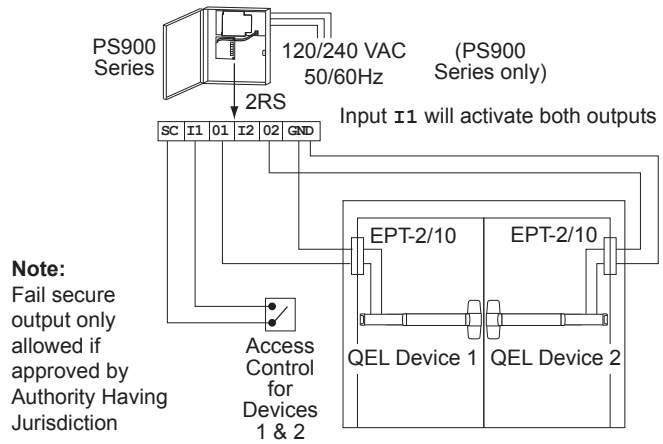

Note:
Fail secure output only allowed if approved by Authority Having Jurisdiction

Individual Mode - Typical Wiring

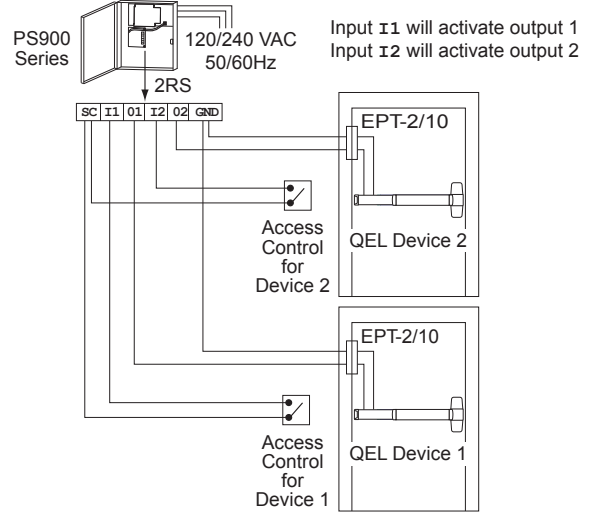


15 Check Operation

- A. Activate each input and verify all QEL devices operate properly.
- B. If any device does not operate properly, see step 16 for troubleshooting.

16 If Necessary, Troubleshoot Operation (LED is only visible with the mechanism cover removed)

Power at the QEL	QEL Response	Condition/Solution
24VDC	LED - Solid green Latchbolt - retracted	Operation normal, latch retracted immediately
	LED - Solid red after latchbolt attempts to retract multiple times	Latchbolt cannot fully retract mechanically Verify mechanical adjustment (on vertical rod or mortise lock devices if used). Remove and reapply input voltage to reset this condition.* See <i>Check Mechanical Operation</i> on page 8 as needed.**
	LED - Flashing green/red Latchbolt - not retracted	Excessive tamper (while power applied, the pushpad was pulled out at least 3 time) Wait 15 seconds and latchbolt will retract again OR remove and reapply power to clear condition
24VDC low	LED - Flashing green Latchbolt - retracted	Voltage low during latchbolt retraction (latchbolt retracts at reduced force) Wire length is too long, wire gauge is too small or power supply has poor regulation
29VDC or greater	LED- Flashing red Latchbolt - will not retract	Input voltage is too high for proper operation Wrong power supply, power supply defective.
13VDC or lower		Input voltage is too low for proper operation Wrong power supply, power supply defective or not set to the proper output voltage. To set, remove AC power from power supply, change power supply setting from 12 to 24VDC, then reapply AC power and verify proper operation.
0VDC	LED - off Latchbolt - not retracted	No input voltage Problem with the power supply, control switch or wiring
0VDC	LED - off Latchbolt - retracted	No input voltage Mechanical dogging is engaged

*For information about adjusting exit devices, you can find their installation instructions in the support area at www.allegion.com/us or call Technical Services at 1-877-671-7011

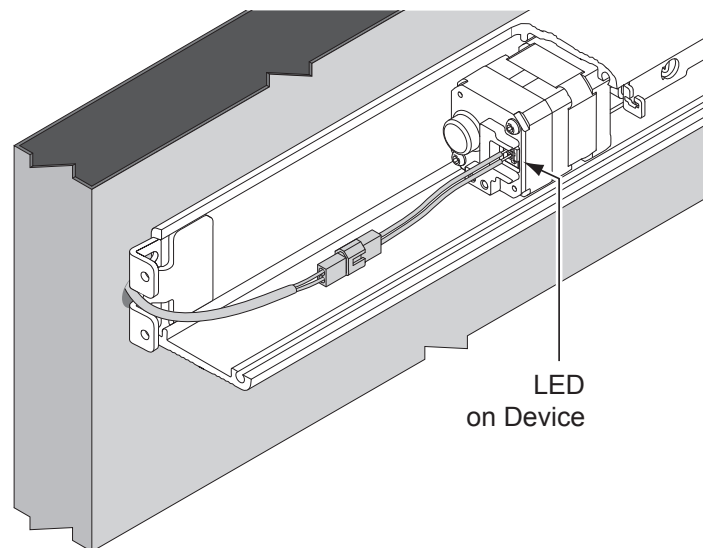

17 Check Mechanical Operation

33A/3527A	98/9927	98/9947WDC
33A/3547A	98/9947	98/9957
		98/9975

33/3549A	98/9949
33/3550A-WDC	98/9949WDC
	98/9950WDC

1. Make sure device is not dogged for SD-QEL / HD-QEL.
2. Depress pushbar and make sure latch bolt retracts and extends fully (see Figure 1).
3. If latch bolt does not retract or extend fully, adjustments may be required per the device installation instructions.

1. Make sure device is not dogged for SD-QEL/HD-QEL.
2. Depress pushbar. Door should begin to open with pushbar depressed halfway.
3. Close door. Top latch should be secure. If two point latch, bottom latch should be secure as well.
4. If device does not function as described in steps 2 and 3, adjustments may be required per the device installation instructions.

Any HD Device

1. Fully depress pushbar.
2. Insert hex dogging key and turn clockwise.
3. Release pushbar and verify latchbolt remains retracted.
4. Fully depress pushbar.
5. Insert hex dogging key and turn counter clockwise.
6. Release pushbar and verify latchbolt extends fully.

