

SD/EL 98/99 Cylinder Dogging

1. Obtain a 1¼" mortise cylinder.
2. Make sure cylinder cam is in position shown **with key removed** (Figure A). If not, remove key, remove cam, and reinstall in position shown (Figure B).

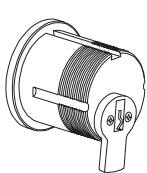


Figure A


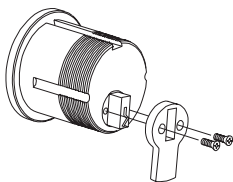


Figure B

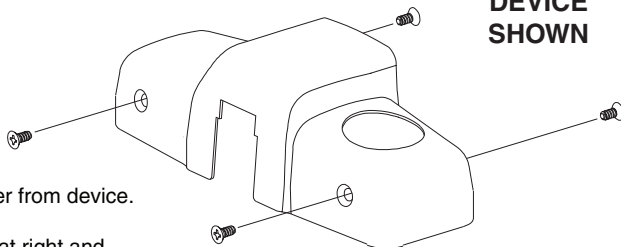

3. Remove center case cover from device.
4. Orient cylinder as shown at right and insert cylinder into bracket.
5. Tighten bracket set screw with a 1/16" hex wrench.

If you cannot reach bracket set screw with wrench, remove bracket from center case, install cylinder in bracket, tighten bracket set screw, and reinstall bracket in center case.

6. Install center case cover.

To dog RHR device, depress pushbar, insert key, and turn key 180 degrees counterclockwise. **To dog LHR device**, turn key clockwise.

To undog RHR device, insert key and turn key 180 degrees clockwise. **To undog LHR device**, turn key counterclockwise.

