


Features

The 4040XP is LCN's most durable and flexible heavy duty closer designed for institutional and other demanding high traffic applications.

Certifications Grade 1 - ANSI A156.4, UL 10C, ADA, 10 Salt Spray, Meets BAA - Buy American			
Body Construction	 Cast Iron Body Full Complement Bearings 1-1/2" Diameter Piston 3/4" Diameter Double Heat Treated Pinion Journal 		
Fluid	All Weather Liquid X Fluid		
Handing	Non-Handed		
Templating	Peel-n-Stick templates - 2-1/4″ x 5″ Mounting Hole Pattern		
Size	Adjustable Spring Size 1-6, includes Patented Green Dial		
Warranty	30 years		


Cover	Plastic, StandardMetal, Optional		
Fasteners	Self Reaming and Tapping Screws (SRT)		
Mounting	Hinge (Pull Side), Top Jamb (Push Side), Parallel Arm (Push Side)		
Arms	Regular Arm		
Finishes/Colors/ Powder Coat	 Aluminum (689) Statuary Bronze (690) Light Bronze (691) Black (693) Dark Bronze (695) Brass (696) Custom colors optional Optional SRI primer - powder coat only Optional plated finishes 		

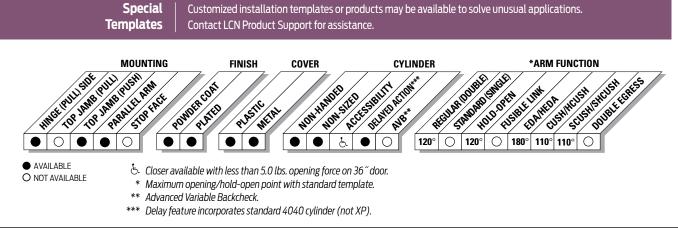



Mounting details

Hinge (Pull Side) Mounting

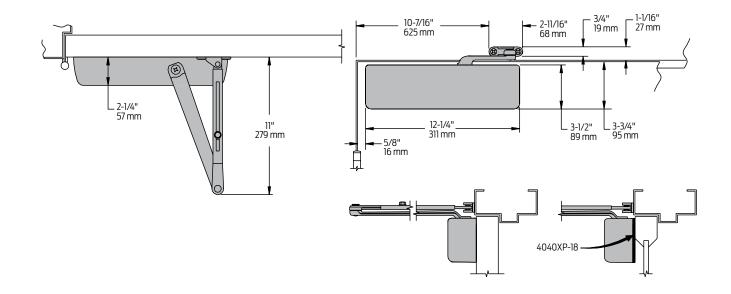


Butt Hinges	Should not exceed 5" (127 mm) in width	
Auxiliary Stop	 Recommended at hold-open point or where a door cannot swing beyond 120° 	
Reveal	Reveal Should not exceed 3/4" (19 mm) for regular arm or hold-open arm	
Top Rail	Less than 3-3/4" (95 mm) requires PLATE, 4040XP-18. Plate requires 2" (51 mm) minimum	
Clearance	2-3/8" (60 mm) behind door required for 90° installation	
Delayed Action	 Incorporates standard 4041 cylinder, without XP cylinder Delays closing from 120° to 70° Delay time adjustable up to approximately 1 minute 	
Maximum Opening	 Templating allows up to 120°. Hold-open points 90° up to 120° with hold-open arm. 	

B38

Mounting details

Top Jamb (Push Side) Mounting

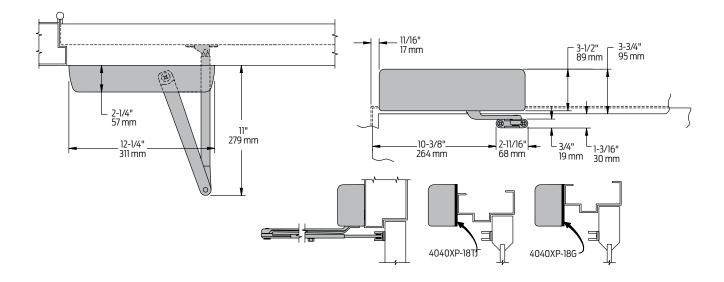


Butt Hinges	Should not exceed 5" (127 mm) in width				
Auxiliary Stop	Recommended at hold-open point or where a door cannot swing beyond 120°				
Reveal	Arm Type	Reveal	Max Opening		
	Regular Arm	2-9/16″	Up to 120°		
	Long	4-13/16″	Up to 120°		
	Hold-Open	2-9/16″	Up to 120°		
	Long Hold-Open Arm	8″	Up to 120°		
Top Rail	 Requires 1-1/4" (32 mm) minimum 2-1/4" (57 mm) minimum with closer on PLATE, 4040XP-18TJ 3" (76 mm) minimum with closer on PLATE, 4040XP-18G 				
Head Frame	 Less than 3-1/2" (89 mm) requires PLATE, 4040XP-18TJ With flush ceiling, use PLATE, 4040XP-18G. Either plate requires 1-3/4" (44 mm) minimum 				
Maximum Opening	 Templating allows up to 120°. Hold-open points 85° up to 120° with hold-open arm. 				
Delayed Action	 Incorporates standard 4041 cylinder, without XP cylinder Delays closing from 120° to 70° Delay time adjustable up to approximately 1 minute 				



Mounting details

Parallel Arm (Push Side) Mounting

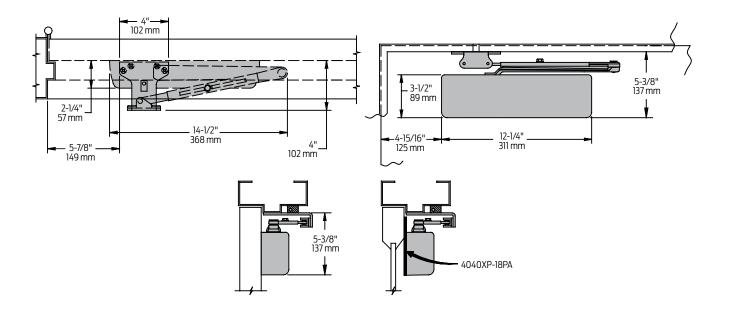

Butt Hinges	Should not exceed 5" (127 mm) in width				
Auxiliary Stop	Recommended at hold-open point, where the door cannot swing 180°, or where CUSH-N-STOP arm is not used				
Reveal	Should not exceed 7/32″ (6 mm)				
Top Rail	Less than 5-3/8" (137 mm) measured from the stop requires PLATE, $4040XP$ -18PA. Plate requires 2" (51 mm) minimum from the stop				
Head Frame	Flush or rabetted requires PA SHOE ADAPTER, 4040XP-419				
Stop Width Minimum 1" (25 mm). CUSH arm requires minimum 1-1/2" (38 mm)					
Blade Stop	Clearance requires 1/2" (13mm) BLADE STOP SPACER, 4040XP-61.				
Clearance	 4040XP-62PA shoe is 4" (102 mm) from door face. EDA shoe projects 5-1/2" (140 mm) from door face. CUSH shoe projects 6" (152 mm) from door face 				
Delayed Action	 Incorporates standard 4041 cylinder, without XP cylinder Delays closing from 120° to 70°. Delay time adjustable up to approximately 1 minute. 				
Maximum Opening	 180° opening/hold-open points with all except CUSH arms 110° opening/hold-open with CUSH arms 				


Notes:

• Optional mounting requires PA SHOE, 4040XP-62PA for regular or HOLD-OPEN arms


Add prefix "P" to closer description (eg. P4040XP)

• P4040XP closer includes 4040XP-201 FIFTH HOLE SPACER to support PA SHOE

B40

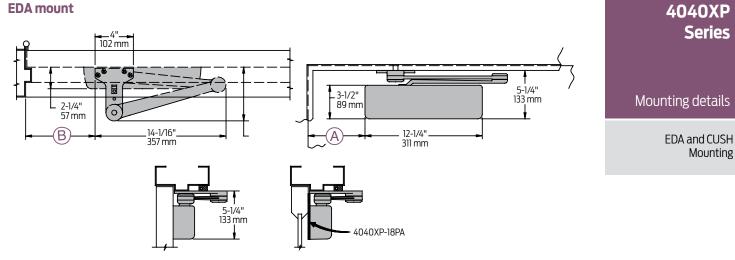

CUSH mount

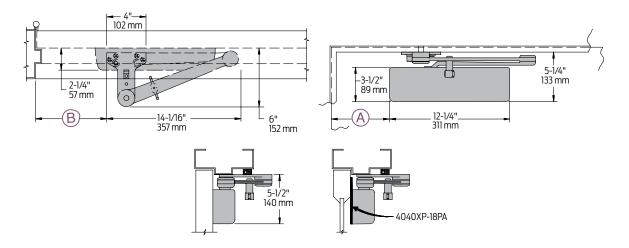

Clearance	4040XP-62EDA is 5-1/2" (140 mm) from door face. 6" (152 mm) for CUSH		
Head Frame	Flush or rabetted requires CUSH FLUSH PANEL ADAPTER, 4040XP-419		
neau riaille	Flush of Tabelleu Tequiles COSH FLUSH PANEL ADAP	1ER, 4040AP-419	
CUSH ARM	Requires SHOE SUPPORT, 4040XP-30 for fifth screw	anchorage where reveal is less than 3-1/16" (78 mm)	
Delayed Action	 Incorporates standard 4041 cylinder, without XP cylinder. Delays closing from maximum opening to ; 115° with 180° template, 95° with 110° template, 85° with 100° template, 75° with 90° template. Delay time adjustable up to approximately 1 minute. 		
Maximum Opening	EDA arm can be templated for points at:	CUSH arms can be templated for opening/hold-open point at:	
	110°: A = 6-3/8″ (162 mm) B = 7-3/4″ (197 mm)	85º: A = 7-15/16″ (202 mm) B = 9-1/8″ (232 mm)	
	or 180°: A = 2-7/8″ (73 mm) B = 4-1/4″ (108 mm)	90°: A = 7-3/16″ (183 mm) B = 8-1/2″ (216 mm)	
	Hold-open points up to maximum opening with HEDA arm	100º: A = 6-1/16″ (154 mm) B = 7-1/4″ (184 mm)	
		or 110°: A = 5-1/16″ (129 mm) B = 6-3/8″ (162 mm)	

Notes:

+ 4040XP Series closers ordered with EDA or CUSH arms include 4040XP-201 FIFTH HOLE SPACER to support the shoe

• Spring Cush stop points are approximately 5° more than templated stop point

· Hold open at templated stop points



B41

Accessories

Cylinders



4040XP-3071 Cast Iron Cylinder Assembly

- Non-handed
- Heavy duty



4041-3071 DEL Cast Iron Cylinder Assembly

- Used for delayed action closing
- Non-handed
- Heavy duty

Covers



4040XP-72 Plastic Cover

- Includes 4040XP-54 snap-on cover clip
- Non-handed
- Standard



4040XP-72MC Metal Cover

- Handed
- Required for plated finishes and custom powder coat finishes
- Optional

Installation Accessories



4040XP-18 Plate

- Required for hinge side mount where top rail is less than 3-3/4" (95 mm)
- Requires minimum 2"
 (51 mm) minimum top rail



4040XP-62PA PA Shoe

 Required for parallel arm mounting



4040XP-18G Plate

- Locates top jamb mounted closer flush with top of head frame face in flush ceiling condition
- Requires 1-3/4" (44 mm) minimum head frame



4040XP-18TJ Plate

 Centers top jamb mounted closer vertically on head frame where face is less than 3-1/2" (89 mm). Plate requires 1-3/4" (44 mm) minimum head frame



4040XP-18PA Plate

- Required for parallel arm mounting where top rail is less than 5-1/2" (140 mm), measured from the stop
- Requires 2" (51 mm) minimum top rail







4040XP-3077 Regular Arm

- Non-handed
- Mounts pull side or top jamb with shallow reveal P4041 closer includes PA SHOE, 4040XP-62PA required for parallel arm mounting



4040XP-3049 Hold-Open Arm

- Non-handed
- Mounts pull side or top jamb with shallow reveal, hold-open adjustable shoe
- 4040XP closer includes
 4040XP-62PA shoe required for parallel arm mounting
- Optional



- 4040XP-3077EDA/62G Extra Duty Arm with 62G
- Non-handed
- Features forged, solid steel main and forearm for potentially abusive installations
- 62G shoe provides additional blade stop clearance
- Optional



4040XP-3077SCNS Spring CUSH Arm

- Non-handed
- For abusive applications features solid forged steel main arm and forearm with spring loaded stop in the soffit shoe
- Optional



4040XP-3077L Long Arm

- Non-handed
- Includes LONG ROD AND SHOE, 4040XP-79LR for top jamb mount
- Optional



4040XP-3049L Long Hold-Open Arm

- Non-handed
- Includes LONG HEAD AND TUBE, 4040XP-3048L for top jamb mount
- Optional



4040XP-3077ELR Extra Long Arm

- Non-handed
- Includes EXTRA LONG ROD AND SHOE, 4040XP-79ELR for top jamb mount with deep reveal
- Optional



4040XP-3077EDA Extra Duty Arm

- Non-handed
- Features forged, solid steel main and forearm for potentially abusive installations
- Optional



4040XP-3077CNS Cush-N-Stop® Arm

- Non-handed
- Features solid forged steel main arm and forearm with stop in soffit shoe.
- Optional



4040XP-3049EDA

- Hold-Open Extra Duty Arm
- Handed
- Parallel arm features forged, solid steel main and forearm for potentially abusive installations
- Hold-open function is adjusted at the shoe
- Optional



4040XP-3049CNS HCUSH Arm

- Non-handed
- Hold-open function with templated stop/hold-open points
- Handle controls hold-open function
- Optional

4040XP-3049EDA/62G Hold-Open Extra Duty Arm with 62G

- Handed
- Features forged, solid steel main and forearm for potentially abusive installations
- 62G shoe provides additional blade stop clearance. Hold-open function is adjusted at the shoe
- Optional



- Non-handed
- For abusive applications features solid forged steel main arm and forearm with spring loaded stop in the soffit shoe
- Handle controls hold-open function
- Optional



B43

4040XP Series

Accessories

Accessories

Installation Accessories cont.



4040XP-30 CUSH Shoe Support

- Provides anchorage for fifth screw used with CUSH arms, where reveal is less than 3-1/16" (78 mm)
- Optional



4040XP-61 Blade Stop Spacer

- Required to lower parallel arm shoe to clear 1/2" (13 mm) blade stop
- Optional



4040XP-419 PA Flush Panel Adapter

- Provides horizontal mounting surface for parallel arm shoe on single rabetted or flush frame
- Optional



4040XP-62A Auxiliary Shoe

- Requires a top rail of 7" (178 mm)
- Shoe replaces -62PA for parallel arm mounting of regular arm with overhead holder/stop
- Optional



4040XP-54 Snap-On Cover Clip

 Used to secure 4040XP-72 Plastic Cover to cylinder body

Ordering Information

How-to-order 4040XP Series closers

1. Select finish

□ Standard Powder Coat _____ Aluminum, Dark Bronze, Statuary, Light Bronze, Black, Brass.

Closer options

Cylinder

□ Delayed Action (4041 DEL)

Cover □ Metal (specify right or left hand) (MC)

Finish

□ Custom Powder Coat (RAL) _____ (handed metal cover required) □ Plated Finish, US _____ (handed metal cover required) □ SRI primer (use with powder coat finishes only)

Closer will be shipped with:

- Standard cylinder
- Standard cover
- Regular arm
- Self-reaming and tapping screws unless options listed below are selected.

Arm

□ Regular (REG) □ Regular w/62PA (Rw/PA) \Box Regular w/62A (R/62A) □ Long (LONG) □ Extra Long (XLONG) □ Hold-Open (H) □ Hold-Open w/62PA (Hw/PA) □ Long Hold-Open (HLONG) □ Extra Duty Arm (EDA) □ Extra Duty Arm with 62G (EDA/62G) □ Hold Open Extra Duty Arm (HEDA) (Handed) □ Hold Open Extra Duty Arm with 62 (HEDA/62G)(Handed) □ Cush-N-Stop (CUSH) □ HCush-N-Stop (HCUSH) □ Spring Cush (SCUSH) □ Spring HCush (SHCUSH)

Optional Screw Packs

TB* w/Self-Reaming and Tapping (TBSRT)
 Wood & Machine Screw (WMS)
 TB*, Wood & Machine Screw (TBWMS)
 TORX Machine Screw (TORX)
 TB* & TORX Machine Screw (TBTRX)
 * Specify door thickness if other than 1-3/4".

Installation Accessories

Plate, 4040XP-18
 Plate, 4040XP-18TJ
 Plate, 4040XP-18G
 Plate, 4040XP-18PA
 CUSH Shoe Support, 4040XP-30
 Blade Stop Spacer, 4040XP-61
 Auxiliary Shoe, 4040XP-62A
 PA Flush Panel Adapter, 4040XP-419


Special Template

🗆 ST-____

Table of sizes

4040XP cylinders are adjustable from size 1 through size 6 and is shipped set to size 3

Closing power of 4040XP Series closers may be adjusted 50%

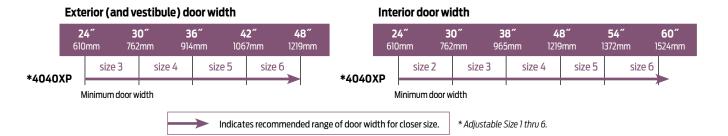

Reduced opening force 4040XP Series closers


CAUTION! Any manual door closer, including those certified by BHMA to conform to ANSI Standard A156.4, that is selected, installed and adjusted based on ADA or other reduced opening force requirements may not provide sufficient power to reliably close and latch a door.

Refer to POWER OPERATORS section for information on systems that meet reduced opening force requirements without effecting closing power.


	DOOR WIDTH	36″	42″	48″
Ŀ.	8.5* lbs.	4040XP	4040XP	4040XP
	5.0* lbs.	4040XP	4040XP	4040XP

* Maximum opening force.



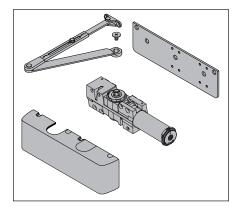


Cylinder & Cover Parts

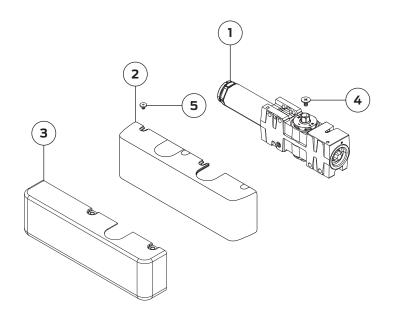


No.	Description	Part number		No.	No. Description
1	Cylinder Assembly (F)	4040XP-3071	e	5	5 Screw Pack (Not Shown)(F)
	Cylinder Assembly w/ Delay (F)	4041-3071DEL	7		Screw Pack (Not Shown)(F)
2	Standard Cover (F)	4040XP-72	8		Screw Pack (Not Shown)(F)
3	Metal Cover (F)(H)	4040XP-72MC	9		Screw Pack (Not Shown)(F)
4	Arm Screw (F)	4040XP-159	10	_	Screw Pack (Not Shown)(F)
5	Cover Screw (F)	4040XP-31	11		Screw Pack (Not Shown)(F)



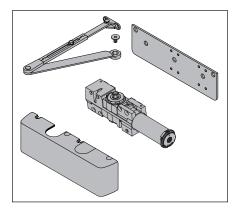


Arm Assemblies & Parts

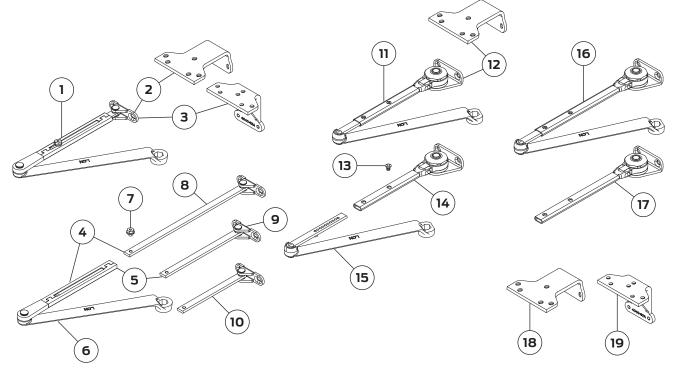


No.	Description	Part number
1	Reg Arm (F)	4040XP-3077
2	Reg Arm w/PA (F)	4040XP-3077/PA
3	Reg Arm w/62A (F)	4040XP-3077/62A
4	XL Reg Arm (F)	4040XP-3077XL
5	Long Arm (F)	4040XP-3077L
6	Arm & Forearm	4040XP-77
7	Arm Screw (F)	4040XP-83
8	XL Rod & Shoe	4040XP-79ELR
9	Long Rod & Shoe	4040XP-79LR
10	Rod & Shoe	4040XP-79

No.	Description	Part number
11	Hold Open Arm (F)	4040XP-3049
12	H Arm w/62PA (F)	4040XP-3049/PA
13	H Arm Screw (F)	4040XP-83H
14	H Head & Tube (F)	4040XP-3048
15	Hold Open Main Arm (F)	4040XP-49
16	H Long Arm (F)	4040XP-3049L
17	Head & Long Tube (F)	4040XP-3048L
18	PA Shoe (F)	4040XP-62PA
19	Auxiliary Shoe (F)	4040XP-62A




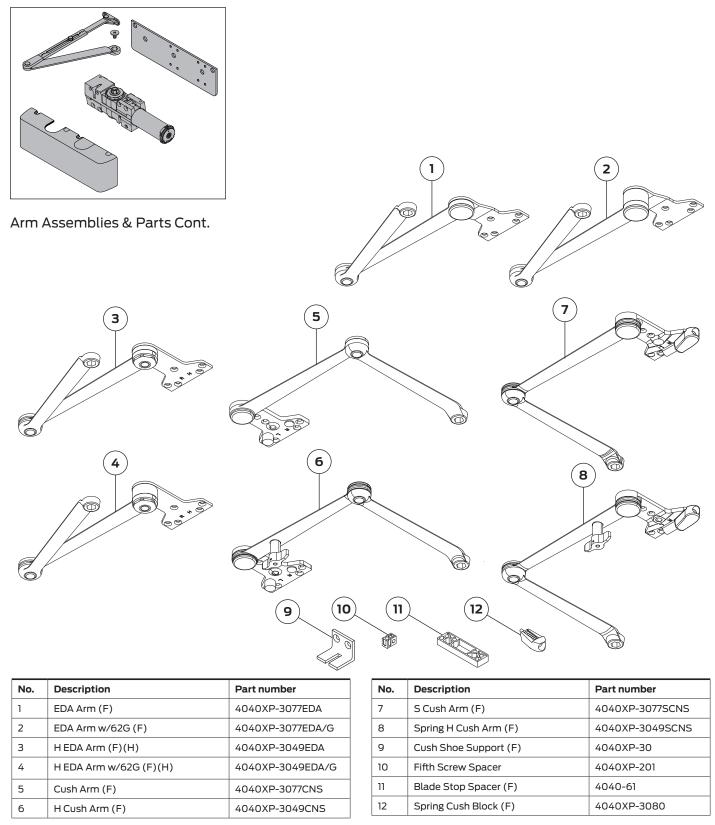



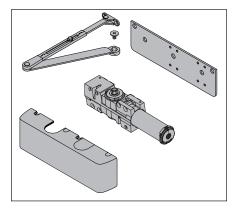

Mounting Plates & Installation Accessories

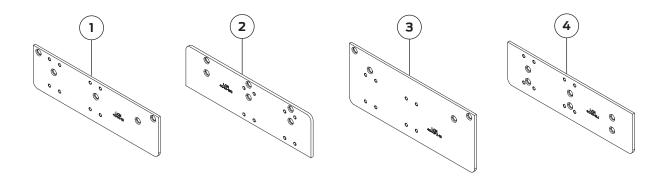

No.	Description	Part number	No.	Description	Part number
1	Mounting Plate (F)	4040-18	3	Mounting Plate (F)	4040-18PA
2	Mounting Plate (F)	4040-18G	4	Mounting Plate (F)	4040-18TJ

