



921005-00

994/996L-DT/L-NL

VON DUPRIN®


Rigid Trim

Installation Instructions

1. Prepare door for exit device. See exit device instructions for line X-X, exit device center line, and exit device side door cutouts.
2. Prepare door for trim:
  - a. Transfer line X-X from exit device side of door to trim side. Use extra care if door is beveled. Be sure line X-X is parallel to edge of door.
  - b. Locate and prepare all holes as shown.
3. If necessary, change trim handing.
4. **For RIGID function trim with rim or vertical rod device:**
  - a. Install rim cylinder (Figure 2).
  - b. Cut cylinder tailpiece to extend 7/16" to 9/16" out of exit device side of door.
  - c. Install tailpiece guide in exit device cam.
5. **For RIGID function trim with mortise lock device:** Install mortise lock.
6. Install exit device and trim. Use 1-3/8" screws for 1-3/4" door, 1-7/8" screws for 2" and 2-1/4" door (cut down screws for 2" door if necessary).
7. **For RIGID function trim with mortise lock device:** Install mortise cylinder (Figure 2).



Lever cannot be broken down in this application without breaking the shear pin.

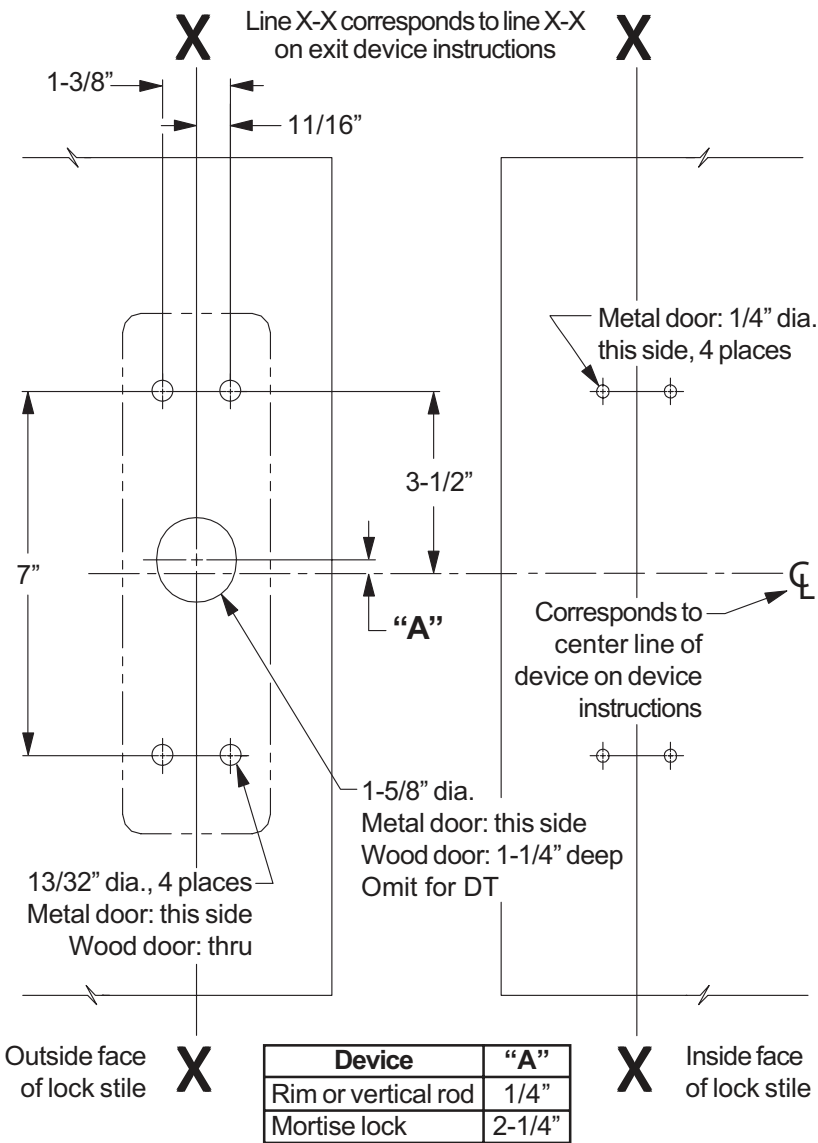

LHR shown, RHR opposite

TO CHANGE HANDING

1. Remove retaining ring using retaining ring pliers (Figure 1).
2. Loosen but **do not remove** DT yoke set screws using 3/32" hex wrench.
3. Remove DT yoke.
4. Rotate lever to LHR or RHR position.
5. Re-install DT yoke in the same orientation.
6. Tighten DT yoke set screws.
7. Re-install retaining ring.

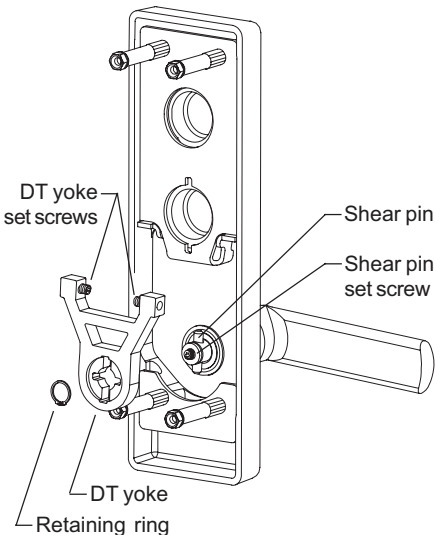


Figure 1

TO REPLACE SHEAR PIN

1. Loosen but **do not remove** shear pin set screw using 3/32" hex wrench (Figure 1).
2. Remove retaining ring using retaining ring pliers.
3. Loosen but **do not remove** DT yoke set screws using 3/32" hex wrench.
4. Remove DT yoke.
5. Remove broken shear pin.
6. Install new shear pin.
7. Re-install DT yoke in the same orientation.
8. Tighten DT yoke set screws.
9. Re-install retaining ring.
10. Tighten shear pin set screw.

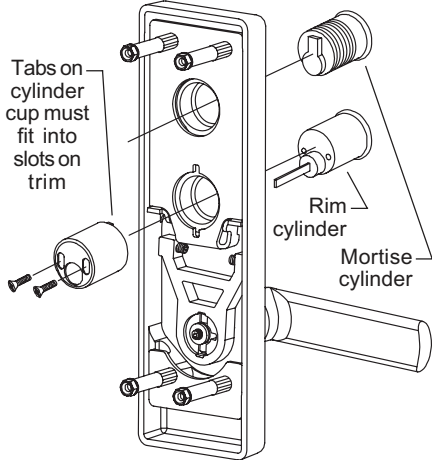


Figure 2

Customer Service

1-877-671-7011

www.allegion.com/us



© Allegion 2014  
Printed in U.S.A.  
921005-00 05/16-c