



740132

Senior Swing

LCN®

2800 Overhead Concealed Series
9500 Surface Applied Series

Installation Instructions

⚠ CAUTION ⚠

LCN Senior Swing

The Senior Swing Power Operator System is a low energy product and must conform to the latest version of ANSI/BHMAA156.19 (American National Standard for Power Assist and Low Energy Power Operated Doors).

Installation Instructions

All installation instructions are valuable references and should not be discarded. They should be given to the building owner or maintenance supervisor after installation is complete.

⚠ CAUTION ⚠

Improper installation or set up may result in personal injury or property damage. Follow all instructions carefully. For answers to questions, call:

Technical Support

1-877-671-7011

IMPORTANT

These instructions are presented in step-by-step sequence. It is very important that installation begins with “1. Pre-Installation Site and Product Check” (page 4) and continues as directed after each section.

WARNING

Always disconnect main power to the operator prior to replacing.

Table of Contents

General	2
1 Pre-Installation Site and Product Check (Surface and Concealed)	3
2 Header Installation (Concealed)	4
3 Header Installation (Surface)	5
4 AC Power and Ground Wiring (Surface and Concealed)	7
5 Operator Installation (Surface and Concealed)	8
6 Pivot Block Installation (Concealed, Center Pivoted)	9
7 Breakaway or Fixed Stop Installation (Concealed, Center Pivoted)	10
8 Control Box Installation (Surface and Concealed)	11
9 Control Box Wiring (Surface and Concealed)	12
10 Finger Guard Installation (Concealed, Center Pivoted)	13
11 Door and Arm Installation (Concealed, Center Pivoted)	14
12 Arm Installation (Surface and Concealed)	16
13 Glazing (Surface and Concealed)	16
14 Control Box Functions (Surface and Concealed)	16
15 Plate Installation (Surface and Concealed)	17
16 Release for Service (Surface and Concealed)	17

General

The Senior Swing is an automatic electromechanical swinging door operator for a single door, simultaneously operated, or independently operated pair of doors. The concealed application operates center pivoted, offset pivoted, or butt hung/hinged doors. The surface application operates balanced (push side only), center pivoted, offset pivoted, or butt hung/hinged doors in either push or pull mode.

When activated, the Senior Swing drives the door to the full open position, then electrical power is turned off and the door is closed by spring force. The activating circuit opens the door from any position in the closing swing. During a power failure, the Senior Swing acts as a manual door closer (size 3). Door opening and closing cycles, including opening speed, back check speed, hold open time delay, closing speed, and latch position, are adjustable.


1 Pre-Installation Site and Product Check (Surface and Concealed)




Do not install the Senior Swing unless all of the following conditions are correct.

- 1a Check that the product model is correct for the required application.
- 1b Check that all parts listed on the bill of material are in the shipping container.
- 1c Check architectural and final approved shop drawings for position of frame and openings.
- 1d For concealed applications, check that the opening allows 1/4" at each side and at the top so that the frame and the header can be plumbed square and caulked.
- 1e For surface mount applications onto 2" frames, consult factory to determine if mounting plate is required.
- 1f Special tool may be required for installation of rivet nuts.
- 1g Check for sufficient header clearances:

Surface Application (Push System Shown)

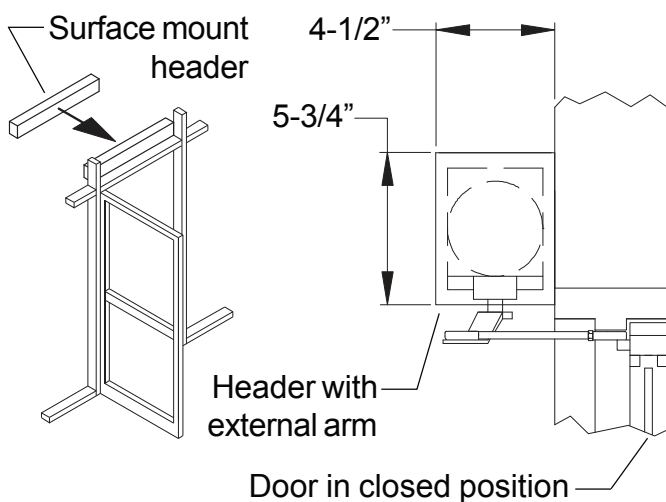

Concealed Application

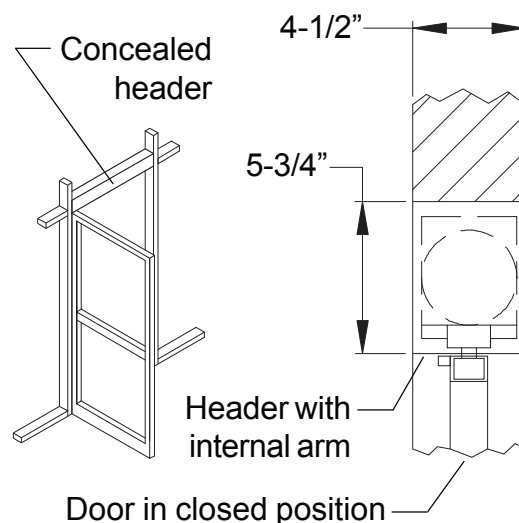


- 1h For a ramped floor, check that the break in the grade occurs at the edge of the 2" threshold and slopes away from the entrance to allow proper door swing or panic breakaway.
- 1i Check that a 120 volt, single phase, 60 Hz, fused, 15 amp, 3-wire power supply is available at the side jamb with approximately 12" of wire available to connect to the operator. UL approved type flexible conduit is recommended for the 120 volt power line.
The 120 volt power supply must be a dedicated circuit from the main circuit breaker panel and must not be connected into a building lighting system operating fluorescent lights.
 - For concealed applications, continue with "2. Header Installation (Concealed)" on page 5.
 - For surface applications, continue with "3. Header Installation (Surface)" on page 6.

2 Header Installation (Concealed)

① **Note:** Install concealed application headers so there is 1/8" between the bottom of the header and the top of the door.

2a Prepare existing jamb tubes using template 740069, then install four 1/4-20 rivet nuts inside each jamb tube.


2b Align the header with the jamb tubes. For headers with a single operator, position the end of the header containing the operator brackets near the pivot side of the opening (Figure 2-1). Secure the header to the jamb tubes with four 1/4-20 hex head screws at each end (Figure 2-2).

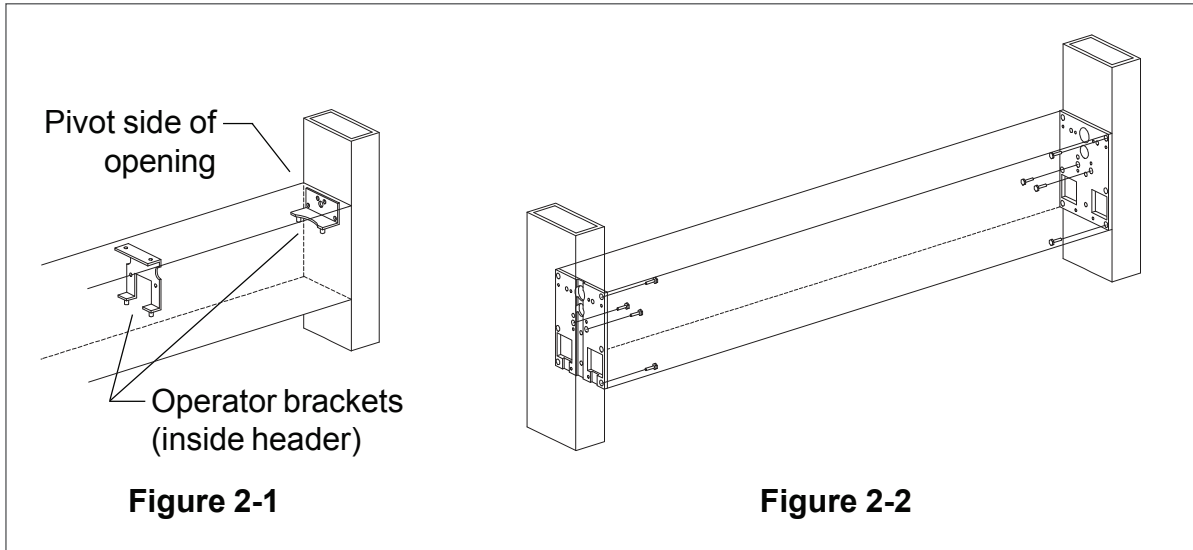

2c Stand the header/jamb tube assembly in the opening.

2d Feed the 120 volt power conduit into the header (Figure 2-3). Leave 12" minimum of wire inside the header for final hookup.


2e Shim and square the side jamb tubes in position, then secure the jamb tubes in the opening.

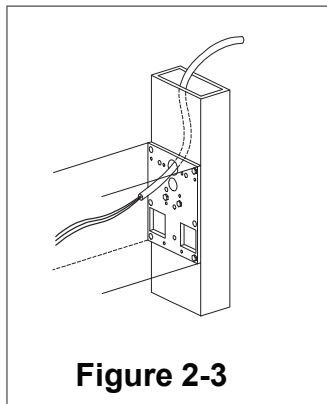


- Continue with "4. AC Power and Ground Wiring (Surface and Concealed)" on page 8.

3 Header Installation (Surface)

- 3a For a header with two operators (for a simultaneously operated pair of doors), designate one end of the header as the companion operator end. (It does not matter which end.)
- 3b Refer to Figure 3-1 and step 3.3 and prepare wire access holes appropriate for the application in the header using template 740070. Be sure to position edge "A" of template 740070 as shown in Figure 3-1.

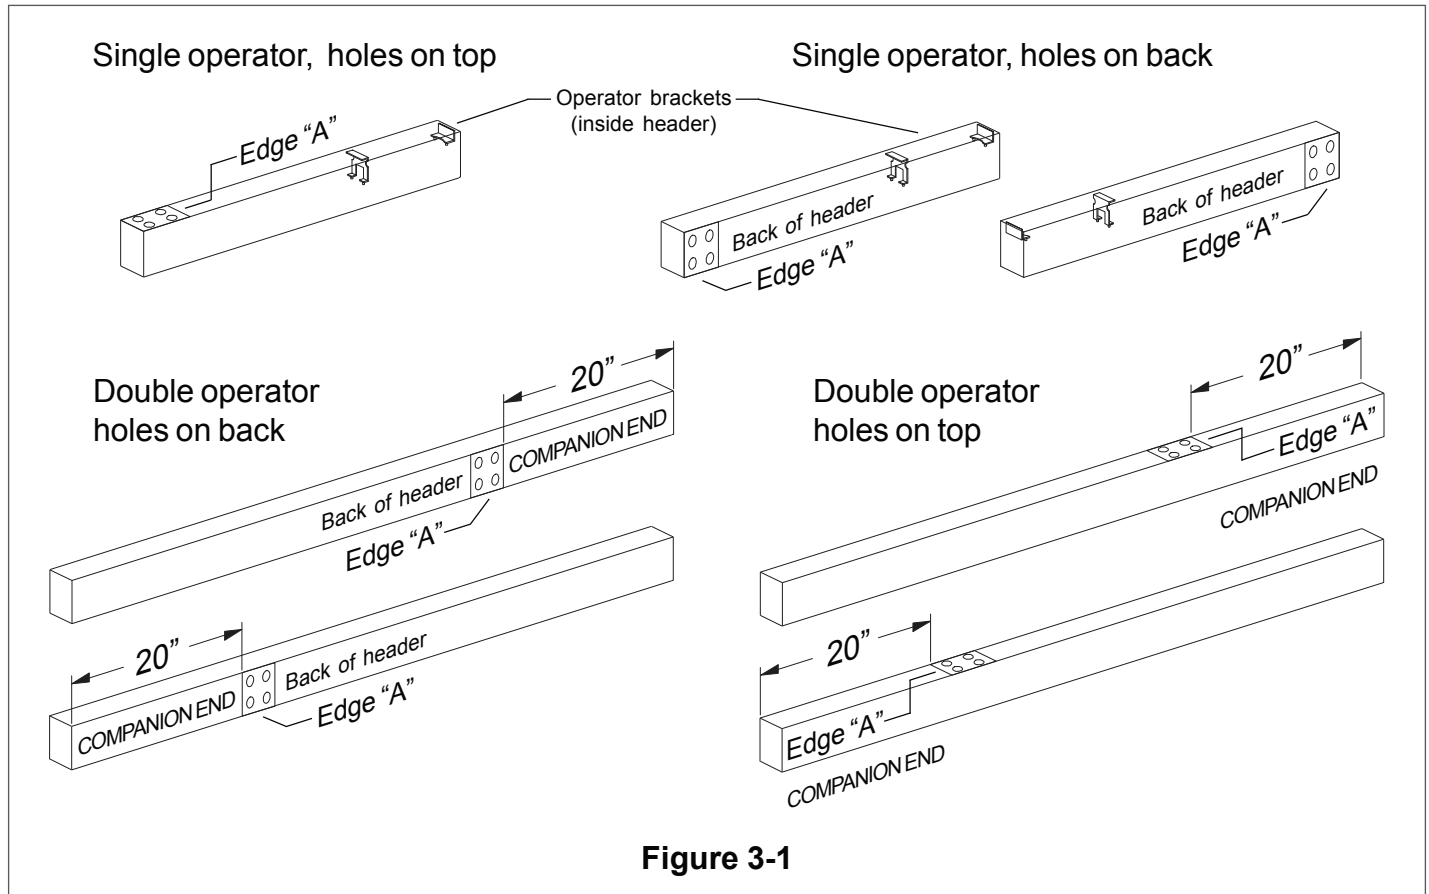

- 3c Install horizontal mounting brackets on the header per the instructions supplied with the brackets (Figure 3-2). Make sure the horizontal mounting brackets are oriented so the wire access holes in the header (see step 3.2) face up or face the door and, for single operator headers, the operator brackets inside the header are near the hinge side of the opening.

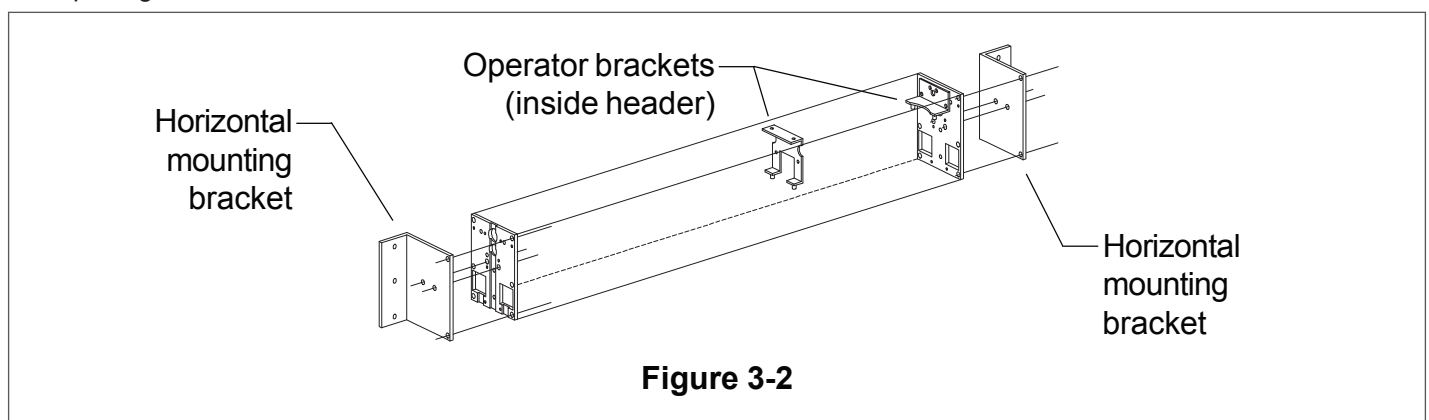

- ① **NOTE:** Install surface applied headers with the following spacing between the bottom of the header and the top of the door:
Pull arm application: 1-1/8"
Push arm application: 1"

- 3d For aluminum storefront or aluminum tube frame, install the header with horizontal mounting brackets to the jams per the instructions supplied with the horizontal mounting brackets (Figure 3-3).

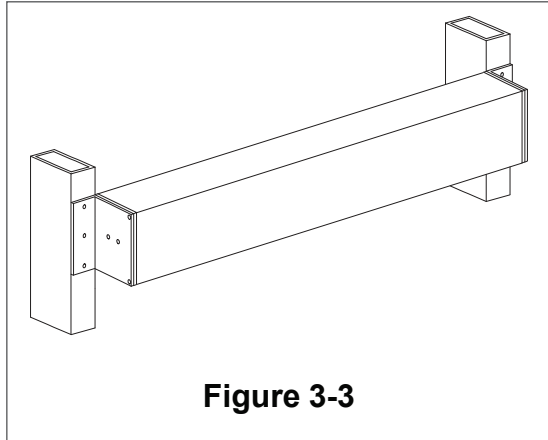


Figure 3-3

- 3e Hollow metal and wood frames require the use of a -18 mounting plate, sold separately (Figure 3-4).

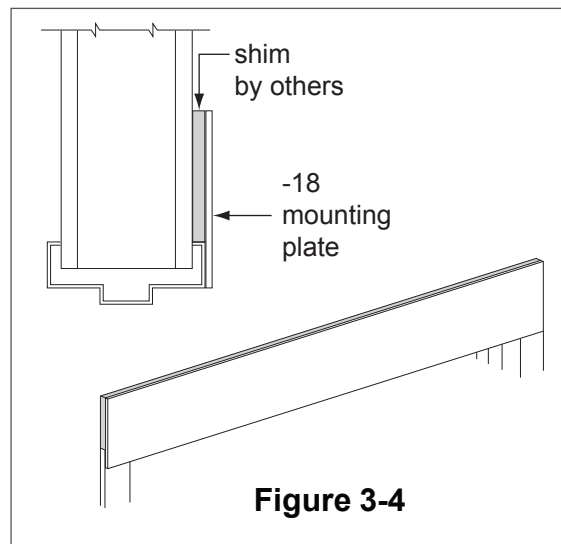


Figure 3-4

- 3f Feed the 120 volt power conduit into the header (Figure 3-5). Leave 12" minimum of wire inside the header for final hookup.


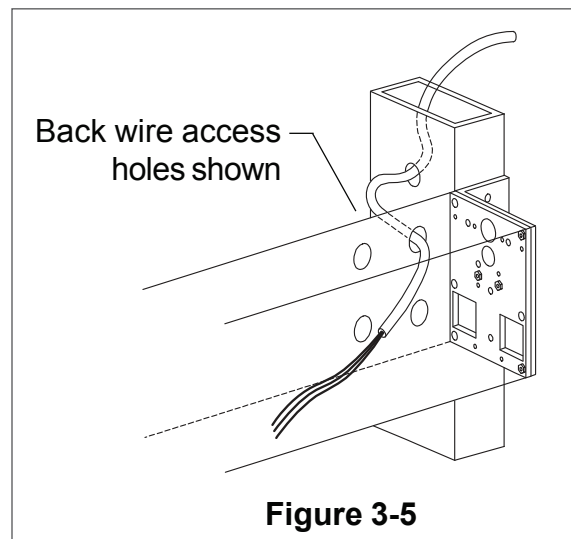


Figure 3-5

- Continue with "4. AC Power and Ground Wiring (Surface and Concealed)" on page 8.

4 AC Power and Ground Wiring (Surface and Concealed)




- 4a Connect the 120 volt power wires to the AC power cable (part number 761463) and header end plate as shown in Figure 4-1.

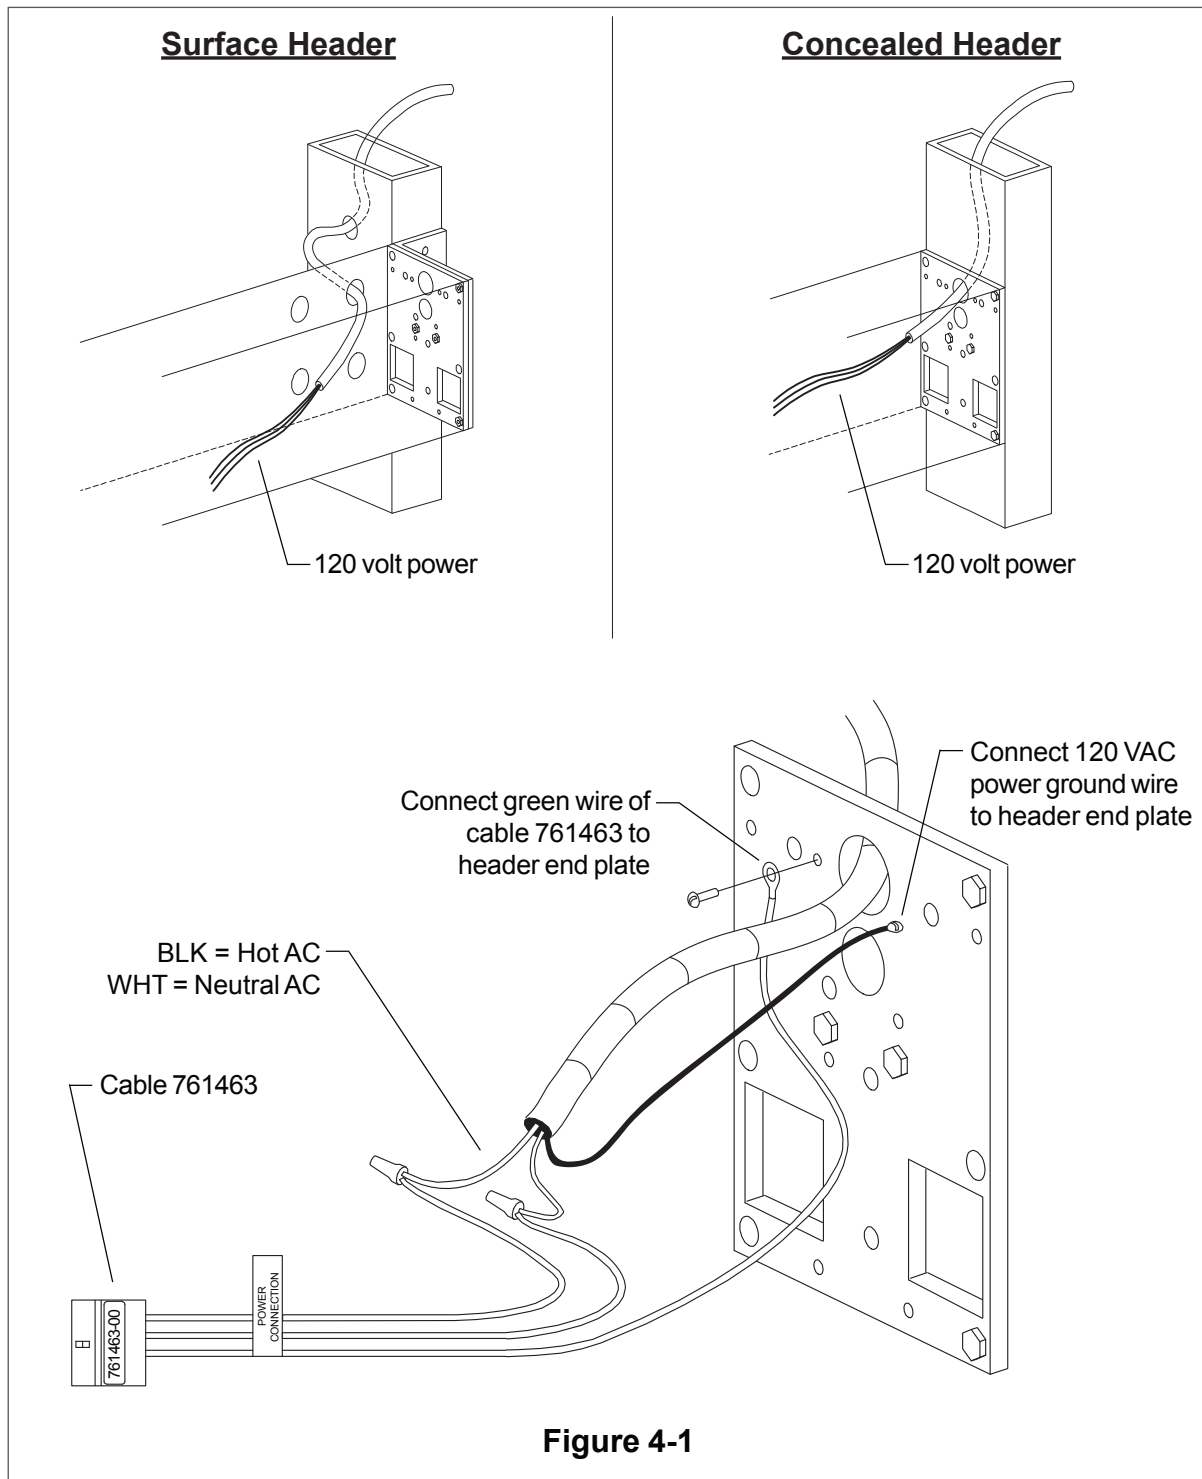

- Continue with "5. Operator Installation (Surface and Concealed)" on page 9.

5 Operator Installation (Surface and Concealed)

- 5a For double operator systems with differently handed operators, make sure that the correct operator is installed in each end of the header. The handing of the operator (R.H. or L.H.) is indicated on a label on the operator.

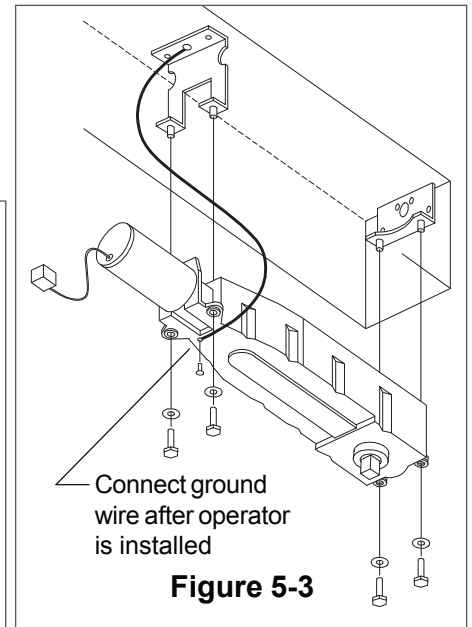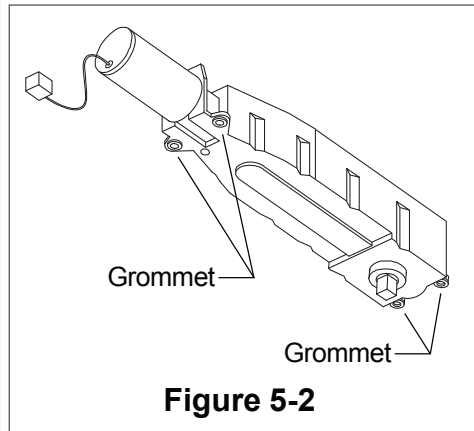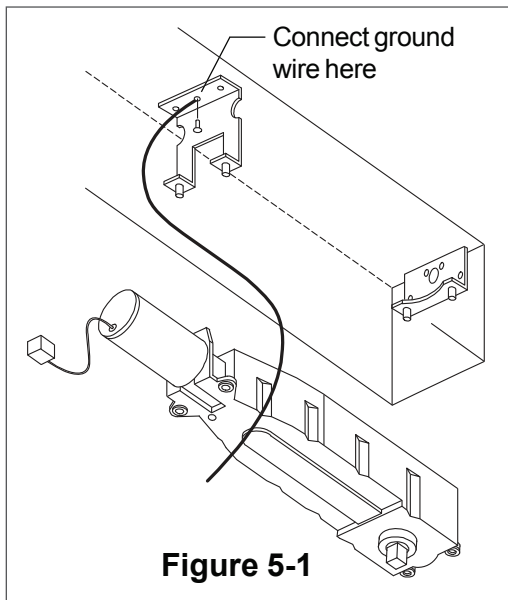

- 5b Connect the end of the green operator ground wire to the rear operator mounting bracket in the header (Figure 5-1) using the #10-32 hex head green ground screw supplied in the operator screw pack.
- 5c Make sure there is a rubber grommet inside each of the four operator mounting holes (Figure 5-2).
- 5d Line up the four mounting holes on the operator with the four mounting studs on the operator brackets (Figure 5-3). Make sure that the operator cable (with 6-pin connector) is hanging down freely and push the operator up onto the mounting studs. Make sure cables are not pinched when operator is installed. (The mounting studs fit snugly into the grommets, and firm pressure may be required to get the operator into position.)
- 5e Secure the operator to the header using four 5/16-18 hex head screws and washers (Figure 5-3). Tighten the screws until they make contact with the mounting studs on the operator brackets.
- 5f Connect the other end of the green ground wire to the small hole in the bottom of the operator (Figure 5-3).
- 5g For a header with two operators, install the second operator in the same manner.
- For center pivoted doors, continue with "6. Pivot Block Installation (Concealed, Center Pivoted)" on page 10.
 - For other doors, continue with "8. Control Box Installation (Surface and Concealed)" on page 12.

6 Pivot Block Installation (Concealed, Center Pivoted)

① **NOTE:** This section is applicable **ONLY** if using the factory supplied lower pivot block (with pivot post attached) on center pivoted doors. If not being used, continue with “7. Breakaway or Fixed Stop Installation (Concealed, Center Pivoted)” on page 11.

6a Position the lower pivot block (Figure 6-1) as shown in Figure 6-2 oriented so the pivot post is 2-3/4" or 3-3/4" (nominal) from the jamb, as necessary.

6b Use the pivot block as a guide and mark and prepare four mounting holes for appropriate fasteners for the mounting surface.

6c Secure the pivot block in place with appropriate fasteners (Figure 6-3).

① **NOTE:** Pivot block shown installed for a door with a 3-3/4" mounting point. For 2-3/4" mounting point, reverse pivot.

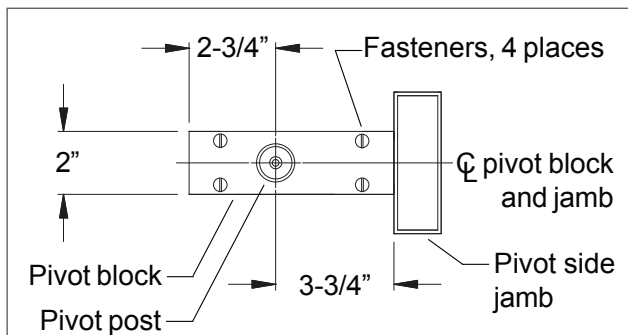


Figure 6-1. Top view of lower pivot block.

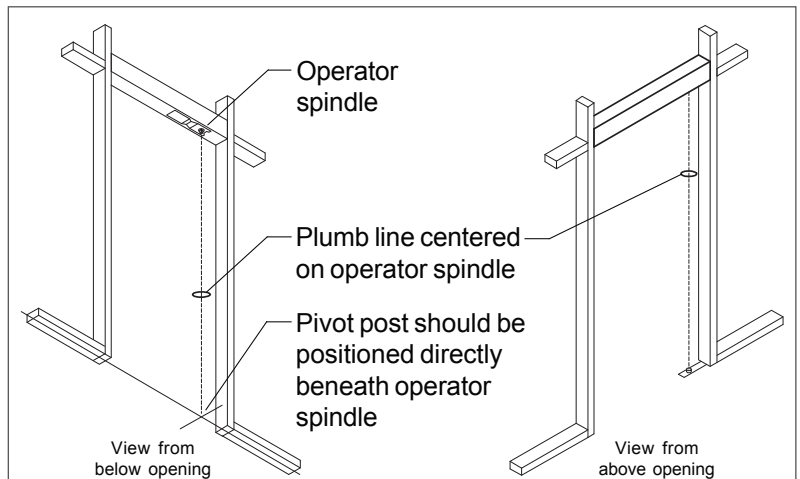


Figure 6-2

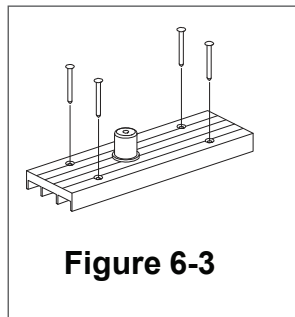


Figure 6-3

- Continue with “7. Breakaway or Fixed Stop Installation (Concealed, Center Pivoted)” on page 11.

7 Breakaway or Fixed Stop Installation (Concealed, Center Pivoted)


- ① **NOTE:** This section is applicable **ONLY** to center pivoted doors using the factory supplied breakaway or fixed stop. If not being used, continue with “8. Control Box Installation (Surface and Concealed)” on page 12.

Breakaway and Fixed Stop Operation


The function of the breakaway or fixed stop is to act as a mechanical stop on an inswinging door so the door cannot normally be opened in the outswinging direction.

The **breakaway stop** differs from the fixed stop in that, in a panic or fire condition, when approximately 50 lbs. of force is applied on the door from the inswinging side, the door will open in the outswinging direction. When this occurs, a switch in the breakaway stop disables the automatic operation of the door. The door then remains inoperative and in the breakaway position until it is manually pushed back through the opening to the inswinging side. This action resets the breakaway stop and restores automatic operation.

- 7a Orient the breakaway stop according to the directions on the switch label (Figure 7-1). The “OPENING DIRECTION OF DOOR” arrow should point in the direction that the door opens during normal operation.

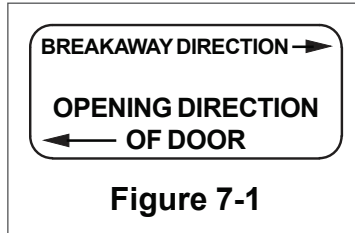




- 7b Install the breakaway or fixed stop inside the header approximately 2-1/4" from the latch end using the four #8-32 x 3/4" screws supplied with the stop (Figure 7-2). Mounting holes for the stop have been prepared in the header at the factory.

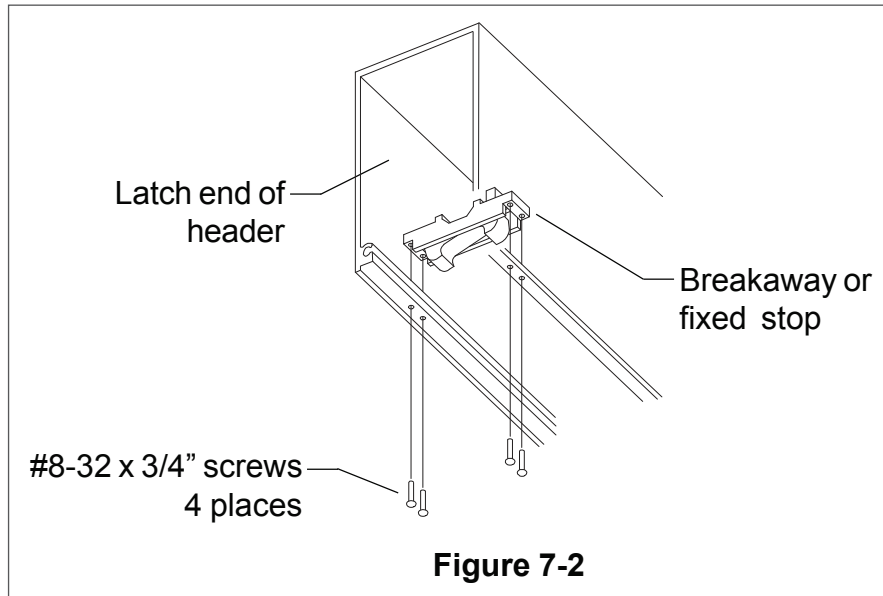

- Continue with “8. Control Box Installation (Surface and Concealed)” on page 12.

8 Control Box Installation (Surface and Concealed)

- 8a Orient the control box so the keypad faces down and the 6-pin Molex connector faces the operator for a single system or the master operator for a double system (Figure 8-1).
- 8b Raise the control box into the header and rotate the two mounting bars so they engage the slots that run the length of the header (Figure 8-2).
- 8c See Figure 8-3 for final positions of operator(s) and control box inside the header.

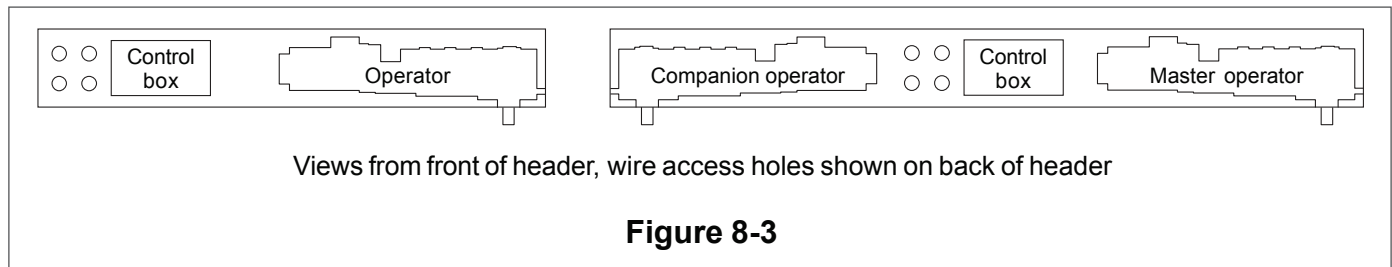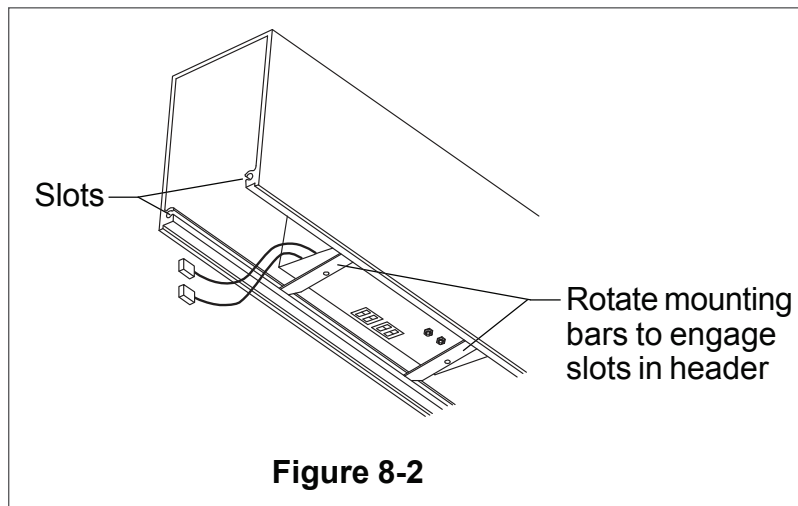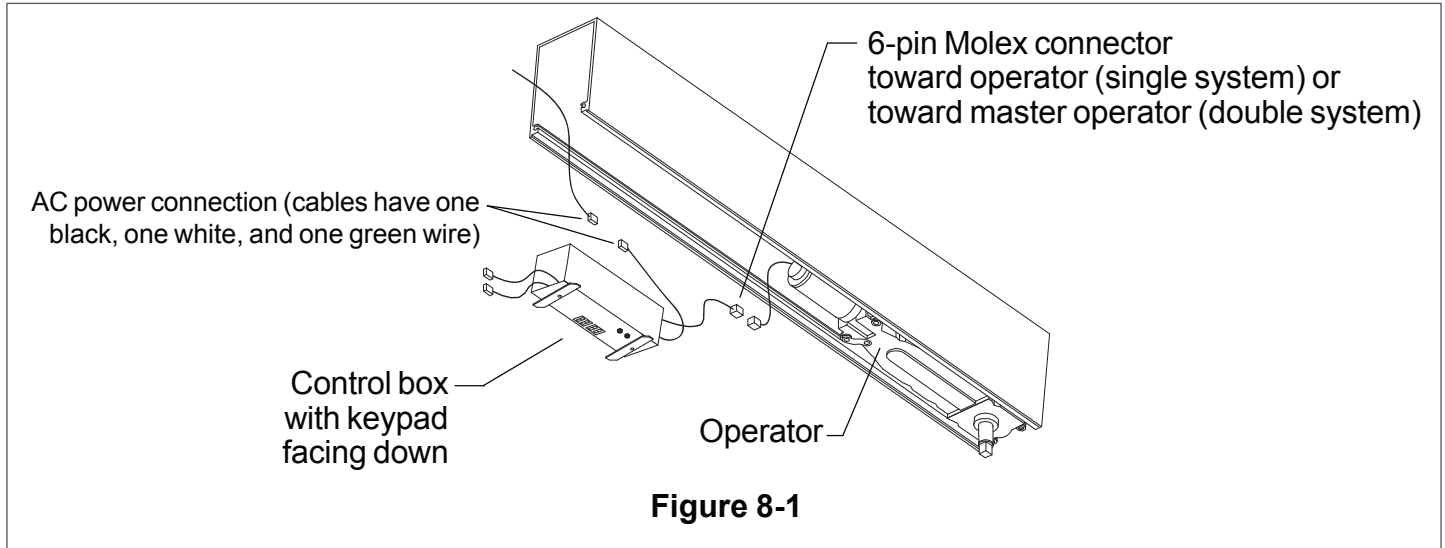

- Continue with "9. Control Box Wiring (Surface and Concealed)" on page 13.

9 Control Box Wiring (Surface and Concealed)

⚠ CAUTION ⚠

High voltage wiring must be separated from low voltage wiring by UL listed wiring for the control box, operators, and low voltage accessories.

⚠ CAUTION ⚠

When joining or separating a Molex plug and receptacle, do not push or pull on any of the wires. This may cause a wire to be pulled loose from a terminal, which may result in a malfunction.

9a Single operator system minimum wiring requirements:


- AC power
- Master motor power
- Breakaway switch or jumper

Double operator system minimum wiring requirements:

- AC power
- Master motor power
- Companion motor power
- Breakaway switches or jumpers; if two Breakaway switches are used, wire switches in series

9b For wiring of companion operator and additional accessories, see the Senior Swing Control Box installation instructions.

9c Dress all wires neatly together and use clips to retain wires in their proper locations.

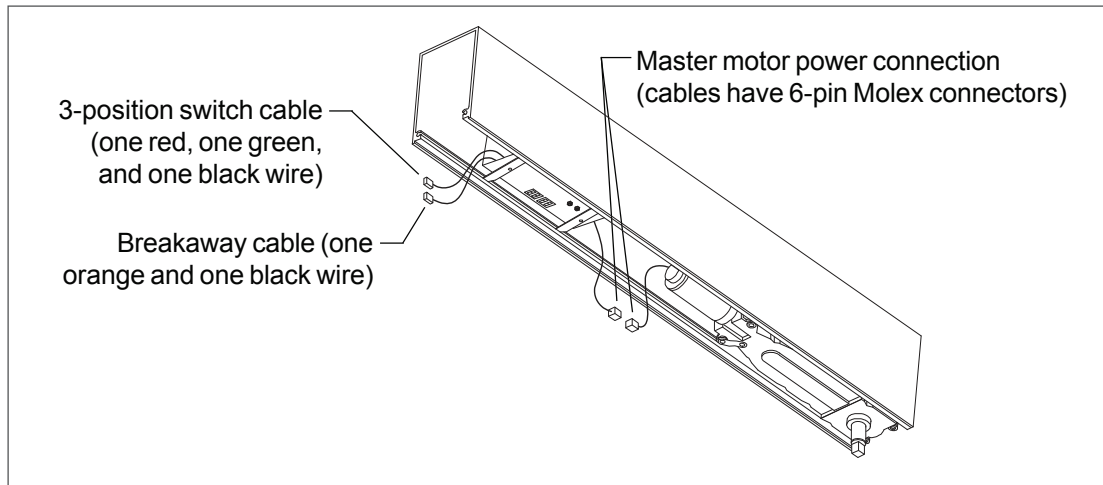

- For center pivoted doors, continue with “10. Finger Guard Installation (Concealed, Center Pivoted)” on page 14.
- For other doors, continue with “12. Arm Installation (Surface and Concealed)” on page 17.

10 Finger Guard Installation (Concealed, Center Pivoted)

① **NOTE:** This section is applicable **ONLY** to center pivoted doors using the factory supplied finger guard. If not being used, continue with “11. Door and Arm Installation (Concealed, Center Pivoted)” on page 15.


10a Scribe a line down the center of the pivot side door jamb (Figure 10-1).

10b If necessary, cut down the finger guard to fit the installation.

10c Align the center of the finger guard over the scribed line. Use the screw holes in the finger guard as guides to locate the mounting holes, and drill #21 (0.159” dia.) mounting holes in the door jamb.

10d Secure the finger guard to the door jamb with #10 self-threading screws.

10e Make sure there is one mounting screw approximately 1” from each end of the finger guard. If necessary, drill additional mounting holes in the finger guard and door jamb in these locations and install #10 self-threading screws.

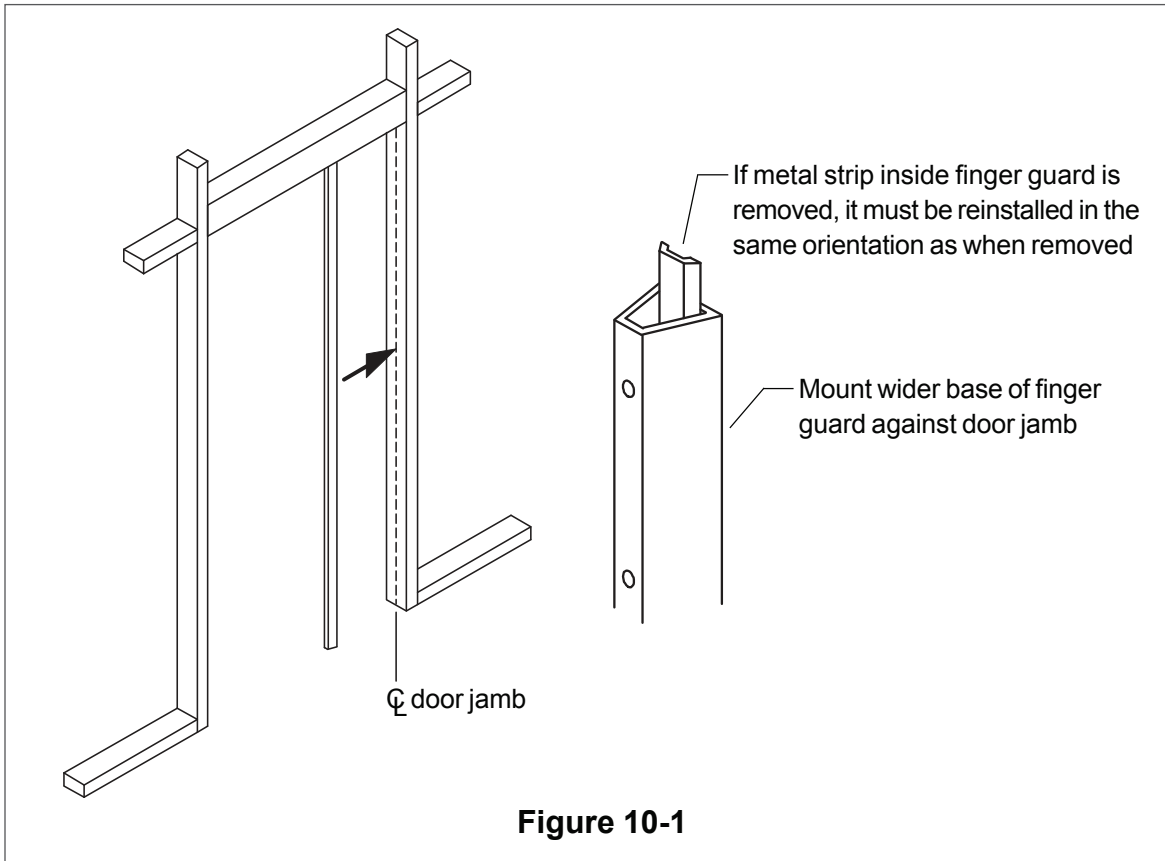

- Continue with “11. Door and Arm Installation (Concealed, Center Pivoted)” on page 15.

11 Door and Arm Installation (Concealed, Center Pivoted)

11a Prepare door for arm (Figure 11-1).

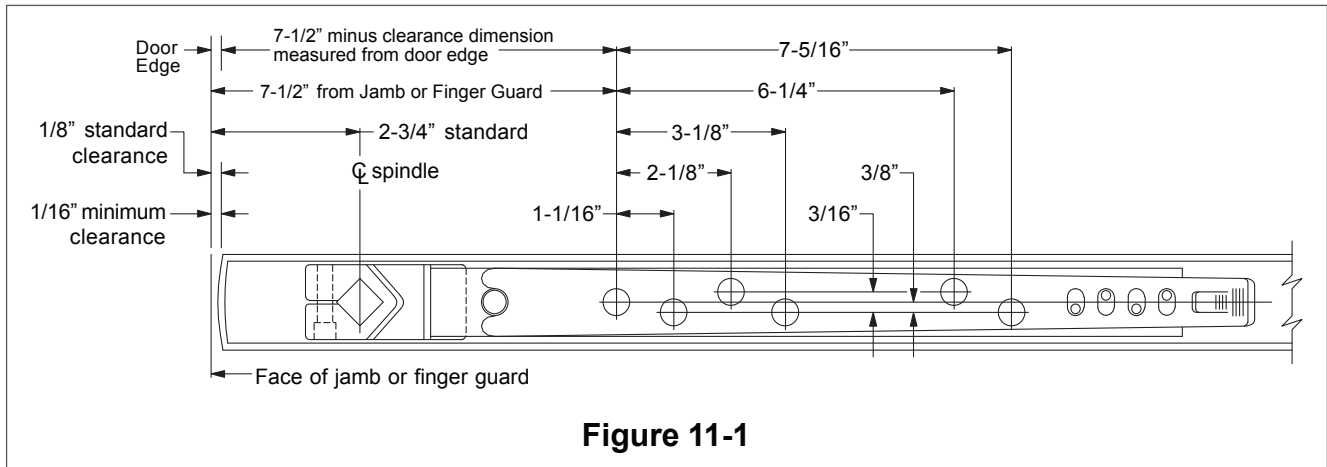


Figure 11-1

11b Install top arm and bottom pivot using screws supplied with those components (Figure 11-2). Use machine screws for metal door; use wood screws for wood door.

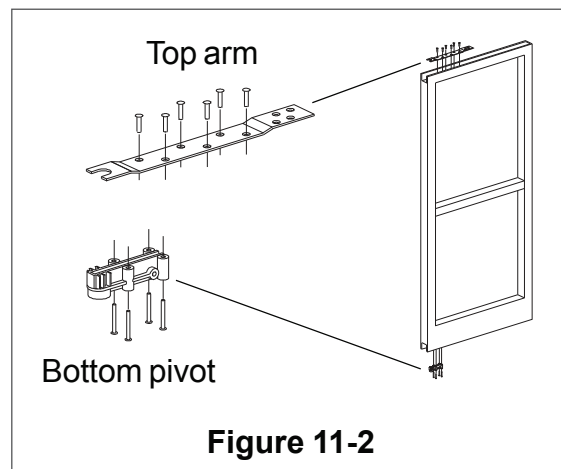


Figure 11-2

11c Orient the arm in the breakout position (Figure 11-3). Install the arm in the breakout position by pressing the arm onto the spindle until the end of the spindle is flush with the bottom surface of the arm (Figure 11-4). Tighten the Allen head cap screw on the arm (Figure 11-4).

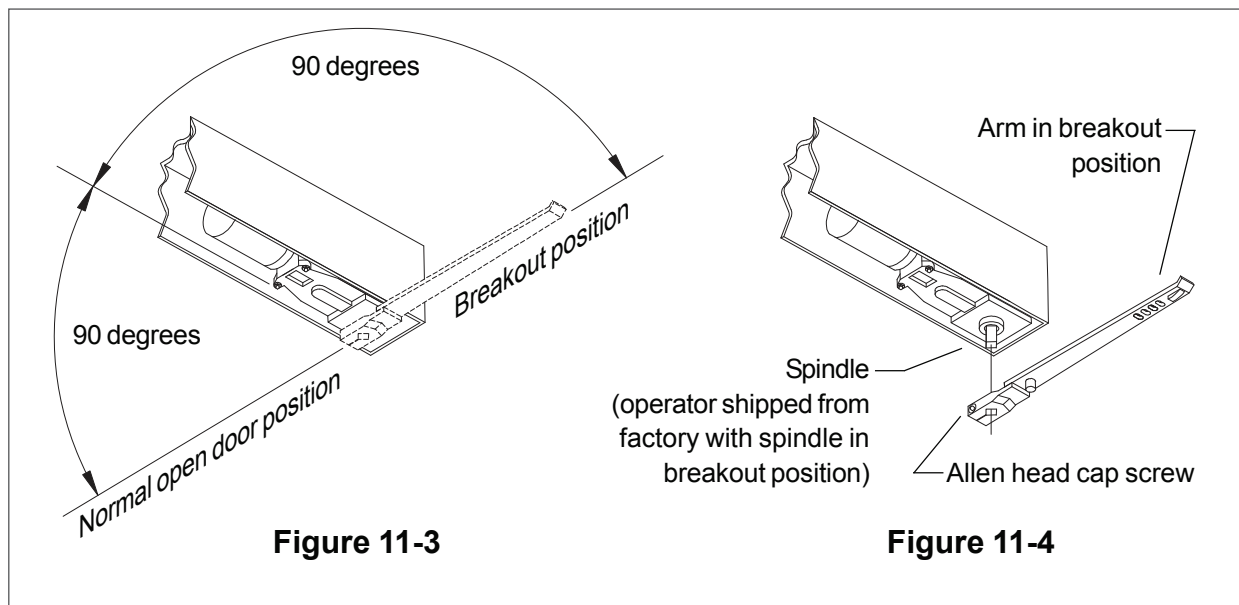


Figure 11-3

Figure 11-4

11d Position the door so the arm is in the top channel of the door and gently slide the door up against the lower pivot (Figure 11-5).

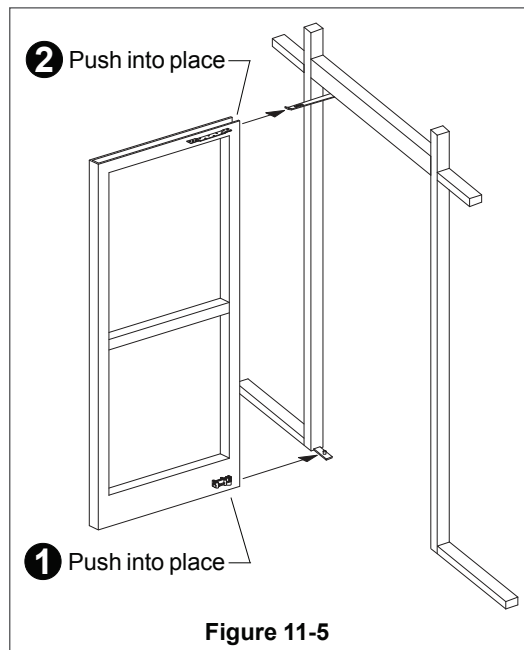


Figure 11-5

11e Lift the door slightly and push back until the bottom pivot locks into place.

11f Raise the nose of the door and push back until the top arm snaps into place.

11g Align the door in the open position (perpendicular to the opening).

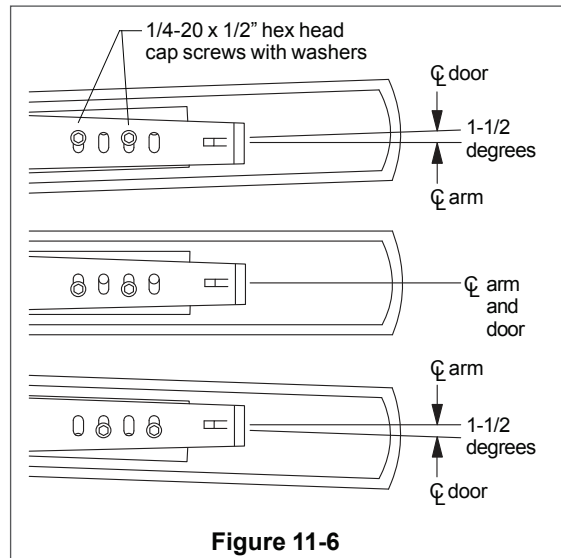


Figure 11-6

11h Install two 1/4-20 x 1/2" hex head cap screws and washers through two of the oval holes in the arm and into the top attachment arm (Figure 11-6).

11i Install screws in whichever of the positions shown align with the door in the open position (perpendicular to the opening).

11j Check door operation by pushing door to normal closed position, continue pushing through breakaway stop to 90 degree open position, and then release door. Door should close.




If the operator is not connected to the control box, the door will slam closed when released.

• Continue with "13. Glazing (Surface and Concealed)" on page 17.


12 Arm Installation (Surface and Concealed)

Surface

Push Arm: For surface header applications. To install, see separate instructions for Push Arm & Link Assembly.

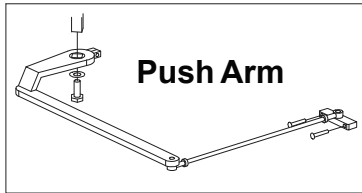


Pull Arm: For surface header applications, see separate instructions for Pull Arm Assembly.

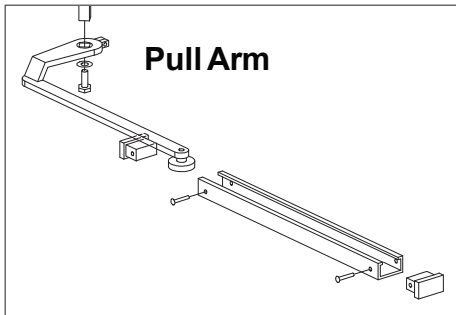

Concealed

Offset Arm: For concealed header applications with butt hung and offset pivoted doors. To install:

1. Prepare door and install slide channel (see separate Installation Instructions for Offset Arm).
2. Note position of operator spindle. Turn on operator power. Momentarily short activation wires so spindle slowly rotates toward full open position and stops. Continue doing this until spindle reaches full open position (refer to Figure 11-3), then join activation wires together with a wire nut.
3. Insert arm slide into slide channel, slide arm onto spindle, and tighten arm Allen head cap screw.
4. Remove wire nut from activation wires; turn off power.

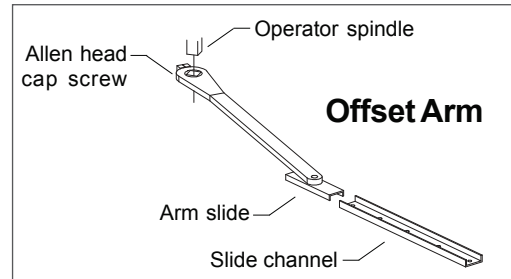

- Continue with "13. Glazing (Surface and Concealed)"

13 Glazing (Surface and Concealed)



Glazing material must comply with the ANSI standard specification.



Operator speed adjustments cannot be set properly until after the door is glazed.

- Continue with "14. Control Box Functions (Surface and Concealed)"

14 Control Box Functions (Surface and Concealed)

To set control box functions, see the Senior Swing Control Box installation instructions.

- Continue with "15. Plate Installation (Surface and Concealed)" on page 18.

15 Plate Installation (Surface and Concealed)

Surface

1. Install spindle plate and filler plate (Figure 15-1). Spindle plate cutout fits over operator spindle.

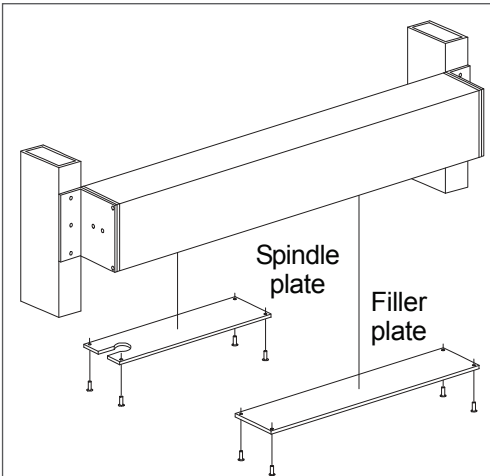


Figure 15-1

Concealed

For concealed header applications using offset arm with butt hung and offset pivoted doors only:

1. Prepare header dress plates for concealing channel (Figure 15-2; see separate Installation Instructions for Offset Arm).
2. Install concealing channel (Figure 15-2).

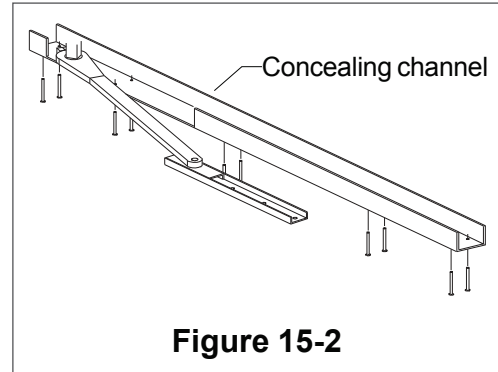


Figure 15-2

- Continue with "16. Release for Service (Surface and Concealed)"

16 Release for Service (Surface and Concealed)

16a Remove all tools, installation equipment, and debris from the vicinity of the door.

16b Install all safety, traffic control, and instruction decals on the door as required by the latest revision of ANSI/ BHMAA156.19 for the Senior Swing. This is very important! Failure to do this leaves the installer **LIABLE** for any accident that might occur. This must be done!

16c Verbally instruct the owner or person in charge of the proper operation of the door.

16d Instruct the owner or person in charge to routinely inspect the door for occasional damage, developing problems, minor preventive maintenance.

16e Instruct the owner or person in charge who and where to call for service when required.



Make sure to install all safety, traffic control, and instruction decals on the door as required.

Customer Service

1-877-671-7011 www.allegion.com/us



740100

Senior Swing Control Box

LCN®

2800 Overhead Concealed Series
9500 Surface Applied Series

Installation Instructions

⚠ IMPORTANT ⚠

These instructions are presented in step-by-step sequence. It is very important that installation begins with “1. Pre-Installation Site and Product Check” (page 3) and continues as directed after each section.

⚠ WARNING ⚠

Always disconnect main power to the operator prior to replacing.

Control box contains no serviceable parts inside.

Table of Contents

General Information	1
Electrical Specifications	2
1 Pre-Installation Site and Product Check	2
2 Installation	3
3 Wiring	3
4 Keypad Settings	7
5 System Test	11
6 Troubleshooting	12
7 Release for Service	13

General Information

The Senior Swing Control Box is for use with the Senior Swing Power Operator System. The system can operate a single door (2810, 9530, and 9540 Series), a simultaneous pair of doors (2850 and 9550 Series), or an independent pair of doors (2860 and 9560 Series).

ANSI/BHMA A156.19 Compliance

The Senior Swing Power Operator System is a low energy product and must conform to the latest version of ANSI/BHMA A156.19 (American National Standard for Power Assist and Low Energy Power Operated Doors).

Installation Instructions

All installation instructions are valuable references and should be given to the building owner or maintenance supervisor after installation is complete.

The Senior Swing Control Box installation instructions and the manufacturer's instruction manual accompanying any sensor must be referenced to ensure proper installation, setup, and operation.

Electrical Specifications

AC input voltage	120 VAC
AC fuse	120 VAC, 2.5 A time-delay fuse
Motor protection	Solid state failure detection and shutdown
Activate inputs	dry NO contacts (close contacts to open door)
Safety inputs	dry NO contacts (closed contacts indicate an obstruction)
Breakaway input	dry NC contacts (open contacts indicate breakaway)
3-position switch input	dry 3-position switch
Power Boost disable input	dry NO contacts (close contacts to disable Power Boost)
Lock output	Form C dry relay contacts rated 8 A, 30 VDC maximum
Accessory power output	24 VAC, 1.5 A (protected by resettable thermal fuse)
Logic power output	5 V, 50 mA (protected by resettable thermal fuse)

1 Pre-Installation Site and Product Check

⚠ IMPORTANT ⚠

Factory Authorized Door Leaf Size and Weight

Type	Width per Leaf	Maximum Weight per Leaf
Single Door	36" to 48"	200 lb.
Simultaneous Pair	30" to 48"	200 lb.

- 1a All required installation steps listed before "8. Control Box Installation" in the Senior Swing installation instructions should be completed before installing the Senior Swing control box.
- 1b Check that the control box model (indicated on control box label; Figure 1-1) is correct for the application.
- 1c Check that the available AC voltage matches the control box voltage requirement (120 VAC).
- 1d Check that all accessories required for the application are on hand.

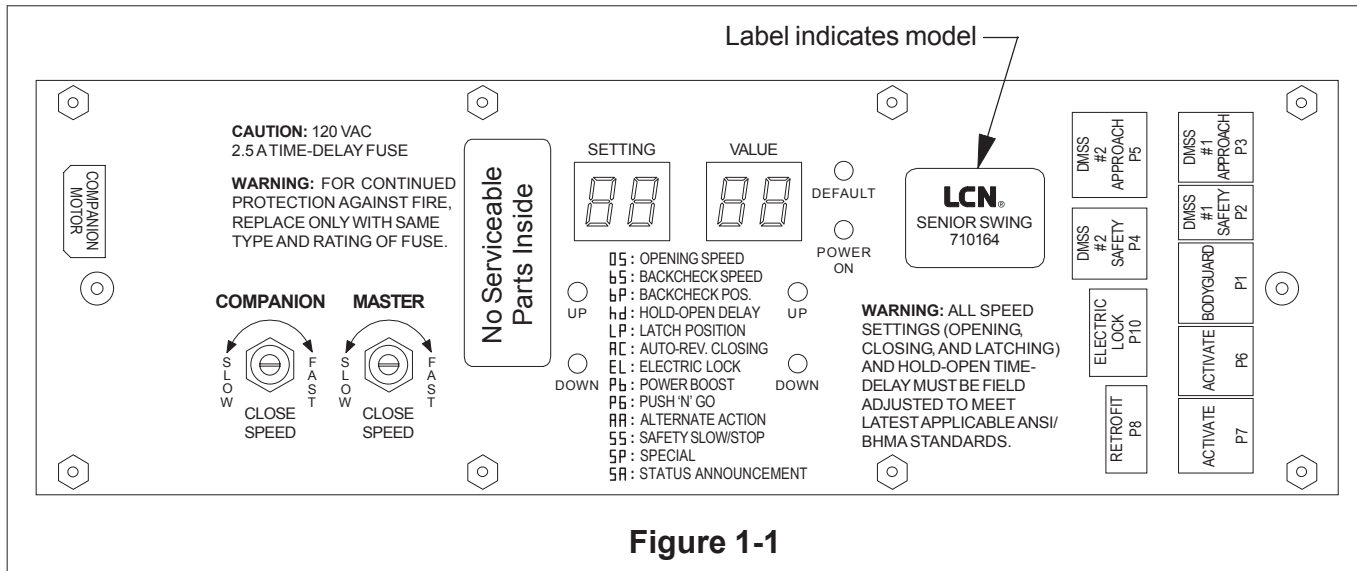


Figure 1-1

2 Installation

To install the Senior Swing Control Box, follow the Senior Swing installation instructions beginning with “8. Control Box Installation” on page 12 of those instructions.

⚠ CAUTION ⚠


**Improper installation or set up may result in personal injury or property damage. Follow instructions carefully.
For answers to questions, call 1-877-671-7011**

3 Wiring

- Review the separate wiring diagrams in the accessory instructions so that all wiring can be completed.
- See Figure 3-1 for system configuration terminology.
- See Figure 3-2, Figure 3-3, and Figure 3-4 for names and locations of control box connectors.
- See Figure 3-5 for control box plug and jack descriptions, wiring, and mating cables.
- See Figure 3-6 for electric strike locking device sample wiring.
- See Figure 3-7 for EL (electric latch retraction) locking device sample wiring.

⚠ CAUTION ⚠

When joining or separating a plug and receptacle, do not push or pull on wires. This may cause a wire to be pulled loose from a terminal, which may result in a malfunction.

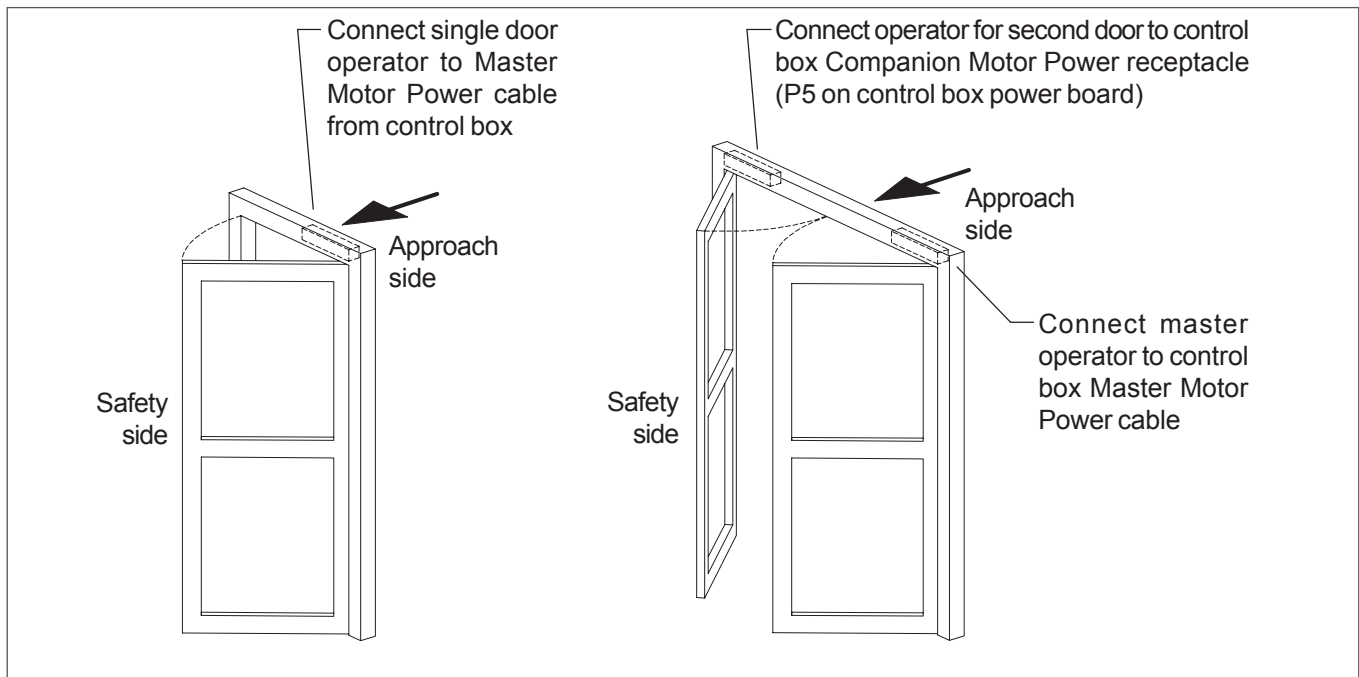

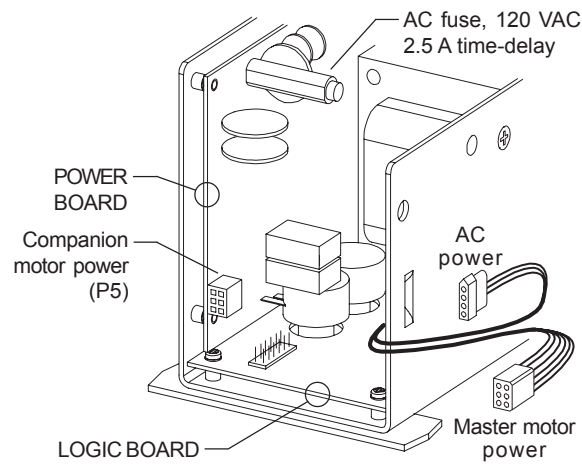


Figure 3-2. Control box power board connectors.

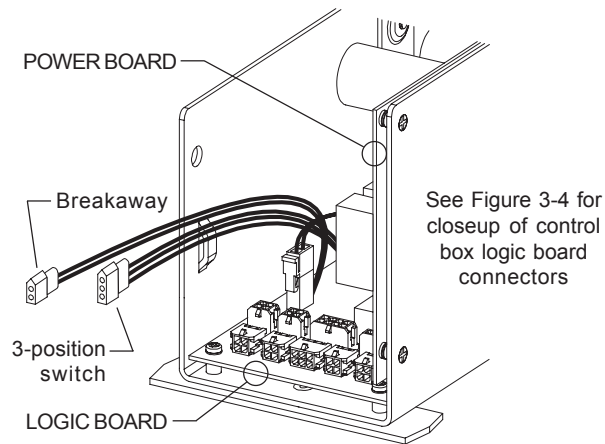


Figure 3-3. Control box logic board connectors.

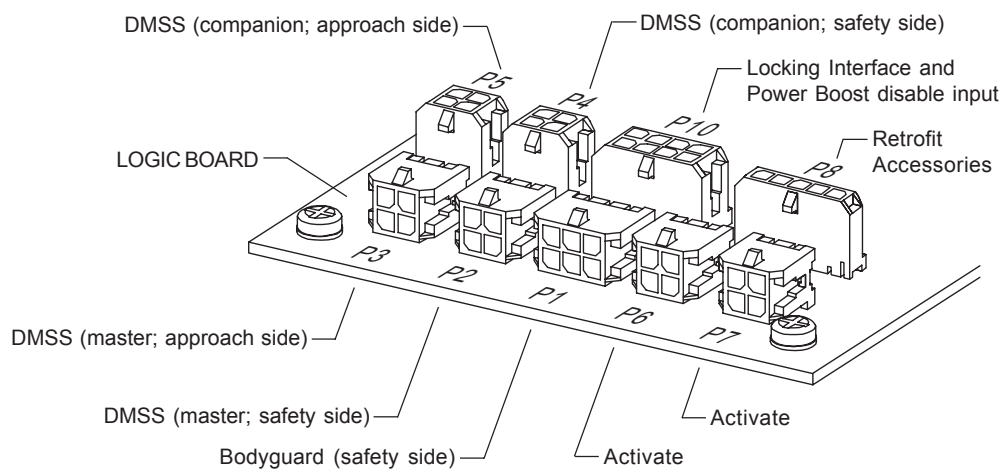


Figure 3-4. Closeup of control box logic board connectors.

LOGIC BOARD

Bodyguard (master; safety side): Prevents door from opening; holds open door in open position (uses door state data from control box to ignore door movement while opening/closing)

P1
on-board connector

If used

Cable
761468

Bodyguard
JST-type
connector

Bodyguard cable
to Bodyguard
sensor

DMSS (master; safety side): Prevents door from opening, and slows an opening door

P2
on-board connector

If used

Safety

DMSS
harness
761467

Black, 24 VAC
Red, 24 VAC
White, Slowdown
Green, Ground

To DMSS
(master;
safety side)

DMSS (master; approach side): Initiates a door opening cycle if activated while door is closing

P3
on-board connector

If used

Approach

DMSS
harness
761467

Black, 24 VAC
Red, 24 VAC
White, Activate
Green, Ground

To DMSS
(master;
approach side)

DMSS (companion; safety side): Prevents door from opening, and slows an opening door

P4
on-board connector

If used

Safety

DMSS
harness
761467

Black, 24 VAC
Red, 24 VAC
White, Slowdown
Green, Ground

To DMSS
(companion;
safety side)

DMSS (companion; approach side): Initiates a door opening cycle if activated while door is closing

P5
on-board connector

If used

Approach

DMSS
harness
761467

Black, 24 VAC
Red, 24 VAC
White, Activate
Green, Ground

To DMSS
(companion;
approach side)

Activate: Initiates a door opening cycle

P6
on-board connector

If used

Cable
761464

Black, 24 VAC
White, 24 VAC
Yellow, Activate
Gray, Ground

Used only for powered activation device
Activate cable
To normally open Activate contacts

Activate: Initiates a door opening cycle (operates identically to P6 and is provided as a convenience if 2 activations are used)

P7
on-board connector

If used

Cable
761464

Black, 24 VAC
White, 24 VAC
Yellow, Activate
Gray, Ground

Used only for powered activation device
Activate cable
To normally open Activate contacts

Retrofit Accessories: Accesses older model Activate, Slow/Stop, and Carpet Safety inputs

P8
on-board connector

Retrofit only

Cable
761469

Blue, Carpet Safety
Gray, Ground
Yellow, Activate
Violet, Slowdown

To existing cable
710057 (old part
No. 81276)

Breakaway: Disables operator inputs when Breakaway switch is active

permanent
connections

Orange
Black

To normally closed
Breakaway switch
or jumper 81269

3-Position Switch: OFF, AUTO, HOLD

permanent
connections

Red
Green
Black

To 3-position
switch (if used)

Locking Interface: Power output and relay contacts for locking devices; Power Boost disable input

P10
on-board connector

If used

Cable
761465

Blue, Power Boost disable
Black, Ground
Violet, Relay NO
Gray, Relay COM
Brown, Relay NC
Green, 5 V
White, 24 VAC
White, 24 VAC

To normally open
Power Boost
disable contacts
To locking device
(see page 7 for
sample wiring)

POWER BOARD

Companion Motor Power: Companion motor power (use only for second door of simultaneous pair of doors)

P5
on-board connector

If used

Cable
761466

To motor cable of
companion operator
(use only for second
door of simultaneous
pair of doors)

Master Motor Power: Master motor power (use for single door)

permanent
connections

To motor cable of
master operator
(always use for
single door)

AC Input: 120 VAC

permanent
connections


Cable
761463

Black, Hot AC
White, Neutral AC
Green, Earth Ground

To 120 VAC


Figure 3-5

① **NOTE:** Always wire the locking device to the NO (normally open) contact of the control box locking interface and use the keypad to set the EL (electric lock) setting to either SA (fail safe) or SE (fail secure).

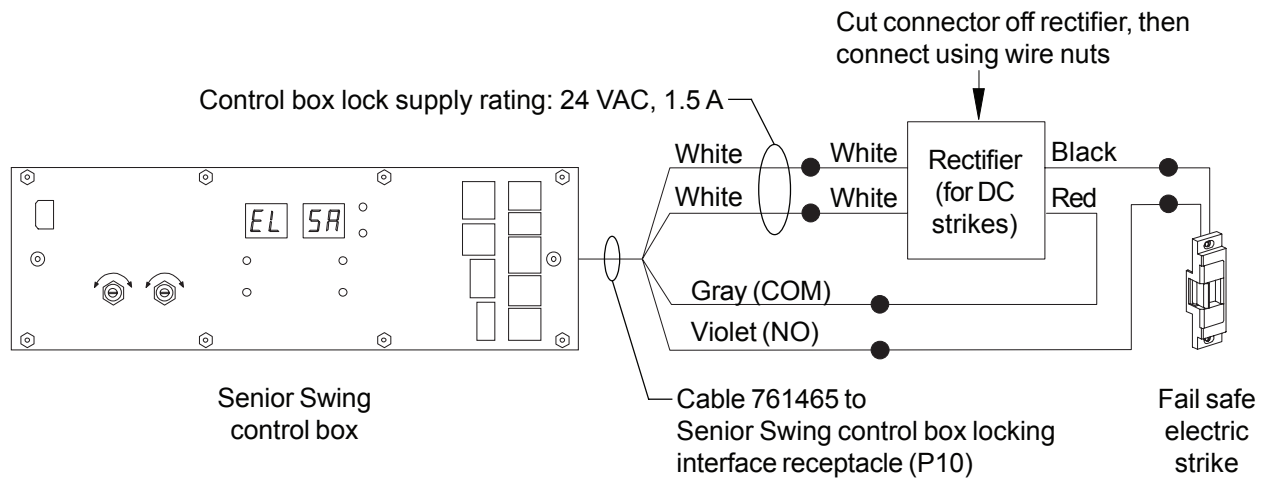

The keypad EL (electric lock) setting is SA (fail safe). When the operator is on, the strike is locked when the door is closed and unlocked when the door is opening. When the 3-position switch is set to OFF, the strike is unlocked.

Figure 3-6. Sample Wiring for a Fail Safe Electric Strike Locking Device

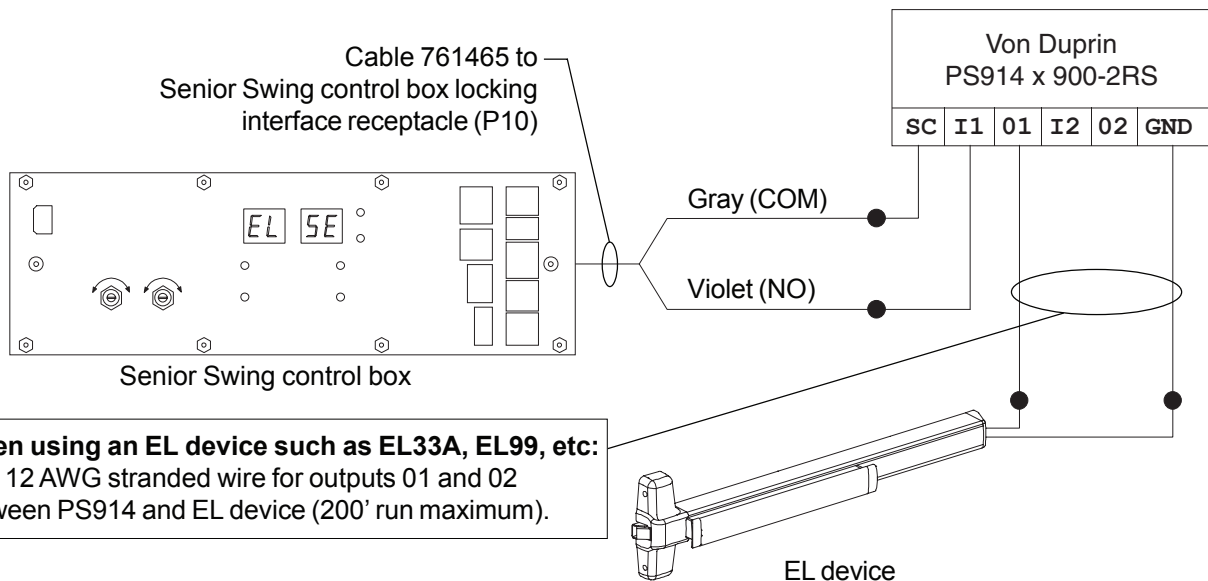

The keypad EL (electric lock) setting is SE (fail secure). The control box locking relay signals the PS914 x 900-2RS. When the operator is on, the EL device is locked when the door is closed and unlocked when the door is opening. When the 3-position switch is set to OFF, the EL device is locked.

Figure 3-7. Sample Wiring for a Fail Secure EL (Electric Latch Retraction) Locking Device

4 Keypad Settings

Settings (except for close speed) for the Senior Swing Power Operator System are changed using keypad pushbuttons and an alphanumeric display on the control box (Figure 4-1 and Figure 4-2). Close speed is changed using dials on the control box (Figure 4-1).

See page 9 and page 10 for directions for changing the values of settings.

⚠ CAUTION ⚠

Adjust the operator for the slowest operation practical in accordance with the latest revisions of Americans with Disabilities Act, ANSI/BHMA A156.19 (American National Standard for Power Assist and Low Energy Power Operated Doors), and local codes.

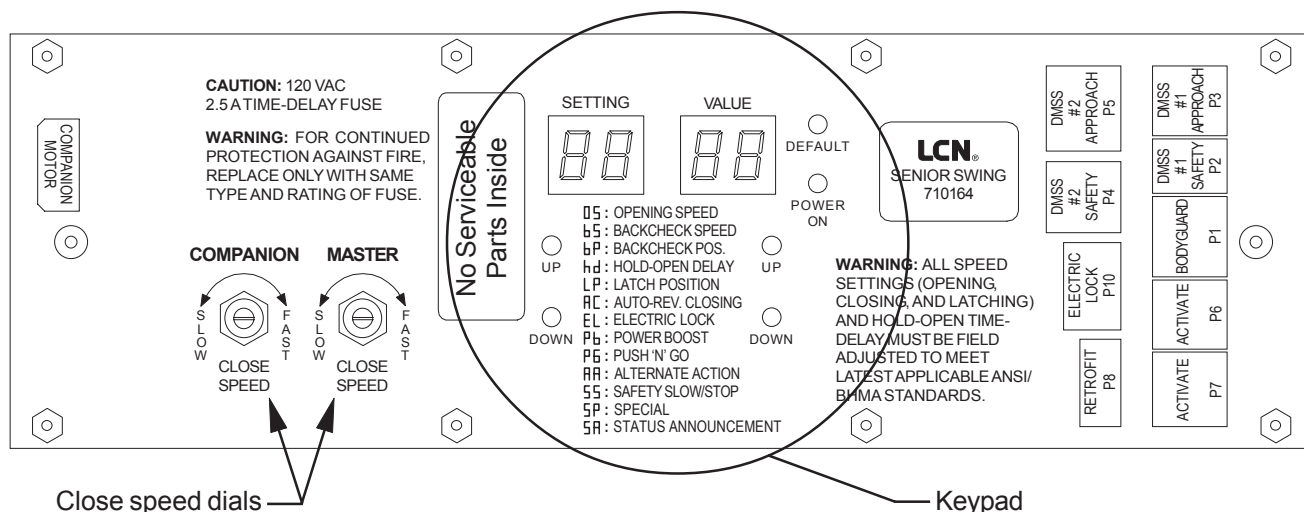


Figure 4-1. Control Box Panel with Keypad

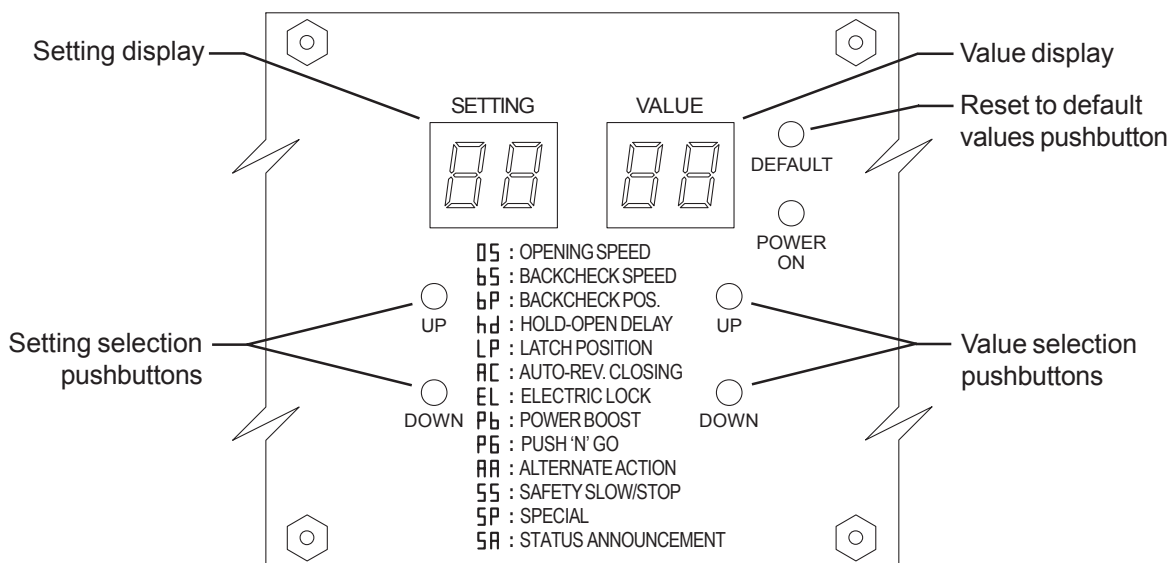


Figure 4-2. Closeup of Control Box Keypad



WARNING

KEEP HANDS, CLOTHING, WIRES, TOOLS, LADDERS, ETC. AWAY FROM THE DOOR WHEN THE OPERATOR IS INITIALLY TURNED ON.

See Figure 4-3 for definitions of the positions of the door throughout the opening and closing cycle.


See Table 4-1 for explanations of the keypad settings.

To change setting values:

1. Set the 3-position switch, if used, to OFF.
2. Apply AC power. The POWER light will illuminate and the display will remain blank.
3. Press any two pushbuttons at the same time for 1 second to turn on the keypad. The display will illuminate.
4. Press the UP or DOWN setting selection pushbutton to select the desired setting. The setting is shown in the SETTING display, and the current value for that setting is shown in the VALUE display.
5. Press the UP or DOWN value selection pushbutton to select the desired value for the displayed setting. The value for the setting is indicated in the VALUE display.
6. The keypad will automatically turn off after 5 minutes of inactivity.

To reset all values to default (default values are listed in Table 4-1 under “Selectable Values”):

1. Set the 3-position switch, if used, to OFF.
2. Apply AC power. The POWER light will illuminate, and the display will remain blank.
3. Press any two pushbuttons at the same time for 1 second to turn on the keypad. The display will illuminate.
4. Press the DEFAULT pushbutton for 4 seconds.
5. The values are set to default, and the display will indicate the opening speed setting and value.
6. The keypad will automatically turn off after 5 minutes of inactivity.

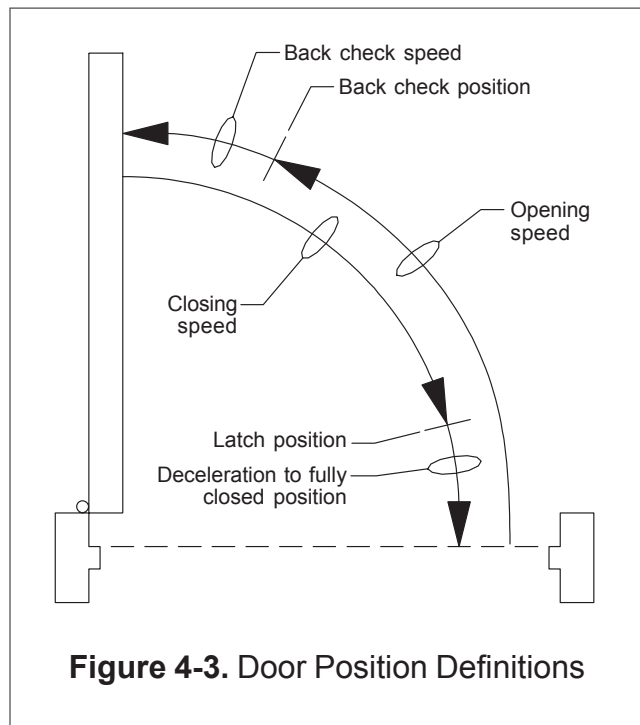

Safety side Door Mounted Safety Sensor (DMSS) disable feature

Purpose:

Deactivate the Door Mounted Safety Sensor (DMSS) on safety side of door to eliminate nuisance detection of a wall or guard rail.

1. Install control box, all door hardware and safety devices per their instructions.
2. Setup DMSS sensors in accordance with ANSI standard 156.10.
3. Use keypad to set SAFETY SLOW/STOP (SS) value to STOP (SP).
4. Use keypad to set SLOWDOWN DISABLE (SD) value to 85.
5. Activate door opening cycle. If door does not open fully, use keypad to reduce SD value from 85 in 5 degree increments.
6. Repeat Step 5 until door opens fully.
7. Perform a complete system test as described in the section 5.

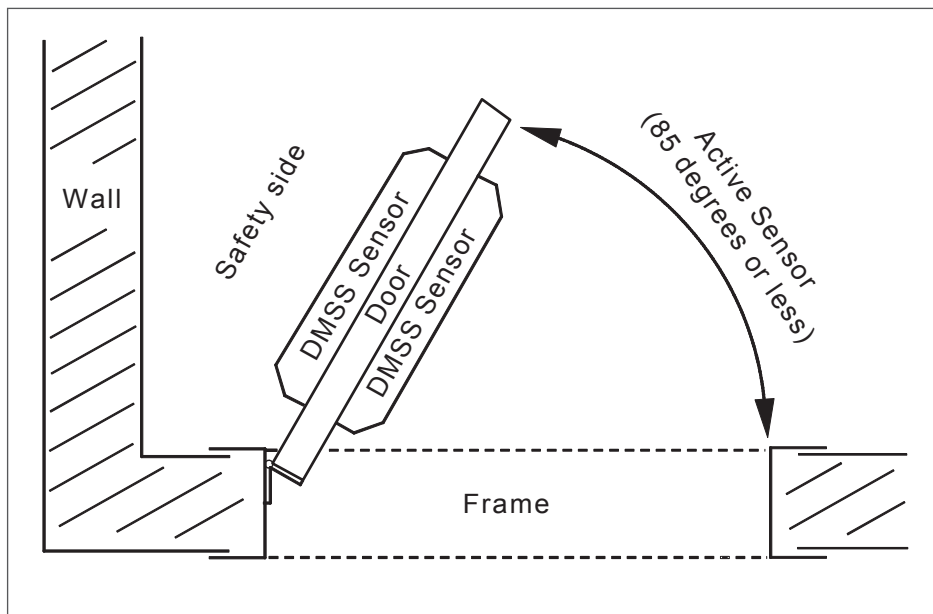


Table 4-1. Control Box Settings and Selectable Values

Setting	Setting Display	Selectable Values	Values as Displayed	Description
Opening Speed	OS	01 = slow 02 = medium 03 = fast (default = 01)	01 02 03	Controls opening speed of any normal weight and size door
Back Check Speed	BS	01 = 1 door 02 = 2 doors (default = 01)	01 02	Controls speed of door near full open position to prevent door slamming open
Back Check Position	BP	45-80 degrees (default = 70)	45-80	Approximate angle at which door begins to decelerate near the full open position
Hold Open Delay	hd	01-32 seconds (default = 05)	01-32	Amount of time (in seconds) door remains fully open following an activate signal
Latch Position	LP	00-23 degrees (default = 13)	00-23	Approximate angle at which door begins to decelerate near the full closed position
Auto Reverse Closing	RC	off, on (default = off)	0F 0n	When on, door will re-open upon hitting an obstruction
Electric Lock	EL	off SA = fail safe SE = fail secure (default = off)	0F 5A 5E	To turn on, set to SA (fail safe) or SE (fail secure) to match locking device connected to control box locking interface receptacle (P10); when on, causes a 1 second delay between activate signal and door opening to allow time for most electric locks to disengage before operator opens door
Power Boost	Pb	off 5 seconds continuous (default = off)	0F 55 Cn	When on, increases closing force of door from 9 lbs to 18 lbs to close door against high winds or stack pressure; turns on for 5 seconds or continuously after door reaches latch position during closing cycle; disabled by Power Boost disable input
Push 'N' Go	PG	off, on, fd (default = off)	0F 0n Fd	When set to On or Fd, pushing door open 5 degrees causes operator to open door remainder of way and hold open. Hold open time is same as hd setting when set to On. Hold open time is 1 second when set to Fd.
Alternate Activate	AA	off, on (default = off)	0F 0n	When on, door stays open until a second activate signal is received.
Safety Slow/Stop	SS	slow, stop (default = slow)	5L 5P	Determines response to a DMSS on the safety side of the door; if SL (slow), door goes to back check speed; if SP (stop), door stops for 5 seconds, then continues opening at back check speed
Special	Sd	off 30-85 (default = off)	0F 30-85	Deactivate the Door Mounted Safety Sensor (DMSS) on safety side of door to eliminate nuisance detection of a wall or guard rail.
Status Announcement	SA	Reserved	Reserved	Reserved



WARNING

KEEP HANDS, CLOTHING, WIRES, TOOLS, LADDERS, ETC. AWAY FROM THE DOOR WHEN THE OPERATOR IS INITIALLY TURNED ON.

If control box does not operate as expected during system test, see section 6 for troubleshooting tips.

5a With the door closed, set the 3-position switch, if used, to AUTO and turn on all AC power. For applications using companion door, try to get both doors to open same amount of degrees before hitting hard stop (either internal gearbox stop or rubber bumper on wall).

5b Activate the operator using an activation device. The operator should perform one sizing cycle.

Sizing cycle: Occurs when the door is activated for the first time after power is turned on. During the sizing cycle, the door opens and closes once.

If the door sizes properly, go to step No. 5.3.

If the door does not open at all during the sizing cycle:

- Check that the 3-position switch, if used, is not set to OFF.
- Check door for binds and proper mechanical installation.
- Verify that all safety sensors are inactive.
- If an electromechanical lock is used, check that the lock disengages before the operator opens the door.
- Verify that the Breakaway switch, if used, is connected to NC contacts. If a Breakaway switch is not used, check that the Breakaway cable coming from the control box logic board is jumpered (jumper part No. 761492-00).
- Check fuse, wiring, and connections.
- Adjust the operator as follows and check door operation:

Opening speed: 01

Back check speed: 01 for one door, 02 for two doors

Hold open delay: 05

Back check position: 75

Latch position: 10

Close speed: medium

Electric lock: SA (fail safe) or SE (fail secure) to match lock

If the door does not open fully during the sizing cycle, check door for binds, obstructions, or items that could activate safety sensors.

- 5c After the sizing cycle is complete and the door is closed, apply a maintained activation signal and check that the door remains open while the activation signal is applied. Then release the activate signal and verify door closes after the open time delay expires.
- 5d To check the function of the door safety device:
1. Activate the door and then activate the approach side safety device while the door is open. The door should not close while the safety device is activated. Next, deactivate the safety device. The door should close after the hold open time delay expires.
 2. With the door closed, activate the safety side safety device, then activate the door. The door should not open while the safety device is activated. Next, deactivate the safety device. The door should open when activated.
- 5e Set the 3-position switch, if used, to HOLD. Verify that the door opens and stays open.
- 5f Set the 3-position switch, if used, to OFF. Verify that the door closes. Verify that an activate signal does not open the door.
- 5g If a Breakaway switch is connected, set the 3-position switch, if used, to AUTO, then break open the door. Verify that an activate signal does not cause the door to move. Re-latch the door after testing.
- 5h Do not release the system for service until it is operating properly.

6 Troubleshooting

6a Identify all switch and sensor inputs that are currently active:

1. Remove breakaway jumper to enter diagnostic mode.

① **Note: When in diagnostic mode, controller will not open door.**

2. Keypad display shows each active input signal for 1 second. See table below:

(Key switch) set to Auto OR is not present	SA80
(Key switch) set to OFF	SA81
(Key switch) set to HOLD	SA82
(Activate) input is ON	SA83
(DMSS approach) activate input is ON	SA84
(DMSS safety) slowdown input is ON	SA85
(Carpet Safety) input is ON	SA86
(Bodyguard) input is ON	SA87
(Power Boost Disable) input is ON	SA88

For example, if key switch is set to Auto, Activate button is pressed, and DMSS sees something on the safety side, then display will repeat the sequence SA80, SA83, SA85 continuously until breakaway jumper is replaced.

3. After completing diagnostics, reinstall breakaway jumper for normal operation.

- 6b If control box does not function and the error message Er## flashes on the control box Setting and Value displays, turn AC power off and on to reset the control box. The following are common errors and suggested fixes:

ER 06: Master motor problem - verify master motor cable is connected to motor.

ER 14: Companion door added to a setup that was already sized - turn AC power off, then on and resize with both doors connected.

If problem cannot be corrected by using suggested fixes, contact 1-877-671-7011.

7 Release for Service

- 7a Remove all tools, installation equipment, and debris from the vicinity of the door.

- 7b Install all safety, traffic control, and instruction decals on the door as required by the latest revision of ANSI/BHMA A156.19. This is very important! Failure to do this leaves the installer **LIABLE** for any accident that might occur. This must be done!

- 7c Verbally instruct the owner or person in charge of the proper operation of the door.

- 7d Instruct the owner or person in charge to routinely inspect the door for the following:

- Visible damage
- Developing problems
- Minor preventive maintenance

- 7e Instruct the owner or person in charge who and where to call for service when required.



Make sure to install all safety, traffic control, and instruction decals on the door as required.




740013


Offset Pivot Arm

LCN®

Installation Instructions

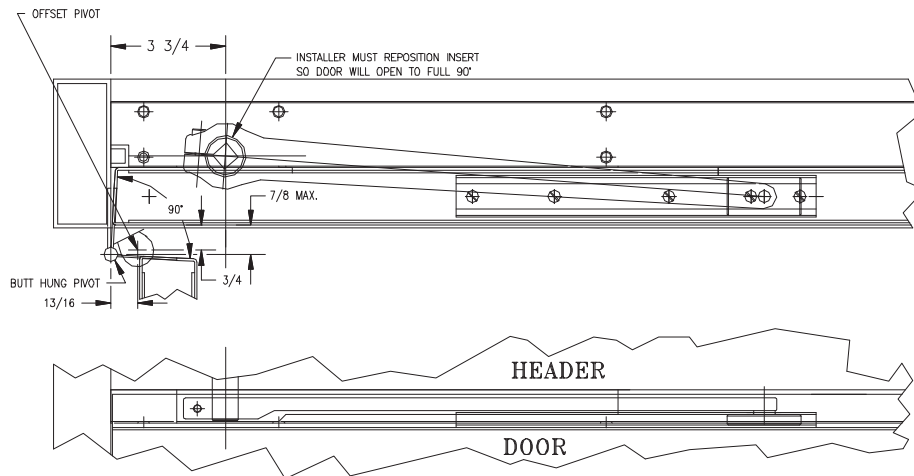


RIGHT HAND SHOWN
LEFT HAND OPPOSITE

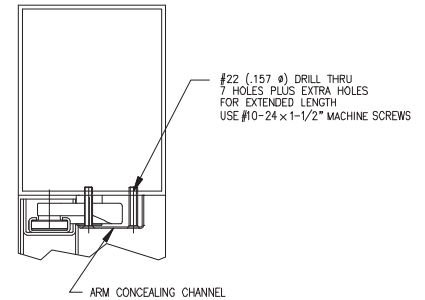


**MUST USE
3 3/4\"/>**

METAL DOOR

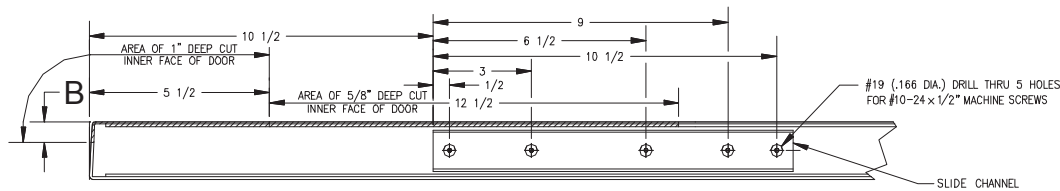

WOOD DOOR

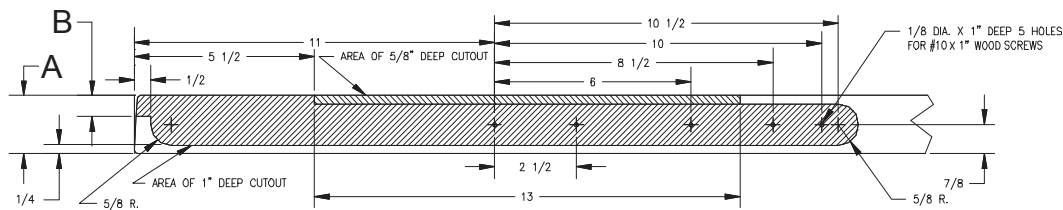



Door Thickness (A)	Measurement B
1 3/4"	5/8"
2"	7/8"
2 1/4"	1 1/8"
2 3/8"	1 1/4"
2 1/2"	1 3/8"

Customer Service

1-877-671-7011 www.allegion.com/us



© Allegion 2015
Printed in U.S.A.
740013 Rev. 04/15-d

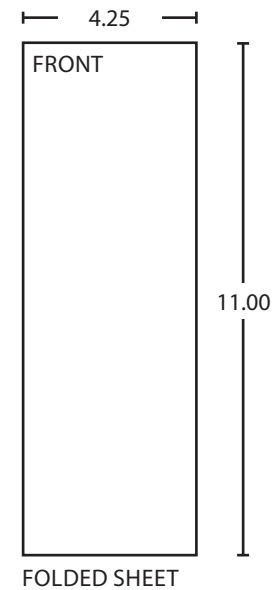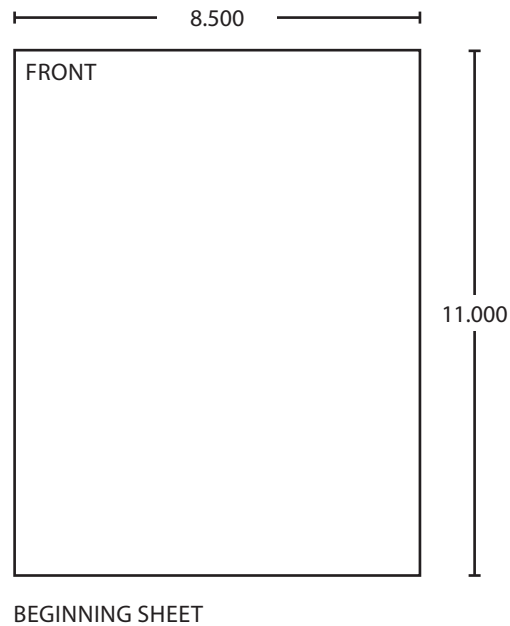

Additional Notes:
1. None

Revision History						Revision Description: D > Revised artwork						
A	B	C	D	E	F							
N/A	N/A	047232	060910									
Material White Paper						Edited By		Approved By		EC Number	Release Date	
						D. Myers		M. Sasso		060910	04-23-15	
Notes 1. printed one side 2. printed black 3. tolerance ± .13 4. printed in country may vary 5. drawings not to scale						Title INSTALLATION INSTRUCTIONS FOR OFFSET PIVOT ARM						
						Creation Date 08-30-08		Number 740013			Revision D	
						Created By N/A		Activity 3899 Hancock Expwy Security, CO 80911		© Allegion 2015		
						Software: InDesign CS6						