

INSTRUCTIONS FOR INSTALLING 8888, 12-8888, 8800, 12-8800, WS8800, 12-WS8800, HC-8800 and 12-HC8800 SERIES RIM EXIT DEVICES WITH ALL STANDARD TRIM

SARGENT®

ASSA ABLOY

FOR ASSISTANCE, CONTACT SARGENT AT 800-727-5477 or www.sargentlock.com

US PATENT No 268003 • CANADIAN PATENT No RD1981

ASSA ABLOY, the global leader
in door opening solutions

CAUTION!

BEFORE STARTING:

- READ INSTRUCTION SHEET CAREFULLY
- INSTALL MULLION IF USED
- DOOR SHOULD BE FITTED AND HUNG
- CHECK BOX LABEL FOR SIZE OF EXIT DEVICE


AVAILABLE STOCK LENGTHS

- Length "E": 32" door, no cut off required.
Can be cut to fit doors down to 24" wide.
- Length "F": 36" door, no cut off required.
Can be cut to fit doors down to 33" wide.
- Length "J": 42" door, no cut off required.
Can be cut to fit doors down to 37" wide.
- Length "G": 48" door, no cut off required.
Can be cut to fit doors down to 43" wide.

IMPORTANT:

*SURFACE OF THE DOOR WHERE EXIT DEVICE IS APPLIED MUST BE FLUSH.
CLEAR AWAY ANY RAISED PROJECTIONS TO ALLOW EXIT DEVICE TO REST ON FLAT SURFACE OF THE DOOR.

*IF SHIM KIT IS REQUIRED,
CONTACT YOUR
DISTRIBUTOR

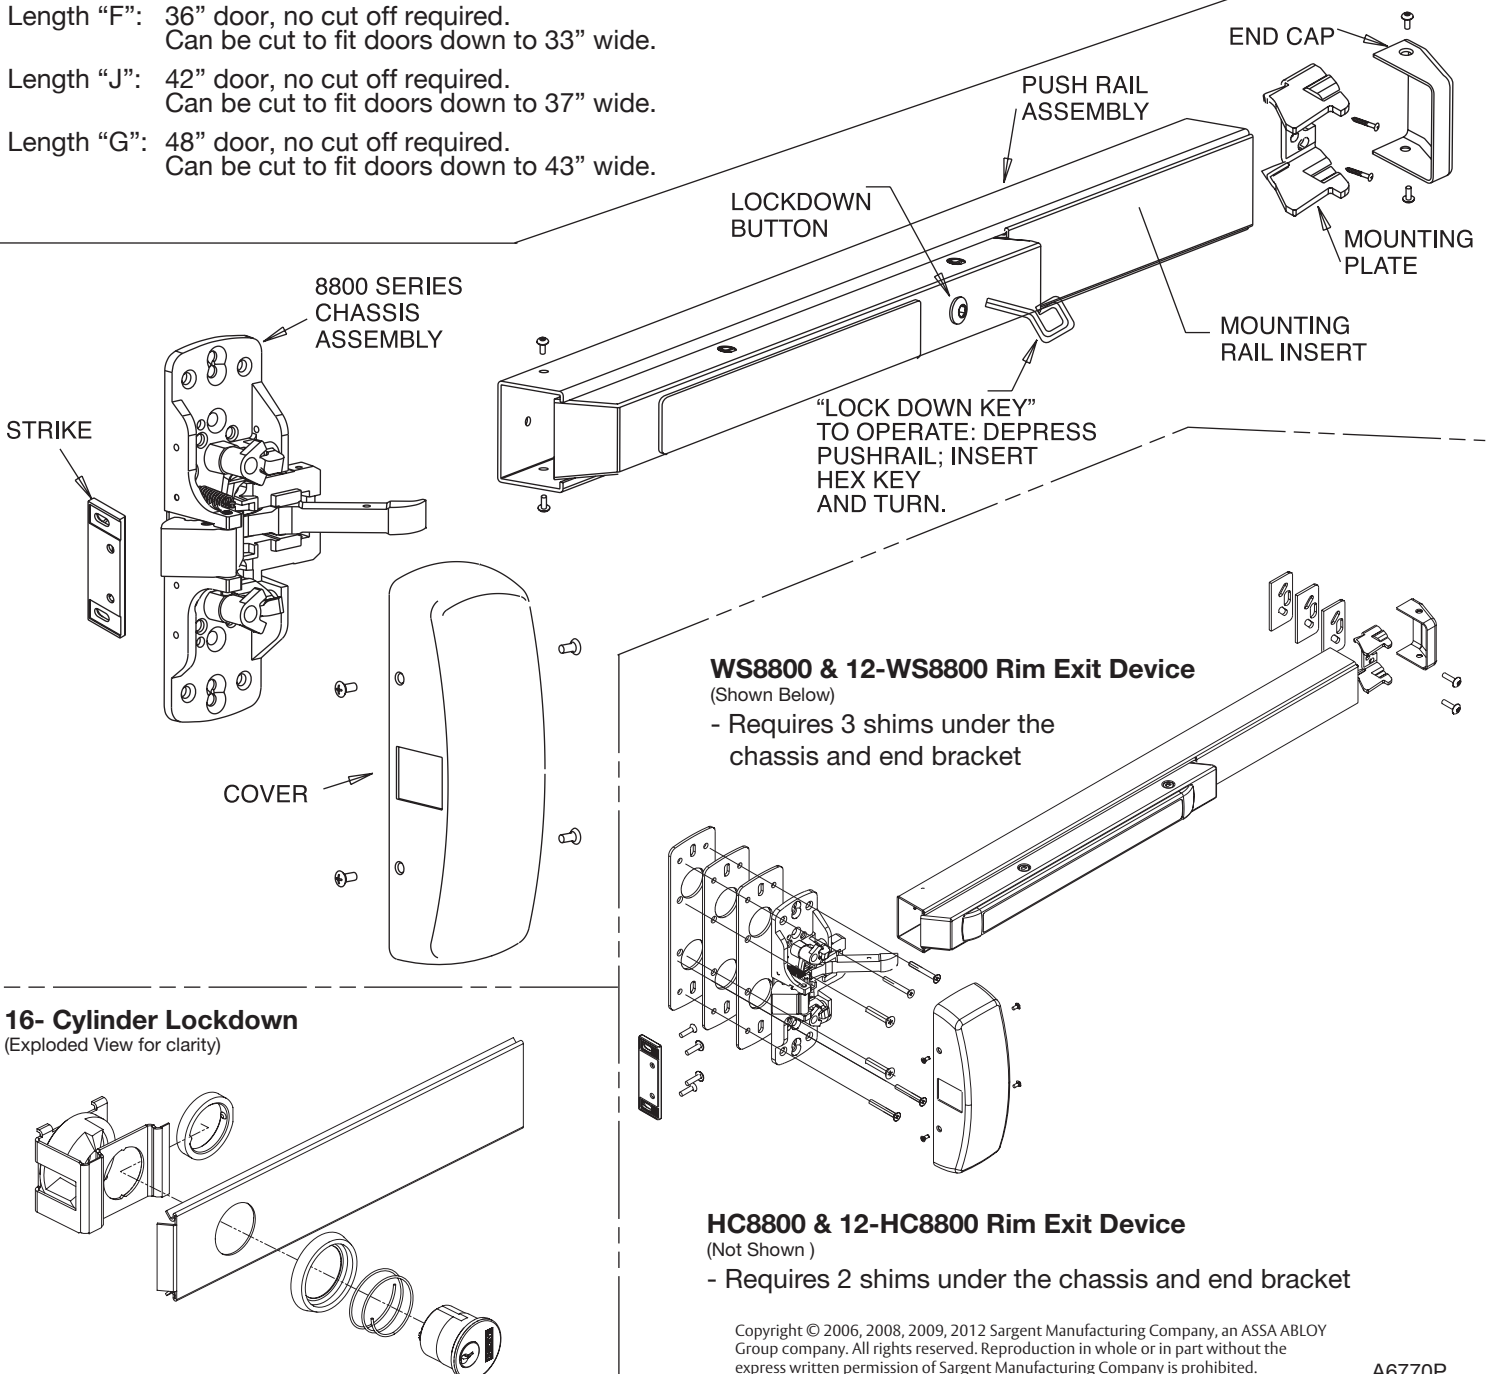

Copyright © 2006, 2008, 2009, 2012 Sargent Manufacturing Company, an ASSA ABLOY Group company. All rights reserved. Reproduction in whole or in part without the express written permission of Sargent Manufacturing Company is prohibited.

A6770P

SCREWS USED FOR EXIT DEVICE INSTALLATION


SARGENT®

ASSA ABLOY


ATTENTION:

ALL SCREWS ARE SHOWN IN ACTUAL SIZE


SOME SCREWS WILL BE LONGER FOR DOORS OVER 1 3/4" THICK




ET MOUNTING SCREW (1-3/4" DOOR)
(1/4"-20 X 2-3/8" PH. FL. HD.
MACH. SCREW)



PULL TRIM MOUNTING SCREW
(1-3/4" DOOR)(1/4"-20 X 1-3/8"
PH. FL. HD. MACH. SCREW)



STRIKE MOUNTING SCREW, OUTER
(#10-24 X 3/4" PH. OV. HD.
MACH. SCREW) (STEEL FRAME)



GROMMET NUT



STAR WASHER




CUP WASHER




COVERS MOUNTING SCREW
(#8-32 X 5/16" WITH
#6 PH. OV. U' CUT HD.
MACH. SCREW, 6 PCS)




RAIL MOUNTING SCREW
(#8-32 X 3/8" PH. TRUSS
HEAD MACH. SCREW., 2 PCS)




CHASSIS MOUNTING SCREW
(1/4"-20 X 5/8" PH. FL. HD.
MACH. SCREWS., 2 PCS)




CHASSIS MOUNTING SCREW
(#10-24 X 3/4" PH. FL. HD.
MACH. SCREWS, 4 PCS)




CYLINDER MOUNTING SCREW (STD)
(#10-24 X 1-7/8" WITH
#8 PH. FL. HD. MACH. SCREW)




"LL" TYPE TRIM MOUNTING SCREW
(#10-32 X 5/8" PH. FILLISTER
HD. SEMS MACH. SCREW)




MOUNTING PLATE OR 649 STRIKE
MOUNTING SCREW, INNER
(#10-24 X 3/4" PH. RD.
HD. MACH. SCREW)




CHASSIS MOUNTING SCREW
FOR WOOD DOOR APPLICATION
(#10 X 1-1/4" PH. FL. HD.
WOOD SCREW, 4 PCS)



CHASSIS MOUNTING SCREW
FOR WOOD DOOR APPLICATION
(#14 X 1-1/2" PH. FL. HD.
WOOD SCREW, 2 PCS)



641 STRIKE MOUNTING SCREW
(#10 X 1-1/4" PH. OV. HD.
WOOD SCREW) (WOOD FRAME)



MOUNTING PLATE MOUNTING
SCREW (WOOD DOOR)
(#10 X 1-3/8" PH. RD. HD.
WOOD SCREW, 3 PCS)

THESE SCREWS PROVIDED FOR WOOD DOOR OR FRAME APPLICATIONS.

SCREW PACKS AND MISCELLANEOUS PARTS

PART No.	DESCRIPTION	PART No.	DESCRIPTION
68-3367	MOUNTING PACK (END CAP)	68-3922	MOUNTING PACK (CHASSIS)
68-3905	COVER SCREW PACK	809	TOUCH BAR REPLACEMENT KIT
68-2279	MOUNTING PACK (THRU BOLTING, 1-3/4" DOOR)	68-0879	END CAP
68-2280	MOUNTING PACK (THRU BOLTING, 2-1/4" DOOR)	68-0406	CHASSIS COVER
97-2953	STS SCREW PACK (1-3/4" DOOR)	97-2954	STS SCREW PACK (2-1/4" DOOR)
97-2955	PTB SCREW PACK (1-3/4" DOOR)	97-2966	PTB SCREW PACK (2-1/4" DOOR)
68-2596	HEX KEY DOGGING KIT	816	CYLINDER DOGGING KIT
01-4451	THRU BOLT 1/4"-20 X 2-3/8"	01-4372	THRU BOLT 1/4"-20 X 2 5/8"
01-4373	THRU BOLT 1/4"-20 X 2-7/8"	98-0028	LATCH BOLT SPRING

Copyright © 2006, 2008, 2009, 2012 Sargent Manufacturing Company, an ASSA ABLOY Group company. All rights reserved. Reproduction in whole or in part without the express written permission of Sargent Manufacturing Company is prohibited.

A6770P

FOR ADDITIONAL INFORMATION
CALL SARGENT CUSTOMER SERVICE AT:
1-800-727-5477

ASSA ABLOY, the global leader
in door opening solutions


FIRST

TOOLS REQUIRED FOR INSTALLATION:

1. MEASURING TAPE
2. POWER DRILL
3. DRILL BITS: 3/32", 11/32", 3/8", 3/4", #8, #25
4. TAPS: #10-24, 1/4-20
5. HACK SAW OR ANY POWER CUTTER (FOR CUTTING RAILS IF NECESSARY)
6. SCREWDRIVERS: PHILLIPS #2 AND #3
7. LEVEL


FOR RETROFIT DOOR PREPARATION, THE FOLLOWING MAY BE REQUIRED:
HOLE SAWS: 1-1/8", 1-3/8", 2-1/8"

A MARK VERTICAL AND HORIZONTAL REFERENCE LINES ON THE DOOR

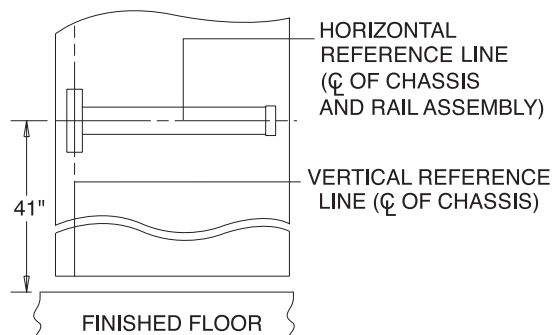


B IDENTIFY TYPE OF INSTALLATION TO DETERMINE LOCATION OF VERTICAL REFERENCE LINE


PANIC EXIT DEVICE AND FIRE EXIT DEVICE (12- PREFIX)

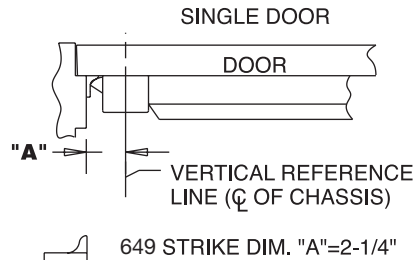

DOUBLE DOOR WITH 980 MULLION AND 649 STRIKES

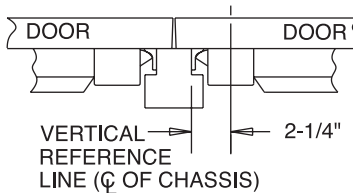


DOUBLE DOOR WITH 12-980 MULLION AND 649 STRIKES

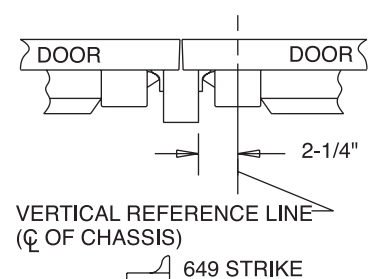

SECOND


PREPARE DOOR

PLASTIC TEMPLATE (RECOMMENDED METHOD): INSTALL STRIKE FIRST, THEN EXIT DEVICE

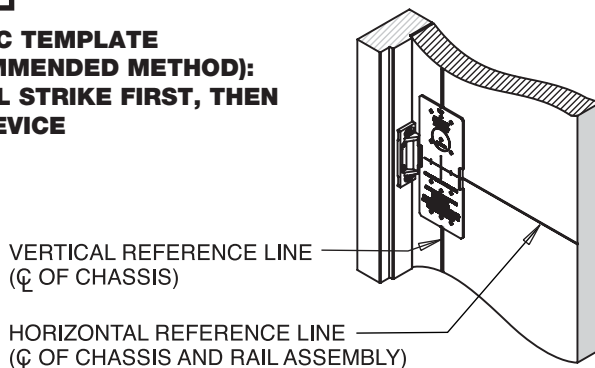

1. APPLY PLASTIC TEMPLATE ON DOOR USING REFERENCE LINES AND 649 STRIKE
2. MARK THEN SPOT AND DRILL HOLES


PAPER TEMPLATE: INSTALL EXIT DEVICE FIRST, THEN STRIKE

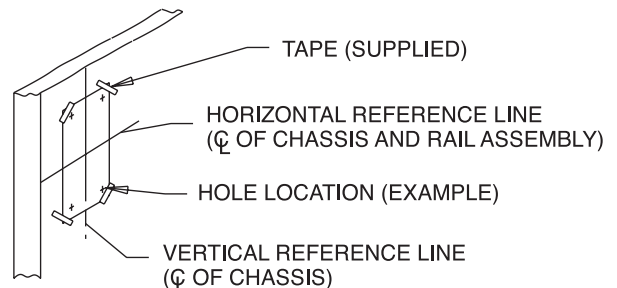

1. APPLY PROPER TEMPLATE ON DOOR USING REFERENCE LINES. ATTACH IT WITH SUPPLIED TAPE
2. SPOT AND DRILL HOLES

FOR PANIC EXIT DEVICE:

ATTACH STRIKE WITH TWO (2) OUTER SCREWS AND TWO (2) STAR WASHERS PLACED UNDER THE STRIKE. ADJUST FOR PROPER POSITION AND TIGHTEN SCREWS SECURELY.

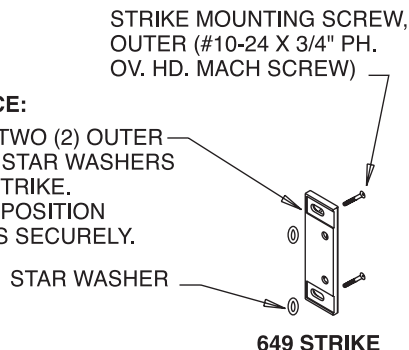


649 STRIKE

STRIKE MOUNTING SCREW, OUTER (#10-24 X 3/4" PH. OV. HD. MACH SCREW)

FOR FIRE EXIT DEVICE:

ATTACH STRIKE WITH TWO (2) OUTER SCREWS AND ADJUST FOR PROPER POSITION. INSTALL TWO (2) INNER SCREWS AND TIGHTEN ALL SCREWS SECURELY.

STRIKE MOUNTING SCREW, INNER (#10-24 X 3/4" PH. RD. HD. MACH SCREW)

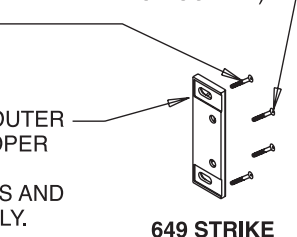

649 STRIKE


SARGENT®**ASSA ABLOY**

ET TRIM APPLICATION
(SEE INSTRUCTION SHEET AND TEMPLATE PACKED WITH TRIM)


- A. ATTACH CHASSIS TO DOOR WITH (4) CHASSIS MOUNTING SCREWS (#10-24 X 3/4" PH. FL. HD. MACH. SCREWS) IN LOCATION SHOWN

(2) 1/4"-20 X 5/8" FLAT HEAD MACHINE SCREWS IN LOCATIONS SHOWN

- B. ATTACH ET CONTROL USING THE TWO (2) 1/4"-20 X 2-3/8" PH. FL. HD. MACH. SCREWS THROUGH THE APPROPRIATE MOUNTING HOLES IN CHASSIS

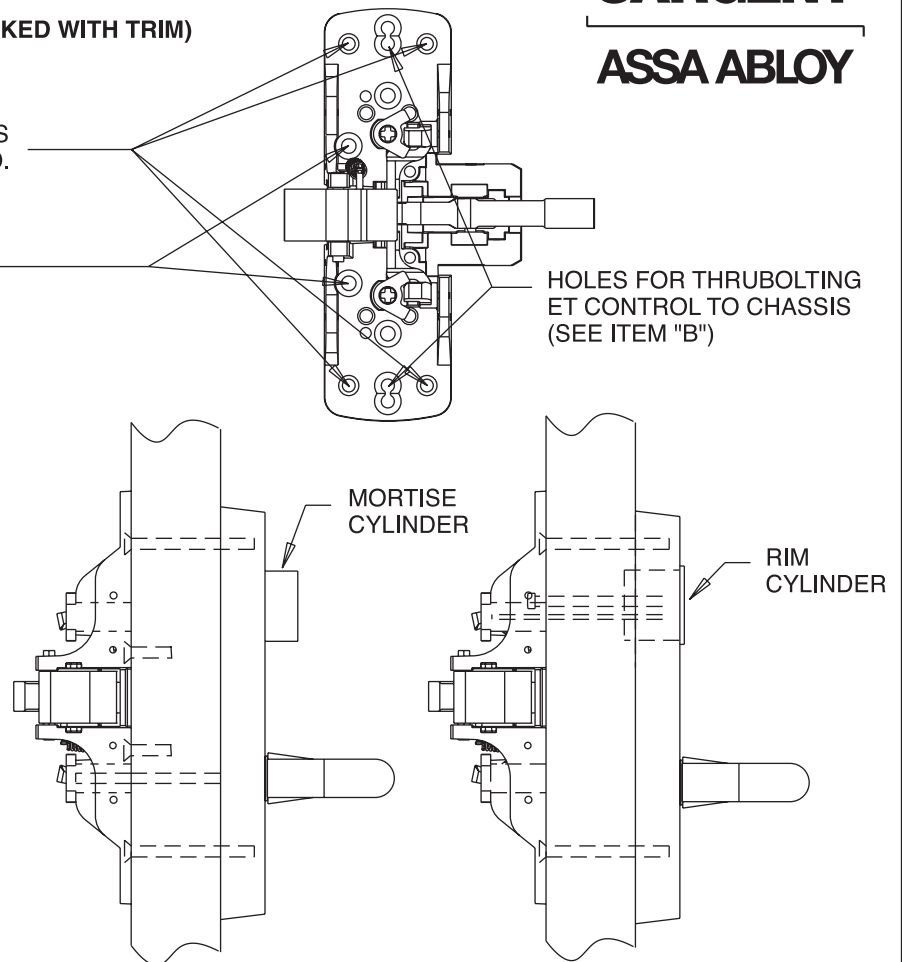

LL LEVER HANDLE TRIM REVERSIBLE (FOR 8888 AND 12-8888 ONLY)
(SEE INSTRUCTION SHEET AND TEMPLATE PACKED WITH TRIM)


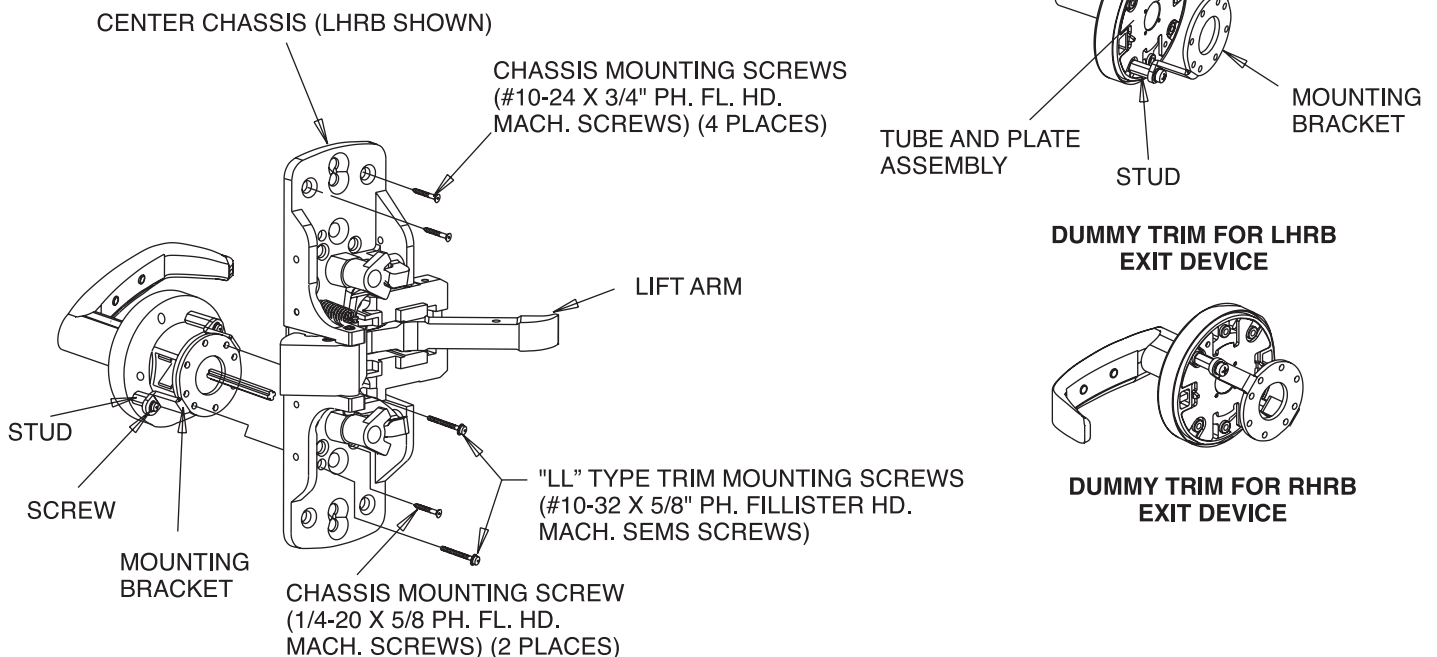


THIRD (continuation)

PTB, FLL, FLW AND MAL PULL TRIM (PREP DOOR FOR TRIM TO BE USED)



1. ATTACH CHASSIS TO THE SURFACE OF DOOR WITH (4) #10-24 x 3/4" SCREWS
2. POSITION TRIM ON DOOR AND THROUGH-BOLT TRIM TO CHASSIS WITH (2) 1/4-20 x 5/8" LONG SCREWS
3. USING THE CUP WASHER, THROUGH-BOLT BOTTOM OF TRIM

SARGENT
ASSA ABLOY

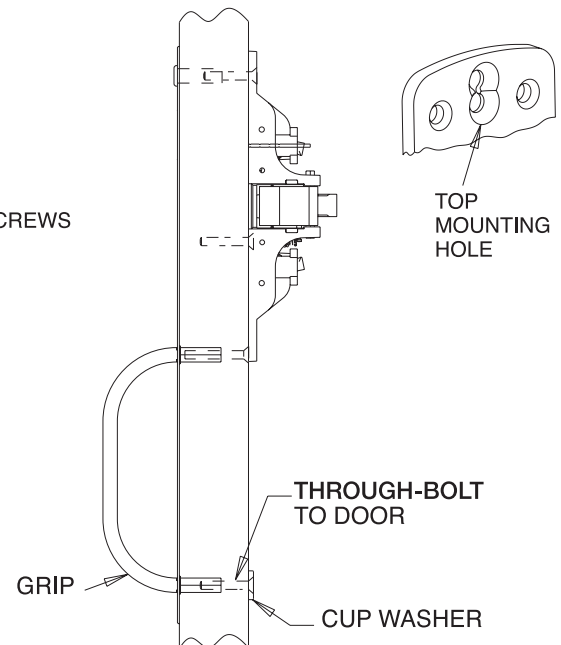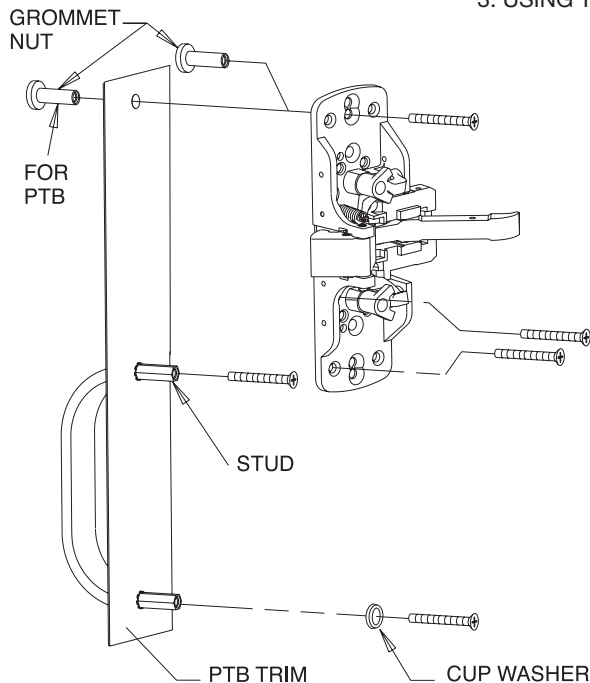

PSB, FSL, FSW, MSL AND STS PULL TRIM BY CYLINDER APPLICATION

1. MOUNT CHASSIS TO DOOR WITH (6) CHASSIS MOUNTING SCREWS.
2. THROUGH-BOLT GROMMET NUT TO TOP CHASSIS MOUNTING HOLE.
3. THROUGH-BOLT TOP STUD TO BOTTOM CHASSIS MOUNTING HOLE.
4. THROUGH-BOLT BOTTOM STUD TO BOTTOM MOUNTING HOLE.
5. THROUGH-BOLT SARGENT CYLINDER TO CHASSIS THRU TRIM.
IF SCREW IS TOO LONG, BREAK OFF AT NOTCHES AS NEEDED.
6. TIGHTEN ALL SCREWS SECURELY.

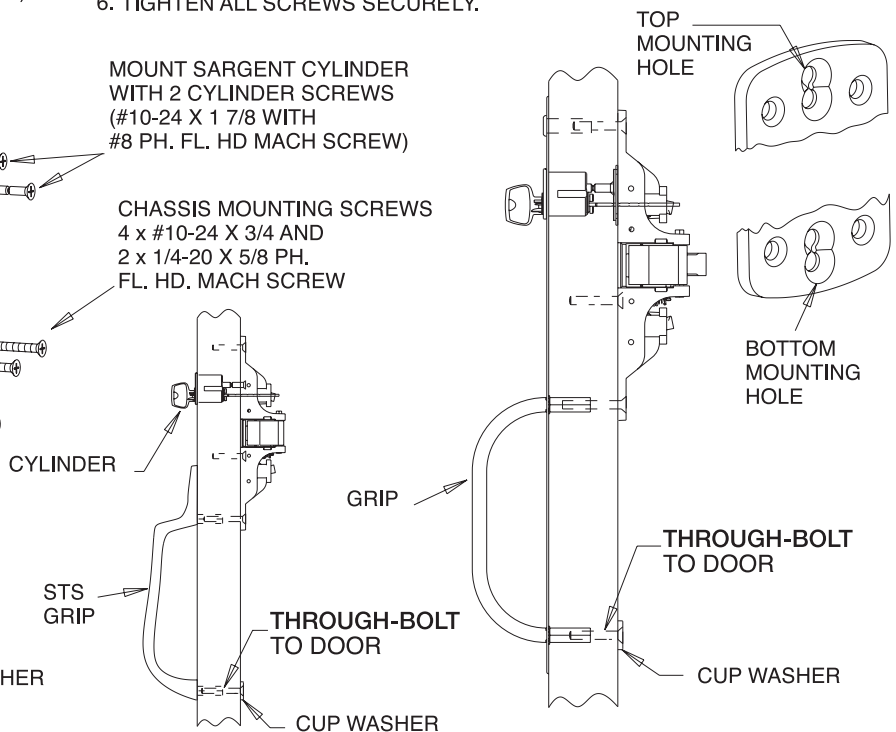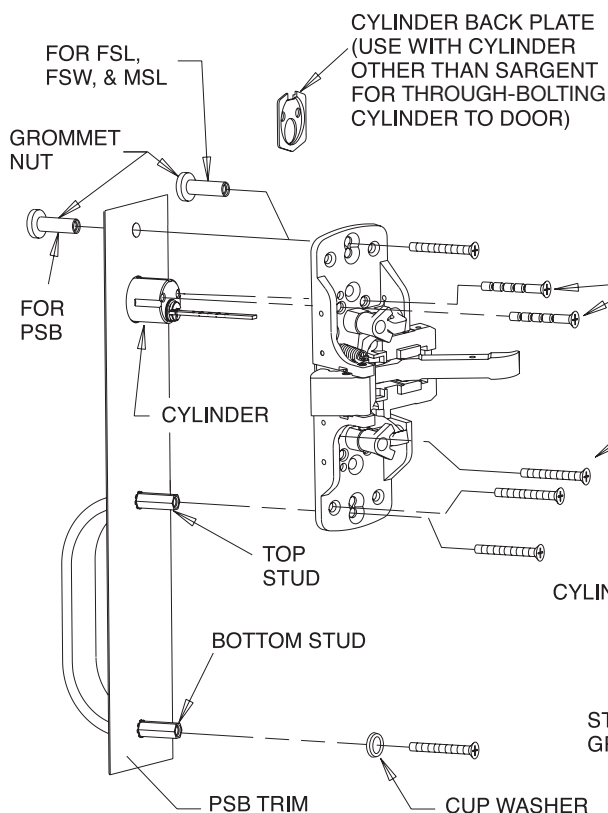

Copyright © 2006, 2008, 2009, 2012 Sargent Manufacturing Company, an ASSA ABLOY Group company. All rights reserved. Reproduction in whole or in part without the express written permission of Sargent Manufacturing Company is prohibited.


A6770P

ASSA ABLOY, the global leader
in door opening solutions

- CHECK BOX LABEL. IF CUTTING IS NOT REQUIRED, PROCEED TO STEP "B".
- IF CUTTING IS REQUIRED, CONTINUE WITH STEP "A".


A DETERMINE CUT OFF DIMENSION "X" BY SUBTRACTING 1-3/4" FROM DIMENSION "Y"

FOR DOORS WITH STILE:
RAIL MUST OVERLAP STILE
BY 1/2" MIN.

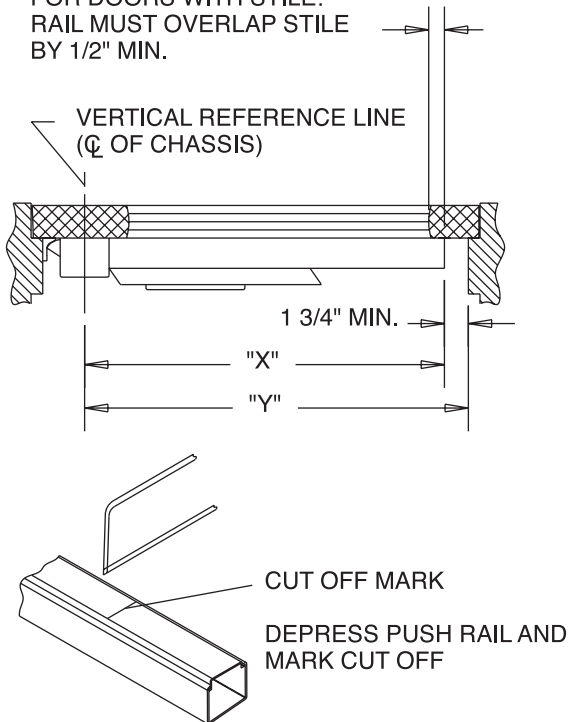

B 1. DEPRESS LIFT ARM INTO RAIL ASSEMBLY AND SLIDE RAIL ONTO CHASSIS.


2. ATTACH RAIL ASSEMBLY TO CHASSIS WITH TWO (2) #8 TRUSS HEAD MACHINE SCREWS. DO NOT TIGHTEN SCREWS.

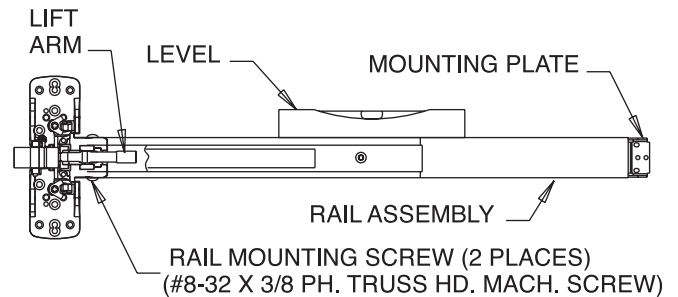

3. LEVEL RAIL.

PLACE MOUNTING PLATE TIGHT AGAINST RAIL
AND ATTACH TO DOOR WITH TWO (2)
#10 ROUND HEAD SCREWS

4. TIGHTEN ALL SCREWS SECURELY.

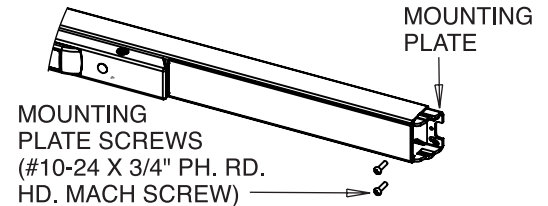


FIFTH

**(-53) LATCH BOLT MONITORING
ADJUSTMENT**

NOTE: THE LATCH BOLT SWITCH WILL COME
PRE-SET FOR THE MOST COMMON APPLICATIONS.
IF THE SENSITIVITY NEEDS TO BE ADJUSTED,
FOLLOW THE STEPS BELOW.

1. LOOSEN SCREW AND NUT
2. ROTATE SWITCH (UP FOR QUICKER
REACTION OR DOWN FOR
SLOWER REACTION).
3. TIGHTEN SCREW AND NUT
4. CHECK OPERATION

NOTE: MAKE SURE SWITCH IS
LOCATED ON THE MOUNTING
POST AND THE SCREW AND
NUT ARE SECURELY FASTENED


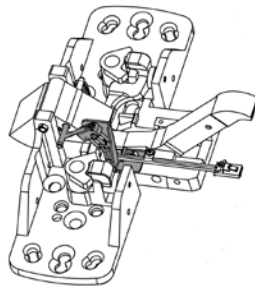


Using your mobile phone, scan this Microsoft® Tag.
Download the free mobile app at <http://gettag.mobi>

SIXTH

APPLY COVERS

ATTACH COVER TO CHASSIS
WITH FOUR (4) COVER
MOUNTING SCREWS
(#8-32 X 5/16 WITH #6 PH.
OV. HD. MACH. SCREW)
TIGHTEN SECURELY

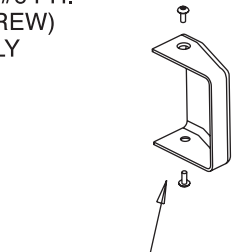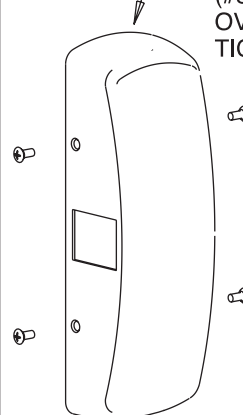

ATTACH END CAP TO
MOUNTING PLATE
WITH TWO (2) COVER
MOUNTING SCREWS
TIGHTEN SECURELY

56- Electric Latch Retraction Exit Devices Installation and Wiring Instructions

With Optional 53- Latchbolt; 55- Request to Exit;
and TL- (SARGuide) Connection Instructions

SARGENT®
ASSA ABLOY

SECTION I: OVERVIEW

1. Description

The Sargent 56- prefix ELR works with 80 Series exit devices to provide remote-controlled latch retraction. It is compatible with the following prefixes:

- 53 - Latchbolt Monitor Switch: The latch monitor provides tamper resistant latch monitoring. The monitor switch is activated when there is physical movement of the latch.
- 55 - Signal Switch (Request to Exit): This signal switch monitors the touch bar position. Touch bar monitoring can be used to detect egress, sound an alarm, send a signal to a remote location, or de-energize an electromagnetic lock.
- TL- (SARGuide): Illuminated touchpad for 80 Series exit devices.

Note: The 56- is also compatible with 16-, HK-, and 12-mechanical configurations.

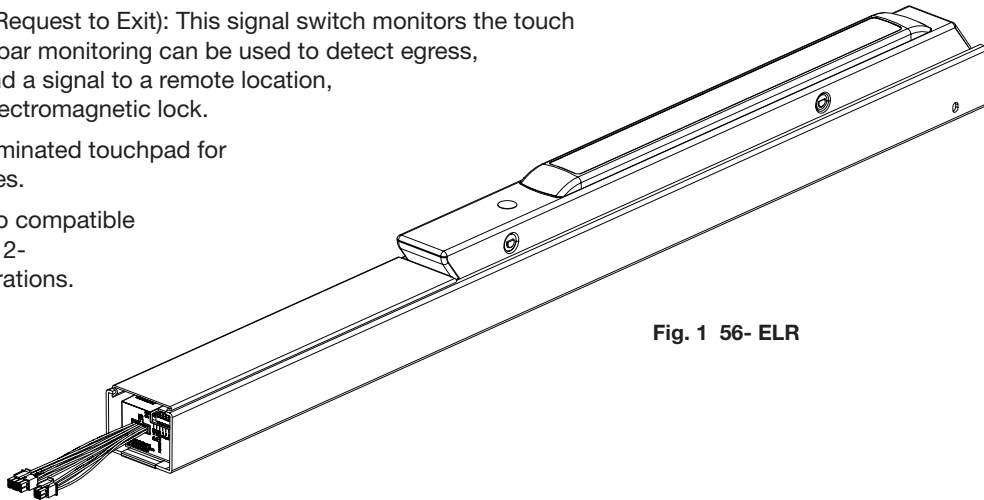


Fig. 1 56- ELR

2. Functions

The 56- ELR can be configured to work in either of two modes:

POWER MODE (see Section II: POWER MODE)

The device is not energized when locked. When electrified, the push rail and latch(es) will retract and remain in the retracted position until power is removed. Power is typically applied through a relay triggered by an access control device.

TIMER MODE (see Section III: TIMER MODE)

The device is always energized and retraction is triggered by a momentary or maintain switch. In **TIMER MODE**:

- When the timer circuit is closed using a **momentary** switch, the device retracts, remains retracted for a set duration, and releases. The duration of the retraction is set through an onboard timer setting.
- When the timer circuit is closed using a **maintain** switch, the device retracts. The device releases when the contact is opened.

3. Important

- Caution: Disconnect all input power before servicing.
- Installer must be a trained and experienced service person.
- Wiring must comply with applicable local electrical codes, ordinances and regulations.
- Cylinder (16-) or "hex-key" (HK-) mechanical dogging CANNOT be used on FIRE RATED DOORS.

4. Installation Notes

- The 56- ELR rail works only with Sargent 80 Series exit devices.
- Always perform mechanical installation using the appropriate installation instructions, prior to electrical wiring.
- If used in conjunction with M56 or R56 kits, follow instructions A7926 prior to using these instructions.
- Earth Ground: Required for electrostatic discharge (ESD) protection, unless already grounded through the metal door and frame.

FOR INSTALLATION ASSISTANCE CONTACT SARGENT • 1-800-810-WIRE (9473) • www.sargentlock.com

56- Electric Latch Retraction Exit Devices Installation and Wiring Instructions

With Optional 53- Latchbolt; 55- Request to Exit;
and TL- (SARGuide) Connection Instructions

5. Hinge Requirements

Application	Without Timer		With Timer	
	Wires	Recommended Hinge	Wires	Recommended Hinge
56-	3 wires	QC8	5 wires	QC12
53- 56-	5 wires	QC8	7 wires	QC12
55- 56-	6 wires	QC8	8 wires	QC12
53- 55- 56-	8 wires	QC8	10 wires	QC12
TL-56-	5 wires	QC12	7 wires	QC12
TL-53- 56-	7 wires	QC12	9 wires	QC12
TL-55- 56-	8 wires	QC12	10 wires	QC12
TL-53- 55- 56-	10 wires	QC12	12 wires	QC12

6. Wire Gauge Chart


Total One-Way Length of Wire Run (ft)	Load Current @ 24VDC							
	1/4A	1/2A	3/4A	*1A	1-1/4A	1-1/2A	2A	3A
100	24	20	18	18	16	16	14	12
150	22	18	16	16	14	14	12	10
200	20	18	16	14	14	12	12	10
250	18	16	14	14	12	12	12	10
300	18	16	14	12	12	12	10	—
400	18	14	12	12	10	10	—	—
500	16	14	12	10	10	—	—	—
750	14	12	10	10	—	—	—	—
1,000	14	10	10	—	—	—	—	—
1,500	12	10	—	—	—	—	—	—

*When calculating voltage drop, use 1A as the recommended current draw for the 56- ELR.

7. Wire Locations and Positions

56- Electric Latch Retraction devices are supplied with one 4-pin and one 8-pin Molex® connector.

Molex connectors allow simple installation using the ASSA ABLOY ElectroLynx® system.

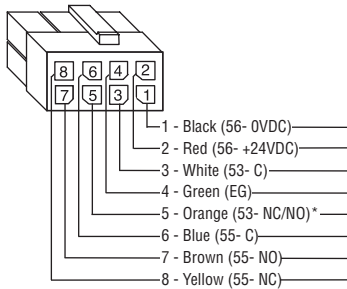

*NO/NC (Normally Open/Normally Closed) is selectable on controller (refer to 53- DIP switch instructions section III, part 5). Factory preset is NO.

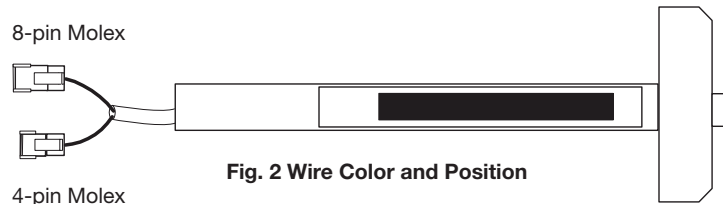
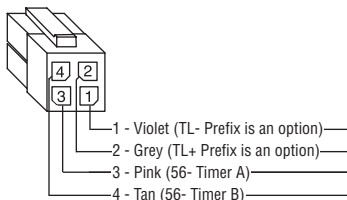


Fig. 2 Wire Color and Position

FOR INSTALLATION ASSISTANCE CONTACT SARGENT • 1-800-810-WIRE (9473) • www.sargentlock.com

56- Electric Latch Retraction Exit Devices Installation and Wiring Instructions

With Optional 53- Latchbolt; 55- Request to Exit;
and TL- (SARGuide) Connection Instructions

SARGENT®
ASSA ABLOY

8. DIP (Dual Inline Package) Switch Settings

DIP Switch assignments are as follows, starting from left:

- 1: Closed (Switch set to **ON**) when selecting 53- **NC** (Normally Closed) contact.
- 2: Closed (Switch set to **ON**) when selecting 53- **NO** (Normally Open) contact.
- NOTE: Only 1 or 2 should be closed at one time, not both.
- 3: Closed when bypassing external trigger, i. e., **Power Mode**.
- 4, 5, 6: Select software options, allows up to 8 **Time/Delay** settings (refer to **TIMER MODE**, Section III, part 5).

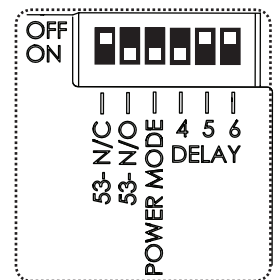
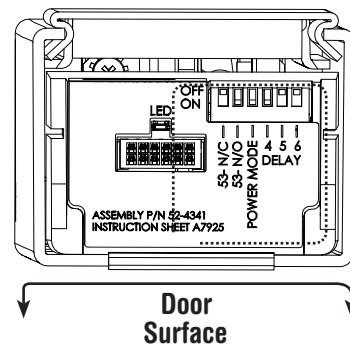


Fig. 3 DIP Switch Settings
(Factory Default Shown)


Default Setting: 53- **NO** (Normally Open) and **POWER MODE** set to **ON**.

9. ElectroLynx Wiring System

IMPORTANT: ElectroLynx connectors plug and lock together in only one way.

Do NOT force connectors together.

Fig. 4 ElectroLynx Connections

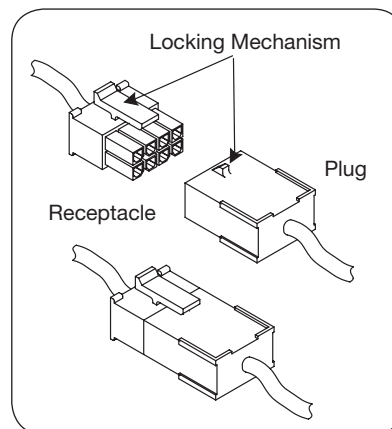

Hardwiring Made Easy®



McKinney QC12 Hinge
(available direct from McKinney)

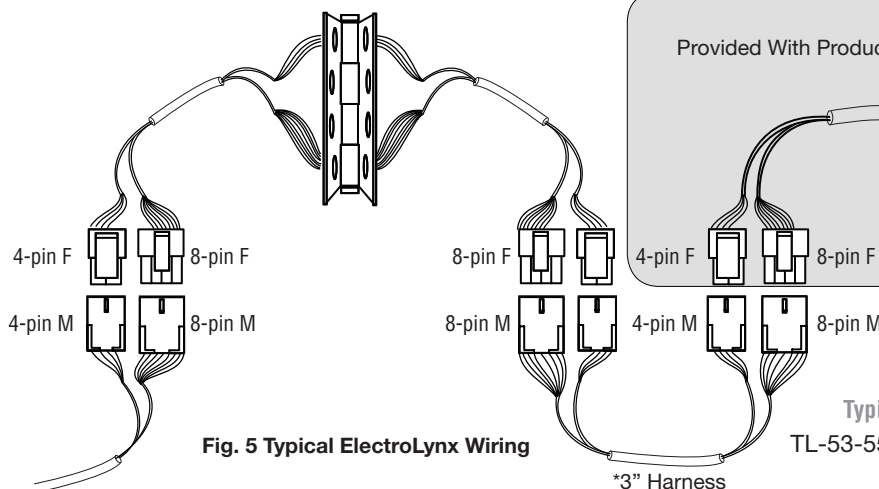


Fig. 5 Typical ElectroLynx Wiring

Typical ElectroLynx Wiring Harness Connections
TL-53-55-56- wired in **TIMER MODE** requires all 12 wires.

Note: *The three inch connector is not included with the product, door, or hinge and must be ordered separately (P/N available in POWER MODE Wiring section).

FOR INSTALLATION ASSISTANCE CONTACT SARGENT • 1-800-810-WIRE (9473) • www.sargentlock.com

ASSA ABLOY, the global leader in door opening solutions

A7925E

3

56- Electric Latch Retraction Exit Devices Installation and Wiring Instructions

With Optional 53- Latchbolt; 55- Request to Exit;
and TL- (SARGuide) Connection Instructions

SECTION II: POWER MODE

In this configuration, the device is not energized when locked. When energized with a 24 volt input, the push rail and latch(es) will retract and remain in the retracted position until power is removed. Power is typically applied through a relay triggered by an access control device.

For installations using the onboard timer circuit, refer to SECTION III: **TIMER MODE**.

1. POWER MODE Installation Instructions

How it works: Rail retracts when power is applied and releases when power is removed.

1. Mount 80- Series exit device using mechanical installation instruction sheet(s) provided.

Note: Ensure proper mechanical function before attempting electrical retraction:

- Verify the push rail can be fully depressed and the latch is fully retracted.
- On vertical rod exit devices, verify the latchbolts do not enter hold-back position until the push rail is fully depressed.
- Adjust device mechanically, as required, before applying power.

2. Connect the ElectroLynx harness in the door (Fig. 8 ElectroLynx **POWER MODE** Wiring):

- a. Plug the 8-pin ElectroLynx connector from the rail into the 3" ElectroLynx harness or splice into non-ElectroLynx harness (Fig. 10 Non-ElectroLynx **POWER MODE** Wiring).
- b. Feed the 3" harness through the 1" hole in the door and secure the rail to the door using the mounting bracket and two supplied screws (Fig. 7 **POWER MODE** Installation Diagram).

Note: Do not install the end cap until electrical operation is verified in order to confirm LED signalling.
Do not discard the end cap and hardware.

3. Ensure DIP switch (position 3) enables **POWER MODE** (Fig. 6).
4. Connect the ElectroLynx harness to the hinge and secure the electric hinge to door.

Notes: Make sure no wires are pinched or damaged in the process.

Refer to detailed wiring instructions under **POWER MODE** wiring.

4. Apply 24V according to 56- input requirements (below):

Confirm that the LED is blinking, that the system fully unlocks, and that all bolts clear the strikes. Troubleshoot the device if issues are observed using the steps outlined at the end of the **POWER MODE** section.

5. Store excess wiring under end cap and assemble with provided screws. Avoid pinching wires.

56- Input Requirements

Voltage: 24VDC

- Filtered and regulated power supply
- Motor operating current: 600mA
- Motor hold current: 250mA

	55- REX	53- LATCH BOLT
Contact Rating (Resistive)	300mA @ 30VDC	2A @ 30VDC
Contact Resistance	150m Ω	30m Ω

Note: Earth Ground is required for Electrostatic Discharge (ESD) protection unless the metal door and frame are already earth grounded; otherwise, earth ground wiring is required at pin 4 (Fig. 8 ElectroLynx **POWER MODE** Wiring).

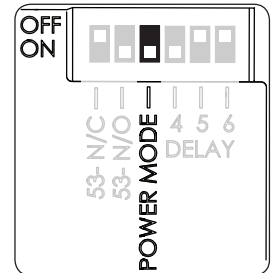


Fig. 6 DIP Switch Setting for POWER MODE Installation

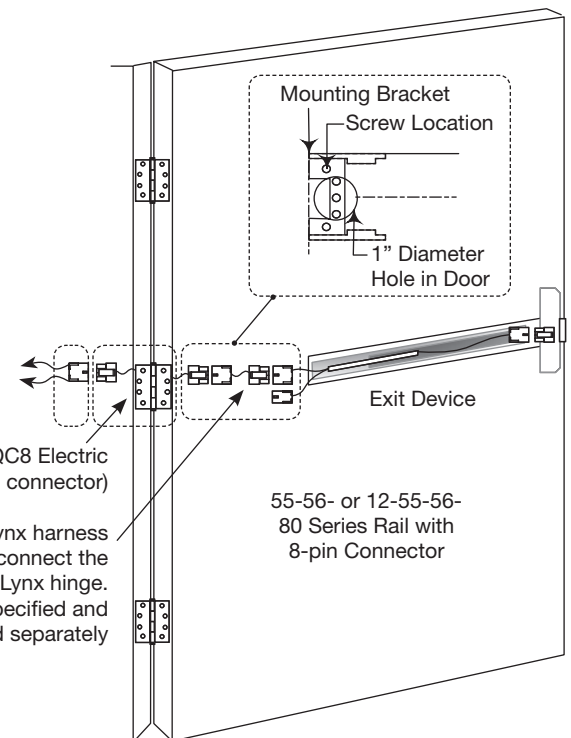


Fig. 7 POWER MODE Installation

56- Electric Latch Retraction Exit Devices Installation and Wiring Instructions

With Optional 53- Latchbolt; 55- Request to Exit;
and TL- (SARGuide) Connection Instructions

SARGENT®
ASSA ABLOY

2. POWER MODE Wiring

ElectroLynx Opening Installation

This is the simplest installation method, requiring the installer to plug the ElectroLynx connectors from the exit device to the harness to the hinge and then to the pigtail, which is connected to the access control system.

Requirements

- 56- Exit device
- 3" ElectroLynx connector harness (not supplied with 56- device)
- McKinney QC ElectroLynx hinge (type of hinge depends on the application)
- ElectroLynx door

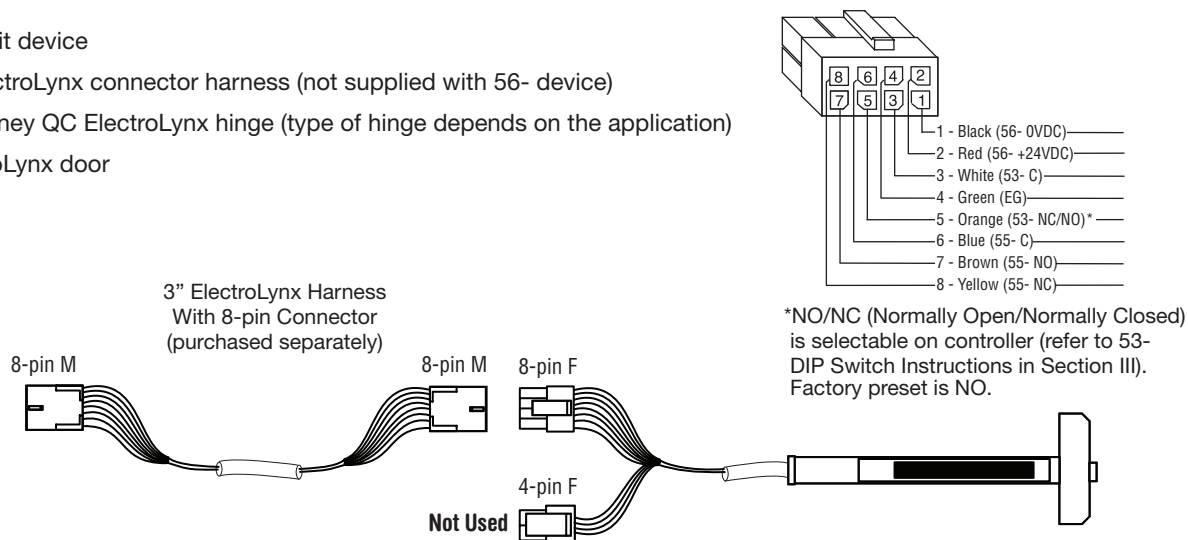


Fig. 8 ElectroLynx POWER MODE Wiring

Non-ElectroLynx Opening Installation

Standard door with standard electric hinge: Molex connectors with flying leads can be purchased separately (Fig. 9).

	MOLEX BOTH ENDS	MOLEX TO PINS
3 INCH	QC-C003	QC-C003P
6 INCH	QC-C006	QC-C006P
12 INCH	QC-C012	QC-C012P

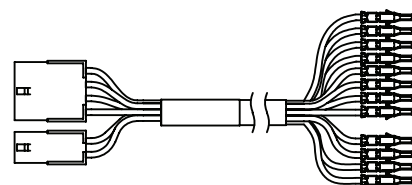


Fig. 9 Molex with 12-pin Connector Pinned

To identify part numbers and order harness(es), visit the McKinney website, www.mckinneyhinge.com, and search the catalog for ElectroLynx.

If Molex pinned connectors are not available, remove the ElectroLynx connector from the 56- Exit Device and wire nut the 56- wires to the wires from the electric hinge (color coordinating wire colors is recommended).

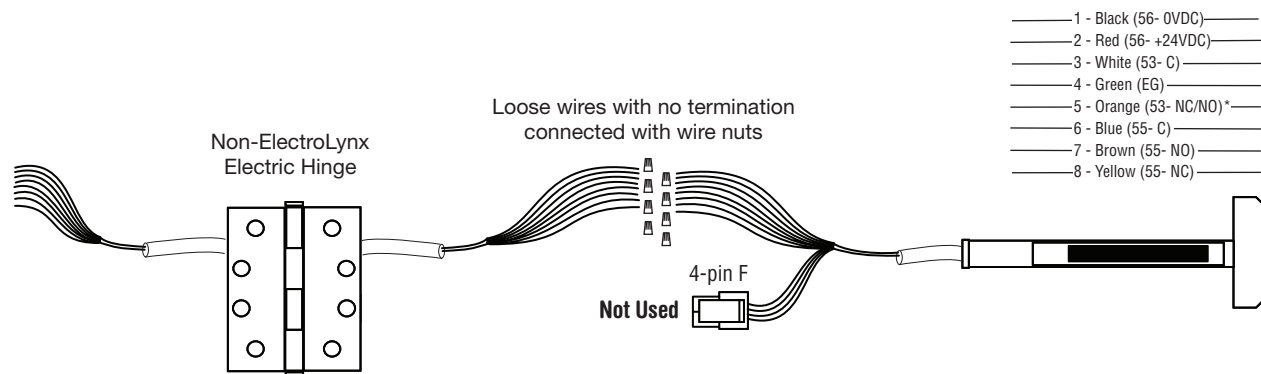


Fig. 10 Non-ElectroLynx POWER MODE Wiring
56- Wires with ElectroLynx Connector Removed

56- Electric Latch Retraction Exit Devices Installation and Wiring Instructions

With Optional 53- Latchbolt; 55- Request to Exit;
and TL- (SARGuide) Connection Instructions

3. POWER MODE Typical Wiring

For use when wiring in **POWER MODE**.

Notes:

- Onboard timer will not function in **POWER MODE**. Add external time delay if necessary.
- The switch is wired between the power supply and the load. Do not cycle the power supply.

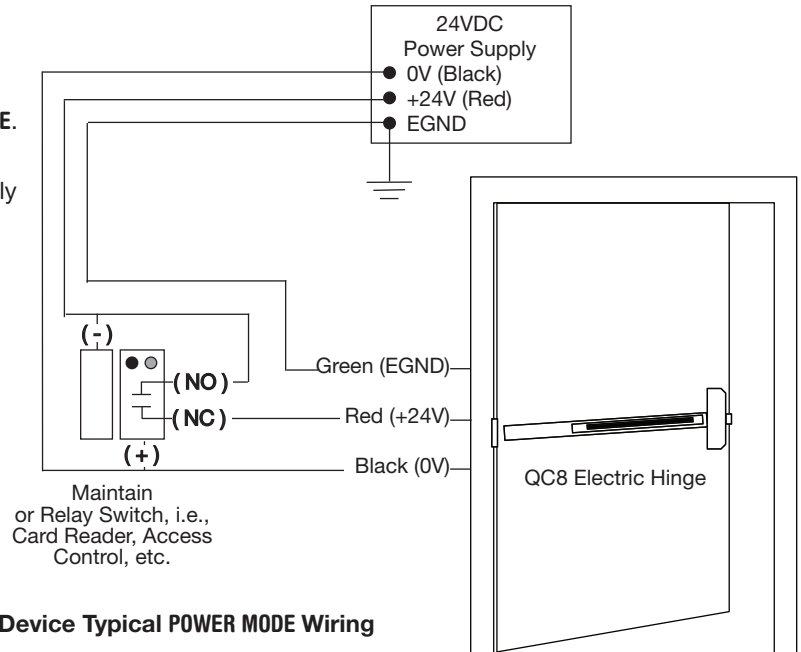


Fig. 11 56- 80 Series Exit Device Typical **POWER MODE** Wiring

4. Configuration Instructions DIP Switch Settings (53-)

For 56- applications using the optional 53- latchbolt monitor switch (53-56-), pin 5 of the 8-pin ElectroLynx connector will be either a NO contact or NC contact depending on the position of the DIP switches on the motor controller faceplate.



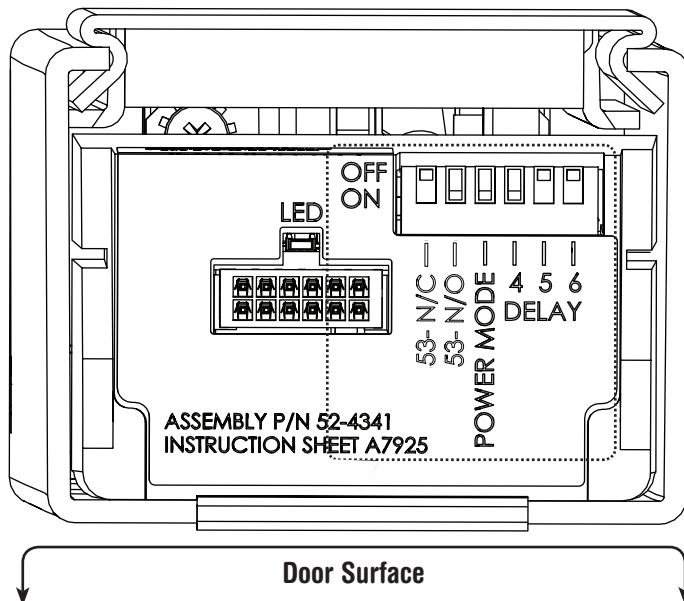


Fig. 12 DIP Switch Setting for 53- Latch Bolt Monitoring NO (Default) Shown

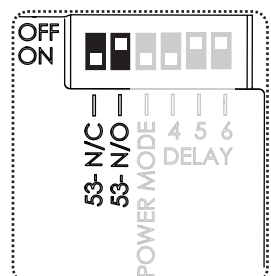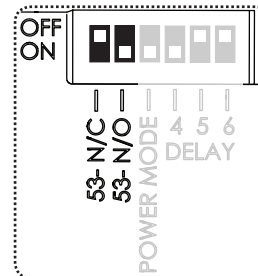

56- Electric Latch Retraction Exit Devices Installation and Wiring Instructions

With Optional 53- Latchbolt; 55- Request to Exit;
and TL- (SARGuide) Connection Instructions

SARGENT®
ASSA ABLOY

5. LED Signalling Chart

SIGNAL	CAUSE	TROUBLESHOOTING
Dark / Unlit	Controller microprocessor is not active	Confirm connections and incoming power
Steady Flashing	Normal operation	Check that POWER MODE switch is set
Solid Light	Input voltage is dropping out of operating range	Check wire run and power supply output
2 Flashes Followed by Pause	Retractor sensor problem	Call 800-810-WIRE for assistance

6. POWER MODE Troubleshooting

Prior to electrical troubleshooting, confirm that the mechanical system properly functions; i.e., that the push bar fully retracts all latches and the door opens freely. Refer to applicable Sargent 80 Series Exit Device product instruction sheet to correct mechanical installation issues.

IMPORTANT: *ALWAYS disconnect power before making any mechanical adjustments to the system.

The push rail does not move when 24V input is applied:
<ul style="list-style-type: none">o Check inputs to confirm proper voltage and wiring orientation (Fig. 6 ElectroLynx POWER MODE Installation).o Remove end cap from rail and confirm that LED is blinking steadily when power is applied. If not, refer to LED signaling. Note: When configured in POWER MODE, power is released to lock the device (LED will not blink when power is released).o Confirm DIP switch position 3 is set to ON.
The push rail does not fully retract or push rail retracts completely and holds but does not open door
<ul style="list-style-type: none">o *Verify mechanical installation and correct as necessary:<ul style="list-style-type: none">- Is excessive force required to depress the push bar?- Are latches fully clearing the strikes when mechanically cycled?
The push rail retracts and unlocks electrically but does not relock:
<ul style="list-style-type: none">o Physically disconnect power from rail and confirm that input is off.o *Check for mechanical interference (e.g., warped door, lack of shims, misalignment of rail, etc.).o *Was a motor kit (M56) installed? Verify the rail assembly.
Rail behaves abnormally (multiple cycles, clicking, delayed retraction, etc.):
<ul style="list-style-type: none">o Remove end cap from rail and confirm that LED is blinking steadily when power is applied. If not, refer to LED signaling. Note: When configured in POWER MODE, power is released to lock the device (LED will not blink when power is released).
For applications using automatic operator(s): Door(s) fail to unlock before doors begin to open:
<ul style="list-style-type: none">o Adjust timing of operator to allow 750ms for the rail to fully retract.
53- switch wiring: The design requires normally open functionality and the circuit is normally closed (or vice versa),
There is only a two-wire input for the 53- circuit. Normally open or normally closed configuration is set by toggling the DIP switches on the controller bracket to the required position (refer to chart in section 4).
For additional installation assistance, please contact 1-800-810-WIRE (9473). When calling, please provide the following information to improve our service (provide what you can):
<ul style="list-style-type: none">o Your name and contact number.o Sargent 80 Series Exit Device product type (e.g. 55- 56- 8810).o Location and identification of the affected opening (e.g., site, building, and door number).o Sargent order number (located on product box), if available.o Power supply manufacturer and rated output (i.e., voltage and current).o Method of operation (e.g., POWER MODE).o The number of devices connected to the power supply.o Symptoms of problem (i.e., observed behavior).

FOR INSTALLATION ASSISTANCE CONTACT SARGENT • 1-800-810-WIRE (9473) • www.sargentlock.com

56- Electric Latch Retraction Exit Devices Installation and Wiring Instructions

With Optional 53- Latchbolt; 55- Request to Exit;
and TL- (SARGuide) Connection Instructions

SECTION III: TIMER MODE

In this configuration, the device is always energized with a 24 volt input, and a timer circuit is opened or closed to control rail retraction. A **momentary** or **maintain** switch is typically used to perform this operation.

For installations where the power input is cycled to retract the device, refer to SECTION II: **POWER MODE**.

1. TIMER MODE Installation Instructions

How it works: Rail retracts when timer input circuit is closed.

1. Mount 80- Series exit device using mechanical installation instruction sheet(s) provided.

Note: Ensure proper mechanical function before attempting electrical retraction:

- Verify the push rail can be fully depressed and the latch is fully retracted.
- On vertical rod exit devices, verify that the latchbolts do not enter hold-back position until the push rail is fully depressed.
- Adjust device mechanically, as required, before applying power.

2. Ensure DIP Switch switch (position 3) disables **POWER MODE** (Fig. 16). Set to **OFF** to disable.

3. Connect the ElectroLynx harness in the door (Fig. 17 ElectroLynx **TIMER MODE** Installation):

- a. Plug the 8-pin and 4-pin ElectroLynx connectors from the rail into the 3" ElectroLynx harness or splice into a non-ElectroLynx harness (Fig. 17 **TIMER MODE** Installation).
- b. Feed the 3" harness through the 1" hole in the door and secure the rail to the door using the mounting bracket and two supplied screws (Fig. 17 **TIMER MODE** Installation).

Note: Do not install the end cap until electrical operation is verified in order to confirm LED signaling.
Do not discard the end cap and hardware.

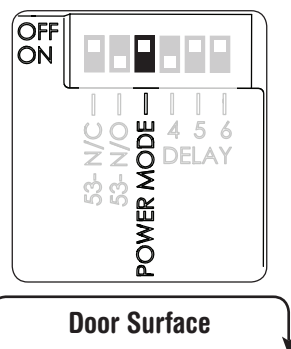


Fig. 14 DIP Switch Setting for TIMER MODE Installation

56- Input Requirements

Voltage: 24VDC

- Filtered and regulated power supply
- Motor operating current: 600mA
- Motor hold current: 250mA

	55- REX	53- LATCH BOLT
Contact Rating (Resistive)	300mA @ 30VDC	2A @ 30VDC
Contact Resistance	150m Ω	30m Ω

Note: Earth Ground is required for Electrostatic Discharge (ESD) protection unless the metal door and frame are already earth grounded; otherwise, earth ground wiring is required at pin 4 (Fig. 18 ElectroLynx **TIMER MODE** Wiring).

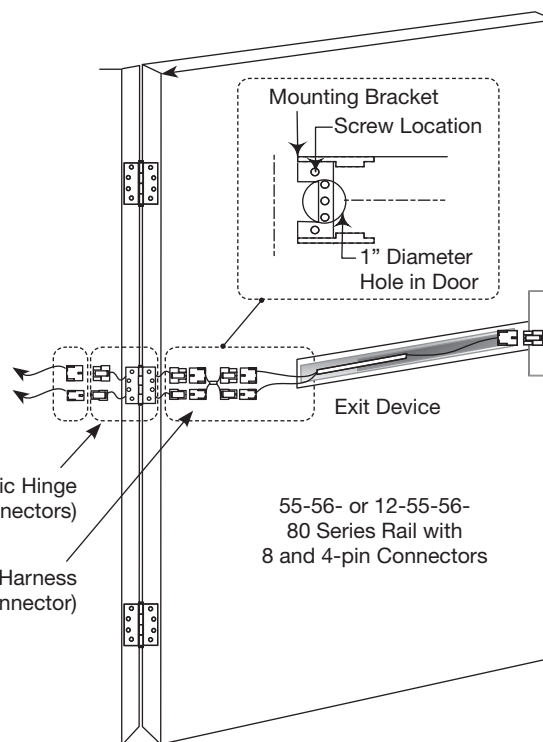


Fig. 15 TIMER MODE Installation

56- Electric Latch Retraction Exit Devices Installation and Wiring Instructions

With Optional 53- Latchbolt; 55- Request to Exit;
and TL- (SARGuide) Connection Instructions

SARGENT®
ASSA ABLOY

1. TIMER MODE Installation Instructions (continued)

4. Connect the ElectroLynx harness to the hinge:
 - a. Plug the door harness's 8-pin and 4-pin connectors into the hinge's ElectroLynx connector.
 - b. Secure the electric hinge to door.

Notes: Make sure no wires are pinched or damaged in the process.

Refer to detailed wiring instructions under **TIMER MODE** wiring.

5. Apply 24V according to 56- input requirements:

Confirm that the LED is blinking and close the timer input circuit to retract the device. When the system retracts electrically, confirm that it fully unlocks and that all bolts clear the strikes. Troubleshoot the device if issues are observed using the steps outlined at the end of the **TIMER MODE** section.

6. Store excess wiring under end cap and assemble with provided screws. Avoid pinching wires.


2. TIMER MODE Wiring

ElectroLynx Opening Installation

This is the simplest installation method, requiring the installer to plug the ElectroLynx connectors from the exit device to the harness to the hinge and then to the pigtail, which is connected to the access control system.

Requirements

- 56- Exit device
- 3" ElectroLynx connector harness (not supplied with 56- device)
- McKinney QC ElectroLynx hinge (type of hinge depends on the application)
- ElectroLynx door

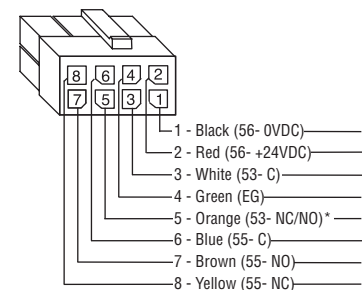

*NO/NC (Normally Open/Normally Closed) is selectable on controller (refer to 53- DIP switch instructions in this section, number 5). Factory preset is NO.

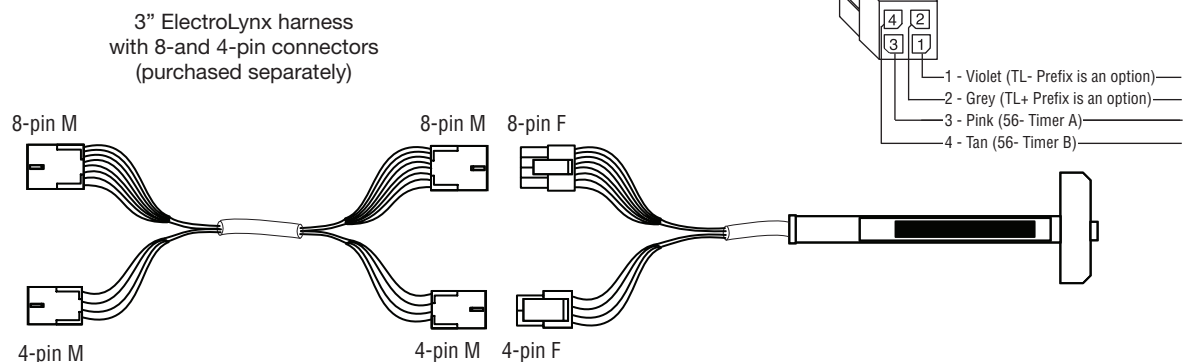


Fig. 16 ElectroLynx TIMER MODE Wiring

56- Electric Latch Retraction Exit Devices Installation and Wiring Instructions

With Optional 53- Latchbolt; 55- Request to Exit;
and TL- (SARGuide) Connection Instructions

2. TIMER MODE Wiring (continued)

Non-ElectroLynx Opening Installation

Standard door with standard electric hinge: Remove the ElectroLynx connector from the 56- Exit Device and wire nut the 56- wires to the wires from the electric hinge (color coordinating wire colors is recommended).

MOLEX BOTH ENDS		MOLEX TO PIN OUT
3 INCH	QC-C003	QC-C003P
6 INCH	QC-C006	QC-C006P
12 INCH	QC-C012	QC-C012P

To identify part numbers and order harness(es), visit the McKinney website, www.mckinneyhinge.com, and search the catalog for ElectroLynx.

- 1 - Black (56- 0VDC)
- 2 - Red (56- +24VDC)
- 3 - White (53- C)
- 4 - Green (EG)
- 5 - Orange (53- NC/NO)*
- 6 - Blue (55- C)
- 7 - Brown (55- NO)
- 8 - Yellow (55- NC)

*NO/NC (Normally Open/Normally Closed) is selectable on controller (refer to 53- DIP switch instructions in this section (III), part 5). Factory preset is NO.

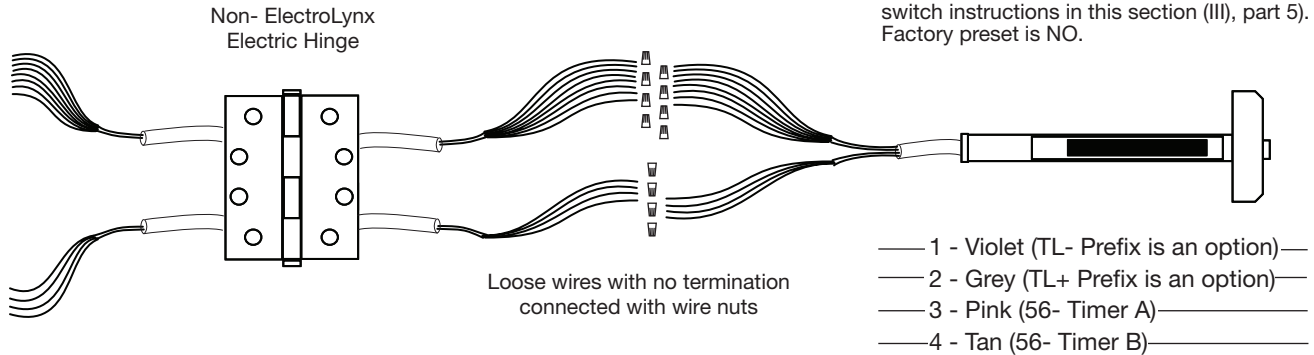


Fig. 17 Non-ElectroLynx TIMER MODE Connection
56- Wires with ElectroLynx Connector Removed

3. TIMER MODE Typical Wiring

For use when wiring in **TIMER MODE** (using the onboard timer).

If more than 20 seconds timed delay is necessary, an external timer delay relay is required (not provided).

Note: 24V supply is constant in **TIMER MODE**.

Refer to settings in Section III, part 5 (Configuration Instructions DIP Switch Settings).

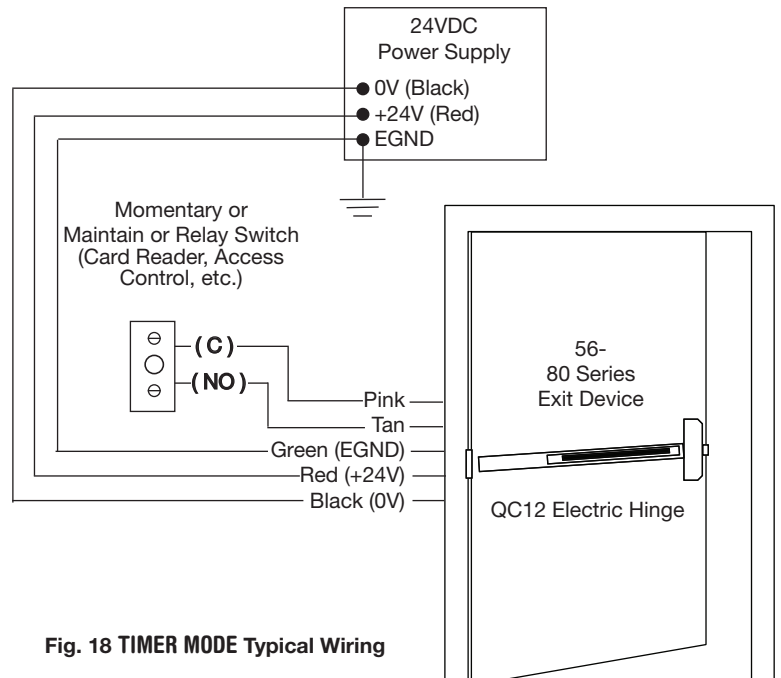


Fig. 18 TIMER MODE Typical Wiring

56- Electric Latch Retraction Exit Devices Installation and Wiring Instructions

With Optional 53- Latchbolt; 55- Request to Exit;
and TL- (SARGuide) Connection Instructions

SARGENT®
ASSA ABLOY

4. TIMER MODE Adjustment (Onboard Timer)

How it works: The 24 volt input is always energized and the system retracts when the timer input circuit is closed.

- When the timer circuit is closed utilizing a **momentary** switch, the device retracts, remains retracted for a set duration, and releases. The duration of the retraction is set using an onboard timer setting (0 - 20 second timer adjustment). The countdown begins when the rail is first retracted.
- When the timer circuit is closed using a **maintain** switch, the device retracts. The device releases when the circuit is re-opened.

Notes:

- Note: 24V supply is constant in **TIMER MODE**. The duration of retraction is determined by whichever is longer: the maintain switch closure or the onboard timer delay.
- If more than 20 seconds delay is necessary (exceeding the maximum setting), an external timer delay relay is required (not provided).

NOTE: Refer to settings in Section III, part 5 (Fig. 19-21) for DIP Switch timer delay settings.

5. Configuration Instructions DIP Switch Settings (for 53- and timer duration)

For 56- applications using the optional 53- latchbolt monitor switch (53-56-), pin 5 of the 8-pin ElectroLynx connector will be either an NO contact or NC contact depending on the position of the DIP switches on the motor controller faceplate.

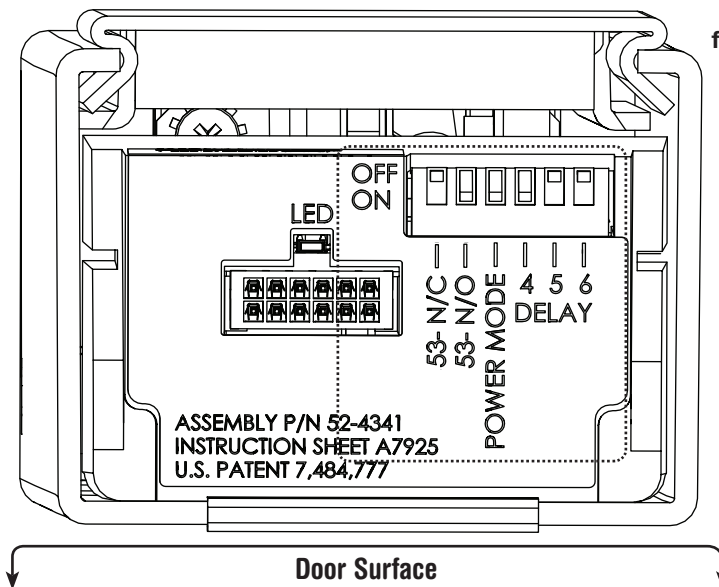


Fig. 19 DIP Switch Setting for 53- Latch Bolt Monitoring

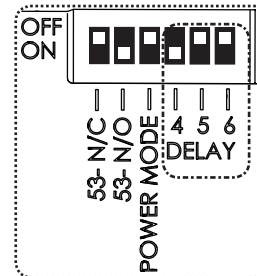


Fig. 20 Alternate DIP Switch Setting (53- NC)


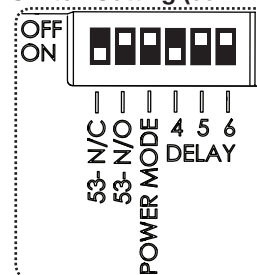


Fig. 21 Timer Delay Settings (Default = 5 Seconds)

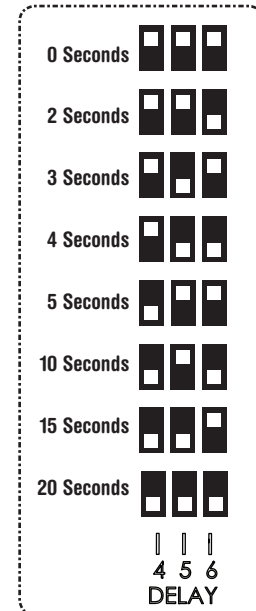

6. LED Signalling Chart

SIGNAL	CAUSE	TROUBLESHOOTING
Dark / Unlit	Controller microprocessor is not active	Confirm connections and incoming power
Steady Flashing	Normal operation	Cycle device by closing the timer circuit
Solid Light	Input voltage is dropping out of operating range	Check wire run and power supply output
2 Flashes Followed by Pause	Sensor or motor issue	Call 800-810-WIRE for assistance

56- Electric Latch Retraction Exit Devices Installation and Wiring Instructions

With Optional 53- Latchbolt; 55- Request to Exit;
and TL- (SARGuide) Connection Instructions

7. TIMER MODE Troubleshooting

Prior to electrical troubleshooting, confirm that the mechanical system properly functions; i.e., that the push bar fully retracts all latches and the door opens freely. Refer to applicable Sargent 80 Series Exit Device product instruction sheet to correct mechanical* installation issues.

IMPORTANT: *ALWAYS disconnect power before making any mechanical adjustments to the system.

The push rail does not move when 24V input is applied:
<ul style="list-style-type: none"> o Check inputs to confirm proper voltage and wiring orientation. o When configured for TIMER MODE, 24V must be constantly applied and the timer circuit must be closed to cycle the device. o Remove end cap from rail and confirm that LED is blinking steadily when power is applied. If not, refer to LED signaling.
The onboard timer duration adjustment is not working:
<ul style="list-style-type: none"> o Remove power when making adjustments to timer delay settings (DIP Switches). o When a momentary signal is applied to the timer circuit, the circuit must be reopened for the timer to function.
The push rail does not fully retract or push rail retracts completely and holds but does not open door:
<ul style="list-style-type: none"> o *Verify mechanical installation and correct as necessary: <ul style="list-style-type: none"> - Is excessive force required to depress the push bar? - Are latches fully clearing the strikes when mechanically cycled?
The push rail retracts electrically but does not release. System does not relock.
<ul style="list-style-type: none"> o Confirm that the TIMER MODE contact is opened (the rail will remain depressed until the contact is opened and the delay has expired). o Physically disconnect power from rail (while electrically retracted) to verify if the issue is mechanical. o *Check for mechanical interference (e.g., warped door, lack of shims, misalignment of rail, etc.). o *Was a motor kit (M56) installed? Verify the rail assembly.
Rail behaves abnormally (multiple cycles, clicking, delayed retraction, etc.):
<ul style="list-style-type: none"> o If a momentary contact is applied to the timer circuit, adjust the onboard timer to a longer duration. o Remove end cap from rail and confirm that LED is blinking steadily when power is applied. If not, refer to LED signaling.
For applications using automatic operator(s): Door(s) fail to unlock before doors begin to open:
<ul style="list-style-type: none"> o Adjust timing of operator to allow 750ms for the rail to fully retract. o If a momentary contact is applied to the timer circuit, adjust the onboard timer to a longer duration to prevent the device from locking prior to operator actuation.
53- switch wiring: The design requires normally open functionality and the circuit is normally closed (or vice versa),
There is only a two-wire input for the 53- circuit. Normally open or normally closed configuration is set by toggling the DIP switches on the controller bracket to the required position (refer to chart in Section III, part 5).
For additional installation assistance, please contact 1-800-810-WIRE (9473). When calling, please provide the following information to improve our service (provide what you can):
<ul style="list-style-type: none"> o Your name and contact number. o Sargent 80 Series Exit Device product type (e.g., 55- 56- 8810). o Location and identification of the affected opening (e.g., site, building, and door number). o SARGENT order number (located on product box), if available. o Power supply manufacturer and rated output (i.e., voltage and current). o Method of operation (e.g., TIMER MODE). o The number of devices connected to the power supply. o Symptoms of problem (i.e., observed behavior).